

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
CGM Ignition Switch Run/ Start Position Circuit Low	B2B0D	This DTC monitors for a CGM Ignition Switch Run/Start Position Circuit Low error as determined by the CGM	The CGM Diagnostic Status Message signal in GMLAN frame \$3CF indicates that the CGM Ignition Switch Run/Start Position Circuit Low DTC has set in the CGM.		General Enable Criteria: Message \$3CF Central Gateway Module	 is being received is present on the bus	Diagnostic runs in 12.5 ms loop	Type B, 2 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
CGM Ignition Switch Run/ Start Position Circuit High	B2B0E	This DTC monitors for a CGM Ignition Switch Run/Start Position Circuit High error as determined by the CGM	The CGM Diagnostic Status Message signal in GMLAN frame \$3CF indicates that the CGM Ignition Switch Run/Start Position Circuit High DTC has set in the CGM.		General Enable Criteria: Message \$3CF Central Gateway Module	 is being received is present on the bus	Diagnostic runs in 12.5 ms loop	Type B, 2 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
CGM Control Module Memory Failure	B2B12	This DTC monitors for a CGM Control Module Memory Failure error as determined by the CGM	The CGM Diagnostic Status Message signal in GMLAN frame \$3CF indicates that the CGM Control Module Memory Failure DTC has set in the CGM.		General Enable Criteria: Message \$3CF Central Gateway Module	 is being received is present on the bus	Diagnostic runs in 12.5 ms loop	Type B, 2 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
CGM Control Module Internal Performance Failure	B2B13	This DTC monitors for a CGM Control Module Internal Performance Failure error as determined by the CGM	The CGM Diagnostic Status Message signal in GMLAN frame \$3CF indicates that the CGM Control Module Internal Performance Failure DTC has set in the CGM.		General Enable Criteria: Message \$3CF Central Gateway Module	 is being received is present on the bus	Diagnostic runs in 12.5 ms loop	Type B, 2 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Intake Camshaft Actuator Solenoid Circuit Open – Bank 1	P0010	Controller specific output driver circuit diagnoses the CAM phaser oil control valve solenoid high sided driver for an open circuit failure when the output is powered on by comparing a voltage measurement to controller specific voltage thresholds.	<p>Voltage measurement outside of controller specific acceptable range during driver on state indicates open circuit failure.</p> <p>Controller specific output driver circuit voltage thresholds are set to meet the following controller specification for an open circuit.</p>	$\geq 200 \text{ K } \Omega$ impedance between signal and controller ground.	<p>P0010 is Enabled</p> <p>System supply voltage</p> <p>Output driver is commanded on</p> <p>Ignition switch is in crank or run position</p>	> 11.00 Volts	<p>20 failures out of 25 samples</p> <p>250 ms /sample, continuous</p>	Type B, 2 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Intake Camshaft System Performance – Bank 1	P0011	Detects a VVT system error by comparing the desired and actual cam positions when VVT is activated.	Camshaft position error [absolute value of (desired position - actual position)] is compared to thresholds to determine if excessive.	(Intake cam Bank 1) Cam Position Error > (P0011_CamPosErrorLimIc1) deg	Intake Cam Phsr Enable System Voltage Engine Running Power Take Off (PTO) active Desired cam position Desired AND Measured cam position Desired cam position variation No Active DTCs	= TRUE > 11.00 Volts = TRUE = FALSE > 0 deg > (P0011_CamPosErrorLimIc1) deg AND < (CalculatedPerfMaxIc1) deg < 3.00 deg for (P0011_P05CC_StablePositionTimeIc1) seconds P0010 P2088 P2089	135.00 failures out of 150.00 samples 100 ms /sample	Type B, 2 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Exhaust Camshaft Actuator Solenoid Circuit Open – Bank 1	P0013	Controller specific output driver circuit diagnoses the CAM phaser oil control valve solenoid high sided driver for an open circuit failure when the output is powered on by comparing a voltage measurement to controller specific voltage thresholds.	<p>Voltage measurement outside of controller specific acceptable range during driver on state indicates open circuit failure.</p> <p>Controller specific output driver circuit voltage thresholds are set to meet the following controller specification for an open circuit.</p>	$\geq 200\text{ K } \Omega$ impedance between signal and controller ground.	<p>P0013 is Enabled</p> <p>System supply voltage</p> <p>Output driver is commanded on</p> <p>Ignition switch is in crank or run position</p>	> 11.00 Volts	<p>20 failures out of 25 samples</p> <p>250 ms /sample, continuous</p>	Type B, 2 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Exhaust Camshaft System Performance – Bank 1	P0014	Detects a VVT system error by comparing the desired and actual cam positions when VVT is activated.	Camshaft position error [absolute value of (desired position - actual position)] is compared to thresholds to determine if excessive.	(Exhaust cam Bank 1) Cam Position Error > (P0014_CamPosErrorLimEc1) deg	Exhaust Cam Phsr Enable System Voltage Engine Running Power Take Off (PTO) active Desired cam position Desired AND Measured cam position Desired cam position variation No Active DTCs	= TRUE > 11.00 Volts = TRUE = FALSE > 0 deg > (P0014_CamPosErrorLimEc1) deg AND < (CalculatedPerfMaxEc1) deg < 3.00 deg for (P0014_P05CE_StablePositionTimeEc1) seconds P0013 P2090 P2091	135.00 failures out of 150.00 samples 100 ms /sample	Type B, 2 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Crankshaft Position (CKP)- Camshaft Position (CMP) Correlation Bank 1 Sensor A	P0016	Detects cam to crank misalignment by monitoring if the cam sensor pulse for bank 1 sensor A occurs during the incorrect crank position, diagnostic passes when the cam sensor pulse is in the expected range	Out of range cam edge measurements in one engine cycle Out of range values are: cam edge measurement OR cam edge measurement from the expected nominal cam position	>= 4 cam edges < -7.9 Crank Degrees > 12.1 Crank Degrees	Crankshaft and camshaft position signals are synchronized Engine is Spinning Cam phaser control indicates the phaser is 'parked' No Active DTCs: Time since last execution of a test IntCamECC_OilPresLow	Test is Enabled CrankSensor_FA P0340, P0341 > 1.0 sec = FALSE	4 cam edge measurements and 1 test sample per engine cycle Test failure is 4 fails in 5 samples Diagnostic failure is 2 failed tests out of 3 If the first test fails, the next test is delayed to confirm the phaser 'parked' This delay time is defined by P0016, P0017, P0018, P0019: Cam Correlation Oil Temperature Threshold For mid-park phasers, an additional delay P0016-0019 Mid-Park Phaser Delay is applied	Type B, 2 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Crankshaft Position (CKP)- Camshaft Position (CMP) Correlation Bank 1 Sensor B	P0017	Detects cam to crank misalignment by monitoring if the cam sensor pulse for bank 1 sensor B occurs during the incorrect crank position, diagnostic passes when the cam sensor pulse is in the expected range	Out of range cam edge measurements in one engine cycle Out of range values are: cam edge measurement OR cam edge measurement from the expected nominal cam position	>= 4 cam edges < -7.9 Crank Degrees > 12.1 Crank Degrees	Crankshaft and camshaft position signals are synchronized Engine is Spinning Cam phaser control indicates the phaser is 'parked' No Active DTCs: Time since last execution of a test ExhCamECC_OilPresLow	Test is Enabled CrankSensor_FA P0365, P0366 > 1.0 sec = FALSE	4 cam edge measurements and 1 test sample per engine cycle Test failure is 4 fails in 5 samples Diagnostic failure is 2 failed tests out of 3 If the first test fails, the next test is delayed to confirm the phaser 'parked' This delay time is defined by P0016, P0017, P0018, P0019: Cam Correlation Oil Temperature Threshold For mid-park phasers, an additional delay P0016-0019 Mid-Park Phaser Delay is applied	Type B, 2 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
O2S Heater Control Circuit Bank 1 Sensor 1	P0030	Controller specific output driver circuit diagnoses the heater output low sided driver for an open circuit failure when the output is powered off by comparing a voltage measurement to controller specific voltage thresholds.	<p>Voltage measurement outside of controller specific acceptable range during driver off state indicates open circuit failure.</p> <p>Controller specific output driver circuit voltage thresholds are set to meet the following controller specification for an open circuit.</p>	<p>$\geq 200\text{ K } \Omega$ impedance between output and controller ground.</p>	<p>Ignition Voltage Engine Speed</p>	<p>= Crank or Run > 11.0 volts > 400 RPM</p>	<p>20 failures out of 25 samples</p> <p>250 ms / sample</p> <p>Continuous</p>	<p>Type B, 2 Trips Note: In certain controllers P0031 may also set</p>

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
O2S Heater Control Circuit Bank1 Sensor1	P0031	Controller specific output driver circuit diagnoses the heater output low sided driver for a short to ground failure when the output is powered off by comparing a voltage measurement to controller specific voltage thresholds.	<p>Voltage measurement outside of controller specific acceptable range during driver off state indicates short to ground failure.</p> <p>Controller specific output driver circuit voltage thresholds are set to meet the following controller specification for a short to ground.</p>	$\leq 0.5 \Omega$ impedance between output and controller ground.	Ignition Voltage Engine Speed	= Crank or Run > 11.0 volts > 400 RPM	<p>20 failures out of 25 samples</p> <p>250 ms / sample</p> <p>Continuous</p>	Type B, 2 Trips Note: In certain controllers P0030 may also set

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
O2S Heater Control Circuit Bank1 Sensor1	P0032	Controller specific output driver circuit diagnoses the heater output low sided driver for a short to power failure when the output is powered on by comparing a voltage measurement to controller specific voltage thresholds.	<p>Voltage measurement outside of controller specific acceptable range during driver on state indicates short to power failure.</p> <p>Controller specific output driver circuit voltage thresholds are set to meet the following controller specification for a short to power.</p>	$\leq 0.5 \Omega$ impedance between output and controller power.	Ignition Voltage Engine Speed	= Crank or Run > 11.0 volts > 400 RPM	<p>20 failures out of 25 samples</p> <p>250 ms / sample</p> <p>Continuous</p>	Type B, 2 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
O2S Heater Control Circuit Bank 1 Sensor 2	P0036	Controller specific output driver circuit diagnoses the heater output low sided driver for an open circuit failure when the output is powered off by comparing a voltage measurement to controller specific voltage thresholds.	<p>Voltage measurement outside of controller specific acceptable range during driver off state indicates open circuit failure.</p> <p>Controller specific output driver circuit voltage thresholds are set to meet the following controller specification for an open circuit.</p>	<p>$\geq 200 \text{ K } \Omega$ impedance between output and controller ground.</p>	<p>Ignition Voltage Engine Speed</p>	<p>= Crank or Run > 11.0 volts > 400 RPM</p>	<p>20 failures out of 25 samples</p> <p>250 ms / sample</p> <p>Continuous</p>	<p>Type B, 2 Trips Note: In certain controllers P0037 may also set</p>

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
O2S Heater Control Circuit Bank1 Sensor2	P0037	Controller specific output driver circuit diagnoses the heater output low sided driver for a short to ground failure when the output is powered off by comparing a voltage measurement to controller specific voltage thresholds.	<p>Voltage measurement outside of controller specific acceptable range during driver off state indicates short to ground failure.</p> <p>Controller specific output driver circuit voltage thresholds are set to meet the following controller specification for a short to ground.</p>	$\leq 0.5 \Omega$ impedance between output and controller ground.	Ignition Voltage Engine Speed	= Crank or Run > 11.0 volts > 400 RPM	<p>20 failures out of 25 samples</p> <p>250 ms / sample</p> <p>Continuous</p>	Type B, 2 Trips Note: In certain controllers P0036 may also set

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
O2S Heater Control Circuit Bank1 Sensor2	P0038	Controller specific output driver circuit diagnoses the heater output low sided driver for a short to power failure when the output is powered on by comparing a voltage measurement to controller specific voltage thresholds.	<p>Voltage measurement outside of controller specific acceptable range during driver on state indicates short to power failure.</p> <p>Controller specific output driver circuit voltage thresholds are set to meet the following controller specification for a short to power.</p>	<p>$\leq 0.5 \Omega$ impedance between output and controller power.</p>	<p>Ignition Voltage Engine Speed</p>	<p>= Crank or Run > 11.0 volts > 400 RPM</p>	<p>20 failures out of 25 samples</p> <p>250 ms / sample</p> <p>Continuous</p>	Type B, 2 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
HO2S Heater Resistance Bank 1 Sensor 1	P0053	<p>Detects an oxygen sensor heater having an incorrect or out of range resistance value. This test calculates the heater's resistance (using voltage and current) at engine start after a longer soak condition and compares it to the expected values for the released sensor.</p> <p>This fault is set if the heater resistance is outside the expected range.</p>	Heater Resistance outside of the expected range of	3.6 < ohms < 10.3	<p>No Active DTC's</p> <p>Coolant – IAT Engine Soak Time Coolant Temp Ignition Voltage Engine Run time</p>	<p>ECT_Sensor_FA P262B IAT_SensorFA < 8.0 °C > 28,800 seconds ≥ -30.0 °C < 32.0 volts < 0.05 seconds</p>	Once per valid cold start	Type B, 2 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
HO2S Heater Resistance Bank 1 Sensor 2) (For Single Bank Exhaust Only	P0054	<p>Detects an oxygen sensor heater having an incorrect or out of range resistance value. This test calculates the heater's resistance (using voltage and current) at engine start after a soak condition and compares it to the expected values for the released sensor.</p> <p>This fault is set if the heater resistance is outside the expected range.</p>	Heater Resistance outside of the expected range of	3.7 < ohms < 10.4	No Active DTC's Coolant – IAT Engine Soak Time Coolant Temp Ignition Voltage Engine Run time	ECT_Sensor_FA P262B IAT_SensorFA < 8.0 °C > 28,800 seconds ≥ -30.0 °C < 32.0 volts < 0.15 seconds	Once per valid cold start	Type B, 2 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
MAP / MAF / Throttle Position Correlation	P0068	Detect when MAP and MAF do not match estimated engine airflow as established by the TPS	<p>Difference between MAP and estimated MAP exceeds threshold (kPa), or P0651 (5 Volt Ref), or P0107 (MAP circuit low), or P0108 (MAP circuit high) have failed this key cycle, then MAP portion of diagnostic fails</p> <p>Absolute difference between MAF and estimated MAF exceed threshold (grams/sec), or P0102 (MAF circuit low), or P0103 (MAF circuit hi) have failed this key cycle, or maximum MAF versus RPM (Table) is greater than or equal to maximum MAF versus battery voltage, then MAF portion of diagnostic fails</p>	<p>Table, f(TPS). See supporting tables: P0068_Delta MAP Threshold f(TPS)</p> <p>Table, f(TPS). See supporting tables: P0068_Delta MAF Threshold f(TPS)</p> <p>Table, f(RPM). See supporting tables: P0068_Maximum MAF f(RPM)</p> <p>Table, f(Volts). See supporting tables: P0068_Maximum MAF f(Volts)</p>	<p>Engine Speed</p> <p>Run/Crank voltage</p>	<p>> 800 RPM</p> <p>> 6.41 Volts</p>	<p>Continuously fail MAP and MAF portions of diagnostic for 0.1875 s</p> <p>Continuous in MAIN processor</p>	Type A, 1 Trips

210BDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Outside Air Temperature (OAT) Sensor Circuit Performance (OAT wired to ECM)	P0071	<p>Detects an Outside Air Temperature (OAT) sensor that is stuck in range. There are two components to the test: an engine off component, and an engine running component.</p> <p>If the engine has been off for a long enough period of time, and the coolant temperature and Intake Air Temperature (IAT) values are similar, then the air temperature values in the engine compartment of the vehicle are considered to have equalized. In this case, the engine off component of the diagnostic can be enabled.</p> <p>If the IAT and the OAT values are similar, then the OAT Performance Diagnostic passes. If the IAT and OAT values are not similar, the diagnostic will continue to monitor the IAT and the OAT as the vehicle starts to move.</p> <p>For applications that have ability to move without engaging the internal combustion</p>	<p>Engine Off:</p> <p>If IAT >= OAT: IAT - OAT</p> <p>If IAT < OAT: OAT - IAT</p> <p>If either of the following conditions are met, this diagnostic will pass:</p> <p>If IAT >= OAT: IAT - OAT</p> <p>If IAT < OAT: OAT - IAT</p>	<p>> 15.0 deg C</p> <p>> 15.0 deg C</p> <p><= 15.0 deg C</p> <p><= 15.0 deg C</p>	<p>Time between current ignition cycle and the last time the engine was running</p> <p>Engine is not running</p> <p>Vehicle Speed</p> <p>Coolant Temperature - IAT</p> <p>IAT - Coolant Temperature</p> <p>OAT-to-IAT engine off equilibrium counter</p> <p>The "OAT-to-IAT engine off equilibrium counter" is a counter that is incremented or decremented based on vehicle speed when the engine is off. When this counter is high enough, the vehicle has reached an equilibrium where IAT and OAT can be compared. The value that is added or subtracted to the counter every 100 msec is contained in table P0071: OAT Performance Drive Equilibrium Engine Off</p> <p>No Active DTCs:</p>	<p>>= 28,800.0 seconds</p> <p>>= 15.5 MPH</p> <p>< 15.0 deg C</p> <p>< 15.0 deg C</p> <p>>= 300.0 counts</p> <p>VehicleSpeedSensor_FA IAT_SensorFA ECT_Sensor_Ckt_FA MAF_SensorFA EngineModeNotRunTimer Error</p>	<p>Executed every 100 msec until a pass or fail decision is made</p>	<p>Type B, 2 Trips</p>

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
		<p>engine, the engine off test will continue. If the vehicle has been moving quickly enough for a long enough period of time, the IAT and OAT values should have reached an equilibrium. This period of time is defined by the "OAT-to-IAT engine off equilibrium counter". The "OAT-to-IAT engine off equilibrium counter" is a counter that is incremented or decremented based on vehicle speed when the engine is off. When this counter is high enough, the vehicle has reached an equilibrium where IAT and OAT can be compared.</p> <p>While the "OAT-to-IAT engine off equilibrium counter" is counting, IAT and OAT are monitored for similarity. If they are similar, the OAT Performance Diagnostic passes. If the counter reaches an equilibrium and the IAT and OAT values are not similar, the OAT Performance Diagnostic will fail.</p>	<p><u>Engine Running:</u></p> <p>If IAT >= OAT: IAT - OAT</p> <p>If IAT < OAT: OAT - IAT</p> <p>If either of the following conditions are met, this diagnostic will pass:</p> <p>If IAT >= OAT: IAT - OAT</p> <p>If IAT < OAT: OAT - IAT</p>	<p>> 15.0 deg C</p> <p>> 15.0 deg C</p> <p><= 15.0 deg C</p> <p><= 15.0 deg C</p>	<p>Time between current ignition cycle and the last time the engine was running</p> <p>Engine is running</p> <p>Vehicle Speed</p> <p>Engine air flow</p> <p>OAT-to-IAT engine running equilibrium counter</p> <p>The "OAT-to-IAT engine running equilibrium counter" is a counter that is incremented or decremented based on vehicle speed and engine air flow when the engine is running. When this counter is high enough, the vehicle has reached an equilibrium where IAT and OAT can be compared. The value that is added or subtracted to the counter every 100 msec is contained in table P0071: OAT Performance Drive Equilibrium Engine Running</p> <p>No Active DTCs:</p>	<p>>= 28,800.0 seconds</p> <p>>= 15.5 MPH</p> <p>>= 10.0 grams/second</p> <p>>= 300.0 counts</p> <p>VehicleSpeedSensor_FA IAT_SensorFA ECT_Sensor_Ckt_FA MAF_SensorFA EngineModeNotRunTimer Error</p>	<p>Executed every 100 msec until a pass or fail decision is made</p>	

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
		<p>If the engine off component of the diagnostic was enabled, but did not make a pass or fail decision, the engine running component will begin executing when the internal combustion engine starts to run.</p> <p>If the vehicle has been moving quickly enough for a long enough period of time, the IAT and OAT values should have reached an equilibrium. This period of time is defined by the "OAT-to-IAT engine running equilibrium counter". The "OAT-to-IAT engine running equilibrium counter" is a counter that is incremented or decremented based on vehicle speed when the engine is running. When this counter is high enough, the vehicle has reached an equilibrium where IAT and OAT can be compared.</p> <p>While the "OAT-to-IAT engine running equilibrium counter" is counting, IAT and OAT are monitored for</p>						

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
		similarity. If they are similar, the OAT Performance Diagnostic passes. If the counter reaches an equilibrium and the IAT and OAT values are not similar, the OAT Performance Diagnostic will fail.						

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Outside Air Temperature (OAT) Sensor Circuit Low	P0072	Detects a continuous short to ground in the Outside Air Temperature (OAT) signal circuit by monitoring the OAT sensor output resistance and failing the diagnostic when the OAT resistance is too low. The OAT sensor is a thermistor in which the resistance across the sensor can be equated to a temperature. A lower resistance is equivalent to a higher temperature.	Raw OAT Input	<= 46 Ohms (~150 deg C)	Continuous		40 failures out of 50 samples 1 sample every 100 msec	Type B, 2 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Outside Air Temperature (OAT) Sensor Circuit High	P0073	Detects a continuous open circuit in the Outside Air Temperature (OAT) signal circuit by monitoring the OAT sensor output resistance and failing the diagnostic when the OAT resistance is too high. The OAT sensor is a thermistor in which the resistance across the sensor can be equated to a temperature. A higher resistance is equivalent to a lower temperature.	Raw OAT Input	$\geq 427,757$ Ohms (~ -60 deg C)	Continuous		40 failures out of 50 samples 1 sample every 100 msec	Type B, 2 Trips

210BDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Outside Air Temperature (OAT) Sensor Intermittent In-Range	P0074	<p>Detects a noisy or erratic signal in the OAT circuit by monitoring the OAT sensor and failing the diagnostic when the OAT signal has a noisier output than is expected.</p> <p>When the value of the OAT signal in °C is determined, a delta is calculated between the current reading and the previous reading. The absolute value of these deltas is summed over a number of OAT readings. The result of this summation is called a "string length".</p> <p>Since the OAT signal is anticipated to be relatively smooth, a string length of a particular magnitude indicates a noisy or erratic OAT signal. The diagnostic will fail if the string length is too high.</p>	<p>String Length</p> <p>Where:</p> <p>"String Length" = sum of "Diff" calculated over</p> <p>And where:</p> <p>"Diff" = ABS(current OAT reading - OAT reading from 100 milliseconds previous)</p>	<p>> 100 deg C</p> <p>10 consecutive OAT readings</p>		Continuous	<p>4 failures out of 5 samples</p> <p>Each sample takes 1.0 seconds</p>	Type B, 2 Trips

210BDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Internal Control Module SIDI High Pressure Pump min/max authority	P0089	This DTC determines when the high pressure pump control has reached to its max or min authority	High Pressure Fuel Pump Delivery Angle OR High Pressure Fuel Pump Delivery Angle	>= 100 ° <= 0 °	High Pressure Pump Performance Diagnostic Enable Battery Voltage Low Side Fuel Pressure Barometric Pressure Inlet Air Temp Fuel Temp Additional Enable Conditions: All must be true (High Pressure Pump is enabled and High Fuel pressure sensor ckt is Not (FA,FP or TFTKO) and High Pressure fuel pump ckt is Not (FA,FP or TFTKO) andCam or Crank Sensor Not FA and IAT,IAT2,ECT Not FA and Low side Fuel Pump Relay ckt Not FA and Estimate fuel rail pressure is valid and Green Engine (In	True >= 11 Volts > 0.250 MPa Enabled when a code clear is not active or not exiting device control Engine is not cranking => 70.0 KPA >= -20.0 degC -12 <= Temp degC <= 126	Windup High/Low 10.00 seconds failures out of 12.50 Seconds samples	Type B, 2 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
					assembly plant) is not enabled and Not if low fuel condition and Low side Fuel Pump is on and Injector Flow Test is not active and Device control commanded pressure is false and Device control pump ckt enabled on is false and Engine movement detected is true andManufacturers enable counter is 0) Flex Fuel Sensor Not FA Ignition voltage out of correlation error(P1682) not active			

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
High Pressure Pump Control Solenoid Enable Low Side Open Circuit	P0090	Controller specific output driver circuit diagnoses High Pressure pump Control Solenoid low sided driver for an open circuit failure when the output is powered off by comparing a voltage measurement to controller specific voltage thresholds	<p>Voltage measurement outside of controller specific acceptable range during driver off state indicates open circuit failure.</p> <p>Controller specific output driver circuit voltage thresholds are set to meet the following controller specification for an open circuit.</p>	>= 200 KOhms impedance between signal and controller ground	<p>Engine Speed</p> <p>Battery Voltage</p>	<p>>= 50 RPM</p> <p>>= 11 Volts</p> <p>Not in pump device control Enabled when a code clear is not active or not exiting device control</p>	<p>20 failures out of 40 samples 100 ms /sample Continuous</p>	Type A, 1 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
High Pressure Pump Control Solenoid Enable Low Side Short to Ground	P0091	Controller specific output driver circuit diagnoses High Pressure pump Control Solenoid low sided driver for a short to ground failure when the output is powered off by comparing a voltage measurement to controller specific voltage thresholds.	<p>Voltage measurement outside of controller specific acceptable range during driver off state indicates short to ground failure.</p> <p>Controller specific output driver circuit voltage thresholds are set to meet the following controller specification for a short to ground.</p>	<= 0.1 Amps between signal and controller ground	<p>Engine Speed</p> <p>Battery Voltage</p>	<p>>= 50 RPM</p> <p>>= 11 Volts</p> <p>Not in pump device control Enabled when a code clear is not active or not exiting device control</p>	<p>20 failures out of 40 samples 100 ms /sample Continuous</p>	Type A, 1 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
High Pressure Pump Cntrl Solenoid Enable Low Side Short to Power	P0092	Controller specific output driver circuit diagnoses diagnoses High Pressure pump Control Solenoid low sided driver for a short to power failure when the output is powered on by comparing a voltage measurement to controller specific voltage thresholds.	<p>Voltage measurement outside of controller specific acceptable range during driver on state indicates short to power failure.</p> <p>Controller specific output driver circuit voltage thresholds are set to meet the following controller specification for a short to power.</p>	<= 1.1 or 15 Amps selectable thershold based on High pressure Pump .	<p>Engine Speed</p> <p>Battery Voltage</p>	<p>>= 50 RPM</p> <p>>= 11 Volts</p> <p>Not in pump device control</p> <p>Enabled when a code clear is not active or not exiting device control</p>	<p>20 failures out of 40 samples</p> <p>100 ms /sample</p> <p>Continuous</p>	Type A, 1 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Intake Air Temperature Sensor 2 Circuit Performance (applications with humidity sensor, but no manifold temperature sensor)	P0096	<p>Detects an Intake Air Temperature 2 (IAT2) sensor value that is stuck in range by comparing the IAT2 sensor value against the IAT and coolant temperature sensor values and failing the diagnostic if the IAT2 value is more different than the IAT and coolant temperature values than is expected. If the engine has been off for a long enough period of time, the air temperature values in the engine compartment of the vehicle are considered to have equalized, and the diagnostic can be enabled.</p> <p>The diagnostic will fail if the IAT and coolant temperature values are similar, and the IAT2 value is not similar to the IAT and coolant temperature values.</p> <p>This diagnostic is executed once per ignition cycle if the enable conditions are met.</p>	<p>ABS(Power Up IAT - Power Up IAT2)</p> <p>AND</p> <p>ABS(Power Up ECT – Power Up IAT2)</p> <p>>=</p> <p>ABS(Power Up ECT – Power Up IAT)</p>	> 30 deg C	<p>Time between current ignition cycle and the last time the engine was running</p> <p>Powertrain Relay Voltage for a time</p> <p>No Active DTCs:</p>	<p>> 28,800 seconds</p> <p>>= 11.0 Volts</p> <p>>= 0.9 seconds</p> <p>PowertrainRelayFault ECT_Sensor_Ckt_FA IAT_SensorCircuitFA HumTempSnsrCktFA EngineModeNotRunTimer Error</p>	Executes once at the beginning of each ignition cycle if enable conditions are met	Type B, 2 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Intake Air Temperature Sensor Circuit 2 Low (applications with humidity)	P0097	<p>Detects a continuous short to ground in the Intake Air Temperature 2 (IAT2) signal circuit or an IAT2 sensor that is outputting a frequency signal that is too low. The diagnostic monitors the IAT2 sensor output frequency and fails the diagnostic when the IAT2 frequency is too low.</p> <p>The IAT2 sensor is a thermistor in which the resistance across the sensor can be equated to a temperature. The temperature value is converted by the sensor to a frequency value in Hertz. A digital square wave signal is transmitted by the sensor to the ECM. The ECM calculates the frequency of the square wave signal and converts that frequency to a temperature value. A lower frequency is equivalent to a lower temperature.</p> <p>This diagnostic is enabled if the Powertrain Relay voltage is high enough.</p>	Raw IAT 2 Input	< 13 Hertz (~-60 deg C)	<p>Powertrain Relay Voltage for a time</p> <p>No Active DTCs:</p>	<p>>= 11.0 Volts >= 0.9 seconds</p> <p>PowertrainRelayFault</p>	<p>40 failures out of 50 samples</p> <p>1 sample every 100 msec</p>	Type B, 2 Trips

210BDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Intake Air Temperature Sensor Circuit 2 High (applications with humidity)	P0098	<p>Detects an Intake Air Temperature 2 (IAT2) sensor that is outputting a frequency signal that is too high. The diagnostic monitors the IAT2 sensor output frequency and fails the diagnostic when the IAT2 frequency is too high.</p> <p>The IAT2 sensor is a thermistor in which the resistance across the sensor can be equated to a temperature. The temperature value is converted by the sensor to a frequency value in Hertz. A digital square wave signal is transmitted by the sensor to the ECM. The ECM calculates the frequency of the square wave signal and converts that frequency to a temperature value. A higher frequency is equivalent to a higher temperature.</p> <p>This diagnostic is enabled if the Powertrain Relay voltage is high enough.</p>	Raw IAT 2 Input	> 390 Hertz (~150 deg C)	<p>Powertrain Relay Voltage for a time</p> <p>No Active DTCs:</p>	<p>>= 11.0 Volts >= 0.9 seconds</p> <p>PowertrainRelayFault</p>	<p>40 failures out of 50 samples</p> <p>1 sample every 100 msec</p>	Type B, 2 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Intake Air Temperature Sensor 2 Intermittent In-Range (applications with humidity)	P0099	<p>Detects a noisy or erratic signal in the Intake Air Temperature 2 (IAT2) circuit by monitoring the IAT2 sensor and failing the diagnostic when the IAT2 signal has a noisier output than is expected.</p> <p>When the value of the IAT2 signal in °C is determined, a delta is calculated between the current reading and the previous reading. The absolute value of these deltas is summed over a number of IAT2 readings. The result of this summation is called a "string length". Since the IAT2 signal is anticipated to be relatively smooth, a string length of a particular magnitude indicates a noisy or erratic IAT2 signal. The diagnostic will fail if the string length is too high.</p> <p>This diagnostic is enabled if the Powertrain Relay voltage is high enough.</p>	<p>String Length</p> <p>Where: "String Length" = sum of "Diff" calculated over</p> <p>And where: "Diff" = ABS(current IAT 2 reading - IAT 2 reading from 100 milliseconds previous)</p>	<p>> 100.00 deg C</p> <p>10 consecutive IAT 2 readings</p>	<p>Powertrain Relay Voltage for a time</p> <p>No Active DTCs:</p>	<p>>= 11.0 Volts >= 0.9 seconds</p> <p>PowertrainRelayFault</p>	<p>4 failures out of 5 samples</p> <p>Each sample takes 1.0 seconds</p>	Type B, 2 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Radiator Coolant Temp Sensor Circuit Low Voltage	P00B3	Circuit Continuity This DTC detects a short to ground in the RCT (Radiator Coolant temperature) signal circuit or the RCT sensor. This is accomplished by monitoring the resistance of the circuit. If the resistance goes out of the expected range the DTC is set.	RCT Resistance (@ 150°C)	< 42 Ohms	Engine run time OR IAT min	> 10.0 seconds ≤ 70.3 °C	5 failures out of 6 samples 1 sec/ sample Continuous	Type B, 2 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Radiator Coolant Temp Sensor Circuit High Voltage	P00B4	Circuit Continuity This DTC detects a short to high or open in the RCT (Radiator Coolant temperature) signal circuit or the RCT sensor. This is accomplished by monitoring the resistance of the circuit. If the resistance goes out of the expected range the DTC is set.	RCT Resistance (@ -60°C)	> 320,000 Ohms	Engine run time OR IAT min	> 60.0 seconds ≥ -9.0 °C	5 failures out of 6 samples 1 sec/ sample Continuous	Type B, 2 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Engine Coolant Flow Insufficient	P00B7	This DTC detects a Insufficient Flow Condition in the main cooling circuit. This check is done when all known restrictions in the system such as a thermostat are open and allowing coolant to flow through the radiator. DTC indication can be caused by a stuck closed thermostat or other unexpected restriction in the cooling system.	Engine Coolant Temp (ECT) is AND Difference between ECT and RCT (Radiator Coolant Temp) is When above is present for fail counts start.	> 119.0 Deg C > 30.0 Deg C > 5 seconds	No Active DTC's Engine run time AND Engine Coolant Temp	THMR_RCT_Sensor_Ckt_FA THMR_ECT_Sensor_Ckt_FA > 30 seconds > 99.5 Deg C	30 failures out of 60 samples 1 sec/ sample Continuous	Type B, 2 Trips

210BDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
High Pressure Start Diagnostic	P00C6	The DTC Diagnoses the high side fuel pressure during engine cranking.	The ECM detects that the fuel pressure is not rising or has fallen beyond acceptable limits during engine cranking Pressure Rise Test: Sensed High Pressure Fuel Rail Pressure value Pressure Fall Test: Sensed High Pressure Fuel Rail Pressure value	< P00C6 - Minimum pressure in MPa that will exit High Pressure Start mode and allow fuel delivery (see Supporting Table) <= P00C6 - Minimum acceptable value of fuel rail pressure after High Pressure Start (see Supporting Table)	High Pressure Rise Diagnostic During Start High Pressure Fall Diagnostic During Start Low side feed fuel pressure Engine Run Time Run/Crank Voltage Engine Coolant For each engine start, only 1 diagnostic is performed. The pressure rise test will run if High side fuel pressure is less than KtFHPC_p_HighPressStart, otherwise, the pressure fall diagnostic will run. The pressure fall runs when the engine is cranking.	Enabled Disabled ≥ 0 KPA < = 1 sec > 8 Volts -100 ≤ °C ≤ 126 All must be true (High Pressure Pump is enabled and High Fuel pressure sensor ckt is Not (FA,FP or TFTKO) and High Pressure fuel pump ckt is Not (FA,FP or TFTKO) and Cam or Crank Sensor Not FA and IAT, IAT2 and ECT Not FA and Low side Fuel Pump Relay ckt Not FA and Estimate fuel rail pressure is valid and Green Engine (In assembly plant) is not enabled and Not if low fuel condition and Low side Fuel Pump is on and Injector Flow Test is not active and Device control	Pressure Rise Test: Crank Time ≥ P00C6 - High Pressure Pump Control Mode timeout (see Supporting Table) 6.25 ms per sample Pressure Fall Test: Injected cylinder events ≥ P00C6 - maximum acceptable counts of fuel rail pressure below KtFHPD_p_HPS_PressFallLoThresh after High Pressure Start (see Supporting Table) 4 samples per engine rotation	Type B, 2 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
					Barometric Pressure Inlet Air Temp	commanded pressure is false and Device control pump ckt enabled on is false and Engine movement detected is true and Manufacturers enable counter is 0) Flex Fuel Sensor Not FA Ignition voltage out of correlation error(P1682) not active >= 70.0 KPA >= -20.0 DegC		

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Intake Air Pressure Measuremen t System - Multiple Sensor Correlation (naturally aspirated with TIAP/ Baro sensor)	P00C7	<p>Detects an inconsistency between pressure sensors in the induction system in which a particular sensor cannot be identified as the failed sensor.</p> <p>If the engine has been off for a sufficient amount of time, the pressure values in the induction system will have equalized. The Manifold Pressure (MAP) and Barometric Pressure (BARO) sensors values are checked to see if they are within the normal expected atmospheric pressure range. If they are, then MAP and BARO are compared to see if their values are similar.</p> <p>If the MAP and BARO values are not similar, there are no other pressure sensors to compare against to identify which sensor is not rational. The Multiple Pressure Sensor Correlation Diagnostic will fail in this case.</p>	ABS(Manifold Pressure - Baro Pressure)	> 10.0 kPa	<p>Time between current ignition cycle and the last time the engine was running</p> <p>Engine is not rotating</p> <p>Manifold Pressure Manifold Pressure Baro Pressure Baro Pressure</p> <p>No Active DTCs:</p> <p>No Pending DTCs:</p>	<p>> 5.0 seconds</p> <p>>= 50.0 kPa <= 115.0 kPa >= 50.0 kPa <= 115.0 kPa</p> <p>EngineModeNotRunTimer Error MAP_SensorFA AAP_SnsrFA</p> <p>MAP_SensorCircuitFP AAP_SnsrCktFP</p>	<p>4 failures out of 5 samples</p> <p>1 sample every 12.5 msec</p>	Type B, 2 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Fuel Press Regulator Solenoid Supply Voltage Control High Side Circuit Short to ground	P00C9	Controller specific output driver circuit diagnoses High Pressure pump Control Solenoid high sided driver for a short to ground failure when the output is powered on by comparing a voltage measurement to controller specific voltage thresholds.	Voltage measurement outside of controller specific acceptable range during driver on state indicates short to ground failure. Controller specific output driver circuit voltage thresholds are set to meet the following controller specification for a short to ground.	<= 1.1 or 15 Amps selectable threshold based on High pressure Pump.	Engine Speed Battery Voltage	>= 50 RPM >= 11 Volts Not in pump device control Enabled when a code clear is not active or not exiting device control	20 failures out of 40 samples 100 ms /sample Continuous	Type A, 1 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Fuel Press Regulator Solenoid Supply Voltage Control High Side Circuit Short to power	P00CA	Controller specific output driver circuit diagnoses High Pressure pump Control Solenoid high sided driver for a short to power failure when the output is powered off by comparing a voltage measurement to controller specific voltage thresholds.	Voltage measurement outside of controller specific acceptable range during driver off state indicates short to power failure. Controller specific output driver circuit voltage thresholds are set to meet the following controller specification for a short to power.	<= 0.1 Amps between signal and controller power	Engine Speed Battery Voltage	>= 50 RPM >= 11 Volts Not in pump device control Enabled when a code clear is not active or not exiting device control	20 failures out of 40 samples 100 ms /sample Continuous	Type A, 1 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Humidity Sensor Circuit Low	P00F4	<p>Detects a continuous short to ground in the humidity signal circuit or a humidity sensor that is outputting a duty cycle that is too low. The diagnostic monitors the humidity sensor duty cycle output and fails the diagnostic when the humidity duty cycle is too low.</p> <p>The humidity sensor converts the capacitance across the sensor to a relative humidity. The relative humidity value is converted by the sensor to a duty cycle value in %. A digital square wave signal is transmitted by the sensor to the ECM. The ECM calculates the duty cycle of the square wave signal and converts that duty cycle to a relative humidity value in % through a transfer function.</p> <p>This diagnostic is enabled if the Powertrain Relay voltage is high enough.</p>	Humidity Duty Cycle	<= 5.0 %	<p>Powertrain Relay Voltage for a time</p> <p>No Active DTCs:</p>	<p>>= 11.0 Volts >= 0.9 seconds</p> <p>PowertrainRelayFault</p>	<p>40 failures out of 50 samples</p> <p>1 sample every 100 msec</p>	Type B, 2 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Humidity Sensor Circuit High	P00F5	<p>Detects a humidity sensor that is outputting a duty cycle signal that is too high. The diagnostic monitors the humidity sensor duty cycle output and fails the diagnostic when the humidity duty cycle is too high.</p> <p>The humidity sensor converts the capacitance across the sensor to a relative humidity. The relative humidity value is converted by the sensor to a duty cycle value in %. A digital square wave signal is transmitted by the sensor to the ECM. The ECM calculates the duty cycle of the square wave signal and converts that duty cycle to a relative humidity value in % through a transfer function.</p> <p>This diagnostic is enabled if the Powertrain Relay voltage is high enough.</p>	Humidity Duty Cycle	>= 95.0 %	<p>Powertrain Relay Voltage for a time</p> <p>No Active DTCs:</p>	<p>>= 11.0 Volts >= 0.9 seconds</p> <p>PowertrainRelayFault</p>	<p>40 failures out of 50 samples</p> <p>1 sample every 100 msec</p>	Type B, 2 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Humidity Sensor Circuit Intermittent	P00F6	<p>Detects a noisy or erratic signal in the humidity circuit by monitoring the humidity sensor and failing the diagnostic when the humidity signal has a noisier output than is expected.</p> <p>When the value of relative humidity in % is determined, a delta is calculated between the current reading and the previous reading. The absolute value of these deltas is summed over a number of humidity readings. The result of this summation is called a "string length".</p> <p>Since the humidity signal is anticipated to be relatively smooth, a string length of a particular magnitude indicates a noisy or erratic humidity signal. The diagnostic will fail if the string length is too high.</p> <p>This diagnostic is enabled if the Powertrain Relay voltage is high enough.</p>	<p>String Length</p> <p>Where: "String Length" = sum of "Diff" calculated over</p> <p>And where: "Diff" = ABS(current Humidity reading - Humidity reading from 100 milliseconds previous)</p>	<p>> 80 %</p> <p>10 consecutive Humidity readings</p>	<p>Powertrain Relay Voltage for a time</p> <p>No Active DTCs:</p>	<p>>= 11.0 Volts >= 0.9 seconds</p> <p>PowertrainRelayFault</p>	<p>4 failures out of 5 samples</p> <p>Each sample takes 1.0 seconds</p>	Type B, 2 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Mass Air Flow System Performance (naturally aspirated)	P0101	<p>Detects a performance failure in the Mass Air Flow (MAF) sensor, such as when a MAF value is stuck in range.</p> <p>This diagnostic is performed using the Intake Flow Rationality Diagnostic (IFRD). IFRD calculates modeled values of sensors from other sensors. The other sensors are the Manifold Pressure (MAP) sensor and Throttle Position sensor (TPS).</p> <p>These modeled values are compared against the actual sensor values to see if they are similar. If they are similar, then the model passes. If they are not similar, then that model is considered to be failed. Certain combinations of model passes and model failures can be interpreted to be caused by a performance issue with the MAF sensor. In this case, the MAF Performance diagnostic will fail.</p>	<p>Filtered Throttle Model Error AND ABS(Measured Flow – Modeled Air Flow) Filtered AND ABS(Measured MAP – MAP Model 2) Filtered</p>	<p>$\leq 200 \text{ kPa}^*(\text{g/s})$</p> <p>$> 12.0 \text{ grams/sec}$</p> <p>$> 25.0 \text{ kPa}$</p>	<p>Engine Speed Engine Speed</p> <p>(Coolant Temp OR OBD Coolant Enable Criteria</p> <p>(Coolant Temp OR OBD Max Coolant Achieved</p> <p>Intake Air Temp Intake Air Temp</p> <p>Minimum total weight factor (all factors multiplied together)</p> <p>See Residual Weight Factor tables.</p>	<p>$\geq 400 \text{ RPM}$ $\leq 6,400 \text{ RPM}$</p> <p>$\geq -9 \text{ Deg C}$</p> <p>= TRUE)</p> <p>$\leq 130 \text{ Deg C}$</p> <p>= FALSE)</p> <p>$\geq -20 \text{ Deg C}$ $\leq 125 \text{ Deg C}$</p> <p>≥ 0.50</p> <p>Filtered Throttle Model Error multiplied by P0101, P0106, P0121, P012B, P0236, P1101: TPS Residual Weight Factor based on RPM</p> <p>Modeled Air Flow Error multiplied by P0101, P0106, P010B, P0121, P012B, P0236, P1101: MAF1 Residual Weight Factor based on RPM and P0101, P0106, P010B, P0121, P012B, P0236, P1101: MAF1 Residual Weight Factor based on MAF Est</p>	<p>Continuous</p> <p>Calculation are performed every 12.5 msec</p>	Type B, 2 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
					<p>No Active DTCs:</p> <p>No Pending DTCs:</p>	<p>MAP Model 2 Error multiplied by P0101, P0106, P0121, P012B, P0236, P1101: MAP2 Residual Weight Factor based on RPM</p> <p>MAP_SensorCircuitFA EGRValvePerformance_F A MAF_SensorCircuitFA CrankSensor_FA ECT_Sensor_FA IAT_SensorFA</p> <p>EGRValve_FP ECT_Sensor_Ckt_FP IAT_SensorCircuitFP</p>		

210BDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Mass Air Flow Sensor Circuit Low Frequency	P0102	<p>Detects a continuous short to ground in the MAF sensor circuit or a MAF sensor that is outputting a frequency that is too low. The diagnostic monitors the MAF sensor frequency output and fails the diagnostic when the MAF frequency is too low.</p> <p>The MAF sensor monitors the temperature of a circuit in the air flow of the engine. The temperature of this circuit is related to the air velocity across the sensor. The MAF sensor converts this air velocity to a mass air flow value. The mass air flow value is converted by the sensor to a frequency value in Hertz. A digital square wave signal is transmitted by the sensor to the ECM. The ECM calculates the frequency of the square wave signal and converts that frequency to a mass air flow value in grams/second through a transfer function.</p>	MAF Output	<= 500 Hertz (~ 0.93 gm/sec)	Engine Run Time Engine Speed Ignition Voltage Above criteria present for a period of time	> 1.0 seconds >= 300 RPM >= 11.0 Volts >= 1.0 seconds	200 failures out of 250 samples 1 sample every cylinder firing event	Type B, 2 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Mass Air Flow Sensor Circuit High Frequency	P0103	<p>Detects a MAF sensor that is outputting a frequency signal that is too high. The diagnostic monitors the MAF sensor frequency output and fails the diagnostic when the MAF frequency is too high.</p> <p>The MAF sensor monitors the temperature of a circuit in the air flow of the engine. The temperature of this circuit is related to the air velocity across the sensor. The MAF sensor converts this air velocity to a mass air flow value. The mass air flow value is converted by the sensor to a frequency value in Hertz. A digital square wave signal is transmitted by the sensor to the ECM. The ECM calculates the frequency of the square wave signal and converts that frequency to a mass air flow value in grams/second through a transfer function.</p>	MAF Output	>= 11,000 Hertz (~ 453.4 gm/sec)	Engine Run Time Engine Speed Ignition Voltage Above criteria present for a period of time	> 1.0 seconds >= 300 RPM >= 11.0 Volts >= 1.0 seconds	200 failures out of 250 samples 1 sample every cylinder firing event	Type B, 2 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Manifold Absolute Pressure Sensor Performance (naturally aspirated)	P0106	<p>Detects a performance failure in the Manifold Pressure (MAP) sensor, such as when a MAP value is stuck in range.</p> <p>If the engine has been off for a sufficient amount of time, the pressure values in the induction system will have equalized. The MAP sensor value is checked to see if it is within the normal expected atmospheric pressure range. If it is not, then the MAP performance diagnostic will fail.</p> <p>The engine running portion of this diagnostic is performed using the Intake Flow Rationality Diagnostic (IFRD). IFRD calculates modeled values of sensors from other sensors. The other sensors are the Mass Air Flow (MAF) sensor and Throttle Position sensor (TPS).</p> <p>These modeled values are compared against the actual sensor values to see if they are similar. If they are similar, then the model</p>	<p>Engine Running:</p> <p>Filtered Throttle Model Error AND ABS(Measured MAP – MAP Model 1) Filtered AND ABS(Measured MAP – MAP Model 2) Filtered</p>	<p>$\leq 200 \text{ kPa}^*(\text{g/s})$</p> <p>$> 25.0 \text{ kPa}$</p> <p>$> 25.0 \text{ kPa}$</p>	<p>Engine Speed Engine Speed</p> <p>(Coolant Temp OR OBD Coolant Enable Criteria</p> <p>(Coolant Temp OR OBD Max Coolant Achieved</p> <p>Intake Air Temp Intake Air Temp</p> <p>Minimum total weight factor (all factors multiplied together)</p> <p>See Residual Weight Factor tables.</p> <p>No Active DTCs:</p>	<p>$\geq 400 \text{ RPM}$ $\leq 6,400 \text{ RPM}$</p> <p>$\geq -9 \text{ Deg C}$</p> <p>= TRUE)</p> <p>$\leq 130 \text{ Deg C}$</p> <p>= FALSE)</p> <p>$\geq -20 \text{ Deg C}$ $\leq 125 \text{ Deg C}$</p> <p>≥ 0.50</p> <p>Filtered Throttle Model Error multiplied by P0101, P0106, P0121, P012B, P0236, P1101: TPS Residual Weight Factor based on RPM</p> <p>MAP Model 1 Error multiplied by P0101, P0106, P0121, P012B, P0236, P1101: MAP1 Residual Weight Factor based on RPM</p> <p>MAP Model 2 Error multiplied by P0101, P0106, P0121, P012B, P0236, P1101: MAP2 Residual Weight Factor based on RPM</p> <p>MAP_SensorCircuitFA</p>	<p>Continuous</p> <p>Calculations are performed every 12.5 msec</p>	Type B, 2 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
		passes. If they are not similar, then that model is considered to be failed. Certain combinations of model passes and model failures can be interpreted to be caused by a performance issue with the MAP sensor. In this case, the MAP Performance diagnostic will fail.				EGRValvePerformance_F A MAF_SensorCircuitFA CrankSensor_FA ECT_Sensor_FA IAT_SensorFA No Pending DTCs: EGRValve_FP ECT_Sensor_Ckt_FP IAT_SensorCircuitFP		
			<u>Engine Not Rotating:</u> Manifold Pressure OR Manifold Pressure	< 50.0 kPa > 115.0 kPa	Time between current ignition cycle and the last time the engine was running Engine is not rotating No Active DTCs: No Pending DTCs:	> 5.0 seconds EngineModeNotRunTimer Error MAP_SensorCircuitFA AAP_SnsrCktFA MAP_SensorCircuitFP AAP_SnsrCktFP	4 failures out of 5 samples 1 sample every 12.5 msec	

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Manifold Absolute Pressure Sensor Circuit Low (Gen III)	P0107	Detects a continuous short to ground in the Manifold Absolute Pressure (MAP) signal circuit by monitoring the MAP sensor output voltage and failing the diagnostic when the MAP voltage is too low. The MAP sensor is a pressure transducer which outputs a voltage proportional to the absolute pressure.	MAP Voltage	< 3.0 % of 5 Volt Range (This is equal to 6.1 kPa)	Continuous		320 failures out of 400 samples 1 sample every 12.5 msec	Type B, 2 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Manifold Absolute Pressure Sensor Circuit High (Gen III)	P0108	Detects a continuous short to power or open circuit in the Manifold Absolute Pressure (MAP) signal circuit by monitoring the MAP sensor output voltage and failing the diagnostic when the MAP voltage is too high. The MAP sensor is a pressure transducer which outputs a voltage proportional to the absolute pressure.	MAP Voltage	> 90.0 % of 5 Volt Range (This is equal to 115.0 kPa)	Continuous		320 failures out of 400 samples 1 sample every 12.5 msec	Type B, 2 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Intake Air Temperature Sensor Circuit Performance (applications with humidity sensor, but no manifold temperature sensor)	P0111	<p>Detects an Intake Air Temperature (IAT) sensor value that is stuck in range by comparing the IAT sensor value against the IAT2 and coolant temperature sensor values and failing the diagnostic if the IAT value is more different than the IAT2 and coolant temperature values than is expected. If the engine has been off for a long enough period of time, the air temperature values in the engine compartment of the vehicle are considered to have equalized, and the diagnostic can be enabled.</p> <p>The diagnostic will fail if the IAT2 and coolant temperature values are similar, and the IAT value is not similar to the IAT2 and coolant temperature values.</p> <p>This diagnostic is executed once per ignition cycle if the enable conditions are met.</p>	<p>ABS(Power Up IAT - Power Up IAT2)</p> <p>AND</p> <p>ABS(Power Up ECT – Power Up IAT) > ABS(Power Up ECT – Power Up IAT2)</p>	> 30 deg C	<p>Time between current ignition cycle and the last time the engine was running</p> <p>Powertrain Relay Voltage for a time</p> <p>No Active DTCs:</p>	<p>> 28,800 seconds</p> <p>>= 11.0 Volts >= 0.9 seconds</p> <p>PowertrainRelayFault ECT_Sensor_Ckt_FA IAT_SensorCircuitFA HumTempSnsrCktFA EngineModeNotRunTimer Error</p>	Executes once at the beginning of each ignition cycle if enable conditions are met	Type B, 2 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Intake Air Temperature Sensor Circuit Low	P0112	Detects a continuous short to ground in the Intake Air Temperature (IAT) signal circuit by monitoring the IAT sensor output resistance and failing the diagnostic when the IAT resistance is too low. The IAT sensor is a thermistor in which the resistance across the sensor can be equated to a temperature. A lower resistance is equivalent to a higher temperature.	Raw IAT Input	< 58.00 Ohms (~150 deg C)	Engine Run Time	> 0.00 seconds	40 failures out of 50 samples 1 sample every 100 msec	Type B, 2 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Intake Air Temperature Sensor Circuit High	P0113	Detects a continuous open circuit in the Intake Air Temperature (IAT) signal circuit by monitoring the IAT sensor output resistance and failing the diagnostic when the IAT resistance is too high. The IAT sensor is a thermistor in which the resistance across the sensor can be equated to a temperature. A higher resistance is equivalent to a lower temperature.	Raw IAT Input	> 142,438 Ohms (~-60 deg C)	Engine Run Time	> 0.00 seconds	40 failures out of 50 samples 1 sample every 100 msec	Type B, 2 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Intake Air Temperature Sensor Intermittent In-Range	P0114	<p>Detects a noisy or erratic signal in the Intake Air Temperature (IAT) circuit by monitoring the IAT sensor and failing the diagnostic when the IAT signal has a noisier output than is expected.</p> <p>When the value of the IAT signal in °C is determined, a delta is calculated between the current reading and the previous reading. The absolute value of these deltas is summed over a number of IAT readings. The result of this summation is called a "string length".</p> <p>Since the IAT signal is anticipated to be relatively smooth, a string length of a particular magnitude indicates a noisy or erratic IAT signal. The diagnostic will fail if the string length is too high.</p>	<p>String Length</p> <p>Where: "String Length" = sum of "Diff" calculated over</p> <p>And where: "Diff" = ABS(current IAT reading - IAT reading from 100 milliseconds previous)</p>	<p>> 80.00 deg C</p> <p>10 consecutive IAT readings</p>	Continuous		<p>4 failures out of 5 samples</p> <p>Each sample takes 1.0 seconds</p>	Type B, 2 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Engine Coolant Temp Sensor Circuit Low	P0117	Circuit Continuity This DTC detects a short to ground in the ECT (Engine Coolant temperature) signal circuit or the ECT sensor. This is accomplished by monitoring the resistance of the circuit. If the resistance goes out of the expected range the DTC is set.	ECT Resistance (@ 150°C)	< 38 Ohms			5 failures out of 6 samples 1 sec/ sample Continuous	Type B, 2 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Engine Coolant Temp Sensor Circuit High	P0118	Circuit Continuity This DTC detects a short to high or open in the ECT (Engine Coolant temperature) signal circuit or the ECT sensor. This is accomplished by monitoring the resistance of the circuit. If the resistance goes out of the expected range the DTC is set.	ECT Resistance (@ -60°C)	> 320,000 Ohms	Engine run time OR IAT min	> 10.0 seconds ≥ -9.0 °C	5 failures out of 6 samples 1 sec/ sample Continuous	Type B, 2 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Engine Coolant Temperature (ECT) Sensor Circuit Intermittent	P0119	Circuit Erratic This DTC detects large step changes in the ECT (Engine Coolant temperature) signal circuit or the ECT sensor. Allowable high and low limits are calculated for the next sample based on the previous sample and sensor time constant. If the sensor responds faster than should be possible the DTC is set.	ECT temperature step change: 1) positive step change is greater than calculated high limit OR 2) negative step change is lower than calculated low limit. The calculated high and low limits for the next reading use the following calibrations: 1) Sensor time constant 2) Sensor low limit 3) Sensor high limit *****Generic Example***** If the last ECT reading was 90 Deg C, the Time constant was calibrated at 10 seconds, the low limit was calibrated to -80 Deg C and the high limit was calibrated to 200 Deg C the calculated limits are 101 Deg C and 73 Deg C. The next reading (after the 90 Deg C reading) must be between 73 Deg C and 101 Deg C to be valid. *****	7.4 seconds -60.0 Deg C 200.0 Deg C	No Active DTC's	ECT_Sensor_Ckt_FP	3 failures out of 4 samples 1 sec/ sample Continuous	Type B, 2 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Throttle Position Sensor Performance (naturally aspirated)	P0121	<p>Detects a performance failure in the Throttle Position sensor (TPS) sensor, such as when a TPS value is stuck in range.</p> <p>This diagnostic is performed using the Intake Flow Rationality Diagnostic (IFRD). IFRD calculates modeled values of sensors from other sensors. The other sensors are the Manifold Pressure (MAP) sensor and Mass Air Flow (MAF) sensor.</p> <p>These modeled values are compared against the actual sensor values to see if they are similar. If they are similar, then the model passes. If they are not similar, then that model is considered to be failed. Certain combinations of model passes and model failures can be interpreted to be caused by a performance issue with the TPS sensor. In this case, the TPS Performance diagnostic will fail.</p>	<p>Filtered Throttle Model Error AND ABS(Measured MAP – MAP Model 2) Filtered</p>	<p>> 200 kPa*(g/s)</p> <p><= 25.0 kPa</p>	<p>Engine Speed Engine Speed</p> <p>(Coolant Temp OR OBD Coolant Enable Criteria</p> <p>(Coolant Temp OR OBD Max Coolant Achieved</p> <p>Intake Air Temp Intake Air Temp</p> <p>Minimum total weight factor (all factors multiplied together)</p> <p>See Residual Weight Factor tables.</p> <p>No Active DTCs:</p>	<p>>= 400 RPM <= 6,400 RPM</p> <p>>= -9 Deg C</p> <p>= TRUE)</p> <p><= 130 Deg C</p> <p>= FALSE)</p> <p>>= -20 Deg C <= 125 Deg C</p> <p>>= 0.50</p> <p>Filtered Throttle Model Error multiplied by P0101, P0106, P0121, P012B, P0236, P1101: TPS Residual Weight Factor based on RPM</p> <p>MAP Model 2 Error multiplied by P0101, P0106, P0121, P012B, P0236, P1101: MAP2 Residual Weight Factor based on RPM</p> <p>MAP_SensorCircuitFA EGRValvePerformance_F A MAF_SensorCircuitFA CrankSensor_FA ECT_Sensor_FA IAT_SensorFA</p>	<p>Continuous</p> <p>Calculation are performed every 12.5 msec</p>	Type B, 2 Trips

210BDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
					No Pending DTCs:	EGRValve_FP ECT_Sensor_Ckt_FP IAT_SensorCircuitFP		

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
TPS1 Circuit Low	P0122	Detects a continuous or intermittent short low or open in TPS1 circuit by monitoring the TPS 1 sensor percent Vref and failing the diagnostic when the TPS percent Vref is too low. This diagnostic only runs when battery voltage is high enough.	TPS1 % Vref <	0.3250 % Vref	Run/Crank voltage No 5V reference error or fault for # 4 5V reference circuit	> 6.41 Volts P06A3	79 /159 counts; 57 counts continuous; 3.125 ms /count in the ECM main processor	Type A, 1 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
TPS1 Circuit High	P0123	Detects a continuous or intermittent short high in TPS1 circuit by monitoring the TPS 1 sensor percent Vref and failing the diagnostic when the TPS percent Vref is too high. This diagnostic only runs when battery voltage is high enough.	TPS1 % Vref >	4.750 % Vref	Run/Crank voltage No 5V reference error or fault for # 4 5V reference circuit	> 6.41 Volts P06A3	79 /159 counts; 57 counts continuous; 3.125 ms /count in the ECM main processor	Type A, 1 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Engine Coolant Temperature Below Stat Regulating Temperature	P0128	This DTC detects if the ECT (EngineCoolant temperature) does not achieve the required target temperature after an allowed energy accumulation by the engine. This can be caused by an ECT sensor biased low or a cooling system that is not warming up correctly because of a stuck open thermostat or other fault.	<p>Energy is accumulated after the first combustion event using Range #1 or #2 below:</p> <p>Thermostat type is divided into normal (non-heated) and electrically heated.</p> <p>For this application the "type" cal (KeTHMG_b_TMS_ElecThstEquipped) = 1 If the type cal is equal to one, the application has an electrically heated t-stat, if equal to zero the the application has an non heated t-stat. See appropriate section below.</p> <p>***** Type cal above = 1 (Electrically heated t-stat) == == == == Range #1 (Primary) ECT reaches Commanded temperature minus 19 °C when Ambient min is ≤ 52 °C and > 10 °C. Note: Warm up target for range #1 will be at least 79 °C == == == == Range #2 (Alternate) ECT reaches Commanded temperature minus 50 °C when Ambient min is ≤ 10 °C and > -9 °C. Note: Warm up target for range #2 will be at least</p>	<p>See the two tables named: P0128_Maximum Accumulated Energy for Start-up ECT conditions - Primary and P0128_Maximum Accumulated Energy for Start-up ECT conditions - Alternate in the Supporting tables section.</p> <p>This diagnostic models the net energy into and out of the cooling</p>	<p>No Active DTC's</p> <p>Engine not run time (soaking time before current trip)</p> <p>Engine run time</p> <p>Fuel Condition</p> <p>Distance traveled</p> <p>***** If Engine RPM is continuously greater than for this time period</p> <p>The diagnostic test for this key cycle will abort ***** ***** If T-Stat Heater commanded duty cycle for this time period</p>	<p>ECT_Sensor_Ckt_FA ECT_Sensor_Perf_FA VehicleSpeedSensor_FA OAT_PtEstFiltFA IAT_SensorCircuitFA MAF_SensorFA THMR_AWP_AuxPumpFA THMR_AHV_FA THMR_SWP_Control_FA THMR_SWP_NoFlow_FA THMR_SWP_FlowStuckOn_FA EngineTorqueEstInaccurate</p> <p>≥ 1,800 seconds</p> <p>30 ≤ Eng Run Tme ≤ 1,800 seconds</p> <p>Ethanol ≤ 87 %</p> <p>≥ 0.50 miles</p> <p>***** 9,999 rpm 5.0 seconds</p> <p>***** ***** > 20.0 % duty cycle > 5.0 seconds</p>	<p>1 failure to set DTC</p> <p>1 sec/ sample</p> <p>Once per ignition key cycle</p>	Type B, 2 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
			55 °C ***** Type cal above = 0 (non - heated t-stat) == == == == Range #1 (Primary) ECT reaches 86 °C when Ambient min is ≤ 52 °C and > 10 °C. == == == == Range #2 (Alternate) ECT reaches 55 °C when Ambient min is ≤ 10 °C and > -9 °C. *****	system during the warm-up process. The five energy terms are: heat from combustion (with AFM correction), heat from after-run, heat loss to enviroment, heat loss to cabin and heat loss to DFCO.	The diagnostic test for this key cycle will abort ***** ECT at start run	***** -60 ≤ ECT ≤ 67 °C		

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
O2S Circuit Low Voltage Bank 1 Sensor 1	P0131	<p>This DTC determines if the O2 sensor signal circuit is shorted low. When enabled, the diagnostic monitors the O2S signal and compares it to the threshold.</p> <p>The diagnostic failure counter is incremented if the O2S signal is below the threshold value. This DTC is set based on the fail and sample counters.</p>	Oxygen Sensor Signal	< 40.0 mVolts	<p>No Active DTC's</p> <p>AIR intrusive test</p> <p>Fuel intrusive test</p> <p>Idle intrusive test</p> <p>EGR intrusive test</p> <p>System Voltage</p> <p>EGR Device Control</p> <p>Idle Device Control</p> <p>Fuel Device Control</p> <p>AIR Device Control</p> <p>Low Fuel Condition</p> <p>Only when</p> <p>FuelLevelDataFault</p> <p>Commanded Equivalence Ratio</p> <p>Air Per Cylinder</p> <p>Fuel Control State</p> <p>Closed Loop Active</p>	<p>TPS_ThrottleAuthorityDefaulted</p> <p>MAP_SensorFA</p> <p>AIR System FA</p> <p>Ethanol Composition Sensor FA</p> <p>EvapPurgeSolenoidCircuit_FA</p> <p>EvapFlowDuringNonPurge_FA</p> <p>EvapVentSolenoidCircuit_FA</p> <p>EvapSmallLeak_FA</p> <p>EvapEmissionSystem_FA</p> <p>FuelTankPressureSnsrCkt_FA</p> <p>FuelInjectorCircuit_FA</p> <p>= Not active</p> <p>= Not active</p> <p>= Not active</p> <p>= Not active</p> <p>10.0 < Volts</p> <p>= Not active</p> <p>= Not active</p> <p>= Not active</p> <p>= Not active</p> <p>= False</p> <p>= False</p> <p>0.9912 < ratio < 1.0098</p> <p>120 < mgram < 500</p> <p>= Closed Loop</p> <p>= TRUE</p> <p>(Please see "Closed Loop Enable Clarification" in Supporting Tables).</p>	<p>285 failures out of 350 samples</p> <p>Frequency: Continuous in 100 milli - second loop</p>	Type B, 2 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
					All Fuel Injectors for active Cylinders Fuel Condition Ethanol Estimation in Progress Fuel State All of the above met for	Enabled (On) Ethanol \leq 87 % = Not Active (Please see “ Ethanol Estimation in Progress ” in Supporting Tables). DFCO not active > 5.0 seconds		

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
O2S Circuit High Voltage Bank 1 Sensor 1	P0132	<p>This DTC determines if the O2 sensor signal circuit is shorted high or open. When enabled, the diagnostic monitors the O2S signal and compares it to the threshold.</p> <p>The diagnostic failure counter is incremented if the O2S signal is above the threshold value. This DTC is set based on the fail and sample counters.</p>	Oxygen Sensor Signal	> 1,050 mvolts	<p>No Active DTC's</p> <p>System Voltage AFM Status Heater Warm-up delay Engine Run Time Engine Run Accum</p> <p>Low Fuel Condition Diag Only when FuelLevelDataFault</p> <p>***** Secondary delay after above conditions are complete (cold start condition)</p> <p>Secondary delay after above conditions are complete (not cold start condition)</p> <p>Commanded Equivalence Ratio</p> <p>***** All of the above met for</p>	<p>TPS_ThrottleAuthorityDef aulted MAF_SensorFA MAP_SensorFA EvapExcessPurgePsbl_F A FuelInjectorCircuit_FA Ethanol Composition Sensor FA AIR System FA</p> <p>10.0 < Volts = All Cylinders active = Complete > 5.0 seconds > 30.0 seconds</p> <p>= False = False</p> <p>***** > 45.0 seconds when engine soak time > 28,800 seconds</p> <p>> 45.0 seconds when engine soak time ≤ 28,800 seconds</p> <p>≤ 1.010 EQR</p> <p>***** > 5.0 seconds</p>	<p>100 failures out of 125 samples</p> <p>Frequency: Continuous in 100 milli - second loop</p>	Type B, 2 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
O2S Heater Performance Bank 1 Sensor 1	P0135	<p>This DTC determines if the O2 sensor heater is functioning properly by monitoring the current through the heater circuit. This test compares the measured heater current (monitored thru the low side driver) and compares it to the expected values (over the voltage range provided) for the released sensor.</p> <p>The diagnostic failure counter is incremented if the heater current is outside the expected range. This DTC is set based on the fail and sample counters.</p>	Heater Current outside of the expected range of	0.3 < Amps < 2.5	<p>No Active DTC's</p> <p>System Voltage Heater Warm-up delay O2S Heater device control</p> <p>B1S1 O2S Heater Duty Cycle</p> <p>All of the above met for</p>	<p>ECT_Sensor_FA</p> <p>> 10.0 Volts = Complete</p> <p>= Not active</p> <p>> zero</p> <p>> 120 seconds</p>	<p>8 failures out of 10 samples</p> <p>Frequency: 3 tests per trip 30 seconds delay between tests and 1 second execution rate</p>	Type B, 2 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
O2S Circuit Low Voltage Bank 1 Sensor 2) (For Single Bank Exhaust Only	P0137	<p>This DTC determines if the O2 sensor signal circuit is shorted low. When enabled, the diagnostic monitors the O2S signal and compares it to the threshold.</p> <p>The diagnostic failure counter is incremented if the O2S signal is below the threshold value. This DTC is set based on the fail and sample counters.</p>	Oxygen Sensor Signal	< 40 mvolts	<p>No Active DTC's</p> <p>AIR intrusive test</p> <p>Fuel intrusive test</p> <p>Idle intrusive test</p> <p>EGR intrusive test</p> <p>System Voltage</p> <p>EGR Device Control</p> <p>Idle Device Control</p> <p>Fuel Device Control</p> <p>AIR Device Control</p> <p>Low Fuel Condition</p> <p>Only when</p> <p>FuelLevelDataFault</p> <p>Commanded Equivalence Ratio</p> <p>Air Per Cylinder</p> <p>Fuel Control State</p> <p>Closed Loop Active</p>	<p>TPS_ThrottleAuthorityDef aulted</p> <p>MAP_SensorFA</p> <p>AIR System FA</p> <p>Ethanol Composition Sensor FA</p> <p>EvapPurgeSolenoidCircuit _FA</p> <p>EvapFlowDuringNonPurg e_FA</p> <p>EvapVentSolenoidCircuit_ FA</p> <p>EvapSmallLeak_FA</p> <p>EvapEmissionSystem_FA</p> <p>FuelTankPressureSnsrCkt _FA</p> <p>FuelInjectorCircuit_FA</p> <p>= Not active</p> <p>= Not active</p> <p>= Not active</p> <p>= Not active</p> <p>10.0 < Volts</p> <p>= Not active</p> <p>= Not active</p> <p>= Not active</p> <p>= Not active</p> <p>= False</p> <p>= False</p> <p>0.991 ≤ ratio ≤ 1.010</p> <p>120 ≤ mgrams ≤500</p> <p>= Closed Loop</p> <p>= TRUE</p> <p>(Please see "Closed Loop Enable Clarification" in Supporting Tables).</p>	<p>320 failures out of 400 samples</p> <p>Frequency: Continuous in 100 milli - second loop</p>	Type B, 2 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
					All Fuel Injectors for active Cylinders Fuel Condition Ethanol Estimation in Progress Fuel State All of the above met for	Enabled (On) Ethanol \leq 87 % = Not Active (Please see “ Ethanol Estimation in Progress ” in Supporting Tables). DFCO not active > 5.0 seconds		

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
O2S Circuit High Voltage Bank 1 Sensor 2) (For Single Bank Exhaust Only	P0138	<p>This DTC determines if the O2 sensor signal circuit is shorted high or open. When enabled, the diagnostic monitors the O2S signal and compares it to the threshold.</p> <p>The diagnostic failure counter is incremented if the O2S signal is above the threshold value. This DTC is set based on the fail and sample counters.</p>	Oxygen Sensor Signal	> 1,050 mvolts	<p>No Active DTC's</p> <p>System Voltage AFM Status Heater Warm-up delay Engine Run Time Engine Run Accum</p> <p>Low Fuel Condition Only when FuelLevelDataFault</p> <p>*****</p> <p>Secondary delay after above conditions are complete (cold start condition)</p> <p>Secondary delay after above conditions are complete (not cold start condition)</p> <p>Commanded Equivalence Ratio</p> <p>***** All of the above met for</p>	<p>TPS_ThrottleAuthorityDefaulted MAF_SensorFA MAP_SensorFA EvapExcessPurgePsbI_FA FuelInjectorCircuit_FA Ethanol Composition Sensor FA AIR System FA</p> <p>10.0 < Volts = All Cylinders active = Complete > 5.0 seconds > 30.0 seconds</p> <p>= False = False</p> <p>*****</p> <p>> 105.0 seconds when engine soak time > 28,800 seconds</p> <p>> 105.0 seconds when engine soak time ≤ 28,800 seconds</p> <p>≤ 1.010 EQR</p> <p>***** > 5.0 seconds</p>	<p>100 failures out of 125 samples</p> <p>Frequency: Continuous in 100 milli - second loop</p>	Type B, 2 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
O2 Sensor Slow Response Rich to Lean Bank 1 Sensor 2	P013A	<p>The P013A diagnostic is the third in a sequence of six intrusive secondary O2 monitors which include DTCs P2270, P013E, P013A, P2271, P013F, & P013B. This DTC determines if the secondary O2 sensor has a slow response to an A/F change from Rich to Lean and thereby can no longer be used for secondary O2 sensor fuel control or for catalyst monitoring. This diagnostic commands fuel cut off while monitoring the sensor signal and the accumulated mass air flow.</p> <p>Note: The Primary method is used when the secondary O2 sensor signal transitions from above the upper threshold to below the lower threshold, otherwise the Secondary method is used.</p> <p><u>Primary method:</u> The P013A diagnostic measures the secondary O2 sensor voltage response rate</p>	<p>Primary Method: The EWMA of the Post O2 sensor normalized integral value. The EWMA repass limit is The EWMA calculation uses a 0.33 coefficient.</p> <p>OR</p> <p>Secondary Method: The Accumulated mass air flow monitored during the Slow Response Test (between the upper and lower voltage thresholds)</p>	<p>> 8.0 units ≤ 7.2 units</p> <p>> 40.0 grams (upper voltage threshold is 450 mvolts and lower voltage threshold is 150 mvolts)</p>	<p>No Active DTC's</p> <p>B1S2 DTC's Not Active this key cycle</p> <p>System Voltage Learned heater resistance</p> <p>Green O2S Condition</p>	<p>TPS_ThrottleAuthorityDefaulted ECT_Sensor_FA IAT_SensorFA MAF_SensorFA MAP_SensorFA AIR_System_FA FuelInjectorCircuit_FA FuelTrimSystemB1_FA FuelTrimSystemB2_FA EngineMisfireDetected_FA Ethanol Composition Sensor FA O2S_Bank_1_TFTKO O2S_Bank_2_TFTKO</p> <p>P013B, P013E, P013F, P2270 or P2271</p> <p>> 10.0 Volts = Valid (the heater resistance has learned since NVM reset, see enable conditions for "HO2S Heater Resistance DTC's") = Not Valid, Green O2S condition is considered valid until the accumulated air flow is greater than Multiple DTC Use_Green Sensor Delay Criteria - Limit for the following locations: B1S2, B2S2 (if applicable) in Supporting Tables tab. Airflow accumulation is only enabled when airflow is above 22.0 grams/sec.</p>	<p>Frequency: Once per trip Note: if NaPOPD_b_ResetFastRespFunc = FALSE for the given Fuel Bank OR NaPOPD_b_RapidResponseActive = TRUE, multiple tests per trip are allowed.</p>	<p>Type A, 1 Trips EWMA</p>

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
		<p>between an upper and lower voltage threshold. The response rate is then normalized to mass air flow rate and scaled resulting in a normalized integral value. The normalized integral is fed into a 1st order lag filter to update the final EWMA result. DTC P013A is set when the EWMA value exceeds the EWMA threshold. Note: This EWMA diagnostic employs two features, Fast Initial Response (FIR) and Rapid Step Response (RSR). The FIR feature is used following a code clear event or any event that results in erasure of the engine controller's non-volatile memory. The RSR feature is used when a step change in the test result is identified. Both these temporary features improve the EWMA result following a non-typical event by allowing multiple intrusive tests on a given trip until the total number of tests reach a calibration value.</p> <p>Secondary method:</p>			<p>Low Fuel Condition Only when FuelLevelDataFault</p> <p>Post fuel cell</p> <p>Crankshaft Torque</p> <p>DTC's Passed</p> <p>=====</p> <p>After above conditions are met: DFCO mode is continued (wo driver initiated pedal input).</p>	<p>= False</p> <p>= False</p> <p>= Enabled, refer to Multiple DTC Use - Block learn cells to enable Post oxygen sensor tests for additional info. < 100.0Nm</p> <p>P2270 (and P2272 if applicable) P013E (and P014A if applicable)</p> <p>=====</p>		

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
		This fault is set if the secondary O2 sensor does not achieve the required lower voltage threshold before the accumulated mass air flow threshold is reached.						

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
O2 Sensor Slow Response Lean to Rich Bank 1 Sensor 2	P013B	<p>The P013B diagnostic is the sixth in a sequence of six intrusive secondary O2 monitors which include DTCs P2270, P013E, P013A, P2271, P013F, & P013B. This DTC determines if the secondary O2 sensor has a slow response to an A/F change from Lean to Rich and thereby can no longer be used for secondary O2 sensor fuel control or for catalyst monitoring. This diagnostic increases the delivered fuel while monitoring the sensor signal and the accumulated mass air flow.</p> <p>Note: The Primary method is used when the secondary O2 sensor signal transitions from below the lower threshold to above the upper threshold, otherwise the Secondary method is used.</p> <p><u>Primary method:</u> The P013B diagnostic measures the secondary O2 sensor voltage response rate</p>	<p>Primary Method: The EWMA of the Post O2 sensor normalized integral value. The EWMA repass limit is The EWMA calculation uses a 0.33 coefficient.</p> <p>OR</p> <p>Secondary Method: The Accumulated mass air flow monitored during the Slow Response Test (between the upper and lower voltage thresholds)</p>	<p>> 8.0 units ≤ 7.2 units</p> <p>> 230 grams (lower voltage threshold is 300 mvolts and upper voltage threshold is 600 mvolts)</p>	<p>No Active DTC's</p> <p>B1S2 DTC's Not Active this key cycle</p> <p>System Voltage Learned heater resistance</p> <p>Green O2S Condition</p>	<p>TPS_ThrottleAuthorityDefaulted ECT_Sensor_FA IAT_SensorFA MAF_SensorFA MAP_SensorFA AIR_System_FA FuelInjectorCircuit_FA FuelTrimSystemB1_FA FuelTrimSystemB2_FA EngineMisfireDetected_FA Ethanol Composition Sensor FA O2S_Bank_1_TFTKO O2S_Bank_2_TFTKO</p> <p>P013A, P013E, P013F, P2270 or P2271</p> <p>> 10.0 Volts = Valid (the heater resistance has learned since NVM reset, see enable conditions for "HO2S Heater Resistance DTC's")</p> <p>= Not Valid, Green O2S condition is considered valid until the accumulated air flow is greater than Multiple DTC Use_Green Sensor Delay Criteria - Limit for the following locations: B1S2, B2S2 (if applicable) in Supporting Tables tab. Airflow accumulation is only enabled when airflow</p>	<p>Frequency: Once per trip Note: if NaPOPD_b_ResetFastRespFunc = FALSE for the given Fuel Bank OR NaPOPD_b_RapidResponseActive = TRUE, multiple tests per trip are allowed.</p>	<p>Type A, 1 Trips EWMA</p>

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
		<p>between an lower and upper voltage threshold. The response rate is then normalized to mass air flow rate and scaled resulting in a normalized integral value. The normalized integral is fed into a 1st order lag filter to update the final EWMA result. DTC P013B is set when the EWMA value exceeds the EWMA threshold.</p> <p>Note: This EWMA diagnostic employs two features, Fast Initial Response (FIR) and Rapid Step Response (RSR). The FIR feature is used following a code clear event or any event that results in erasure of the engine controller's non-volatile memory. The RSR feature is used when a step change in the test result is identified. Both these temporary features improve the EWMA result following a non-typical event by allowing multiple intrusive tests on a given trip until the total number of tests reach a calibration value.</p> <p>Secondary method:</p>			<p>Green Cat System Condition</p> <p>Low Fuel Condition Only when FuelLevelDataFault</p> <p>Post fuel cell</p> <p>DTC's Passed</p> <p>=====</p> <p>After above conditions are met: Fuel Enrich mode continued.</p> <p>=====</p>	<p>is above 22.0 grams/sec.</p> <p>= Not Valid, Green Cat System condition is considered valid until accumulated airflow is greater than 360,000 grams. Airflow accumulation is only enabled when estimated Cat temperature is above 600 Deg C and airflow is greater than 22.0 grams/sec.</p> <p>(Note: This feature is only enabled when the vehicle is new and cannot be enabled in service).</p> <p>= False</p> <p>= False</p> <p>= Enabled, refer to Multiple DTC Use - Block learn cells to enable Post oxygen sensor tests for additional info.</p> <p>P2270 P013E P013A P2271 P013F</p> <p>=====</p>		

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
		secondary O2 sensor does not achieve the required upper voltage threshold before the accumulate mass air low threshold is reached.			During these following must stay TRUE or the test will abort: $0.960 \leq \text{Base}$ $\text{Commanded E} \leq$.			

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
O2 Sensor Delayed Response Rich to Lean Bank 1 Sensor 2	P013E	<p>The P013E diagnostic is the second in a sequence of six intrusive secondary O2 monitors which include DTCs P2270, P013E, P013A, P2271, P013F, & P013B. This DTC determines if the secondary O2 sensor has an initial delayed response to an A/F change from Rich to Lean and thereby can no longer be used for secondary O2 sensor fuel control or for catalyst monitoring. This diagnostic commands fuel cut off while monitoring the sensor signal and the accumulated mass air flow.</p> <p>This fault is set if the secondary O2 sensor does not achieve the required voltage before the accumulated mass air flow threshold is reached.</p>	<p>Post O2 sensor voltage</p> <p>AND</p> <p>The Accumulated mass air flow monitored during the Delayed Response Test under DFCO</p> <p>DFCO begins after:</p> <p>1) Catalyst has been rich for a minimum of</p> <p>AND</p> <p>2) Catalyst Rich Accumulation Air Flow is</p>	<p>> 450 mvolts</p> <p>> 26 grams</p> <p>> 1 secs</p> <p>≥ 5.0grams</p>	<p>No Active DTC's</p> <p>B1S2 DTC's Not Active this key cycle</p> <p>System Voltage Learned heater resistance</p> <p>Green O2S Condition</p>	<p>TPS_ThrottleAuthorityDefaulted</p> <p>ECT_Sensor_FA</p> <p>IAT_SensorFA</p> <p>MAF_SensorFA</p> <p>MAP_SensorFA</p> <p>AIR_System_FA</p> <p>FuelInjectorCircuit_FA</p> <p>FuelTrimSystemB1_FA</p> <p>FuelTrimSystemB2_FA</p> <p>EngineMisfireDetected_FA</p> <p>Ethanol Composition Sensor FA</p> <p>O2S_Bank_1_TFTKO</p> <p>O2S_Bank_2_TFTKO</p> <p>P013A, P013B, P013F, P2270 or P2271</p> <p>> 10.0 Volts</p> <p>= Valid (the heater resistance has learned since NVM reset, see enable conditions for "HO2S Heater Resistance DTC's")</p> <p>= Not Valid,</p> <p>Green O2S condition is considered valid until the accumulated air flow is greater than</p> <p>Multiple DTC Use_Green Sensor Delay Criteria - Limit</p> <p>for the following locations:</p> <p>B1S2, B2S2 (if applicable)</p> <p>in Supporting Tables tab.</p> <p>Airflow accumulation is only enabled when airflow</p>	<p>Frequency: Once per trip</p> <p>Note: if NaPOPD_b_ResetFastRespFunc = FALSE for the given Fuel Bank OR NaPOPD_b_RapidResponseActive = TRUE, multiple tests per trip are allowed.</p>	<p>Type B, 2 Trips</p>

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
					<p>Low Fuel Condition Only when FuelLevelDataFault</p> <p>Post fuel cell</p> <p>Crankshaft Torque</p> <p>DTC's Passed</p> <p>Number of fueled cylinders =====</p> <p>After above conditions are met: DFCO mode entered (wo driver initiated pedal input).</p>	<p>is above 22.0 grams/sec.</p> <p>= False</p> <p>= False</p> <p>= Enabled, refer to Multiple DTC Use - Block learn cells to enable Post oxygen sensor tests for additional info. < 100.0 Nm</p> <p>P2270</p> <p>≤ 3 cylinders =====</p>		

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
O2 Sensor Delayed Response Lean to Rich Bank 1 Sensor 2	P013F	<p>The P013F diagnostic is the fifth in a sequence of six intrusive secondary O2 monitors which include DTCs P2270, P013E, P013A, P2271, P013F, & P013B. This DTC determines if the secondary O2 sensor has an initial delayed response to an A/F change from Lean to Rich and thereby can no longer be used for secondary O2 sensor fuel control or for catalyst monitoring. This diagnostic increases the delivered fuel while monitoring the sensor signal and the accumulated mass air flow.</p> <p>This fault is set if the secondary O2 sensor does not achieve the required voltage before the accumulated mass air flow threshold is reached.</p>	<p>Post O2 sensor voltage</p> <p>AND</p> <p>The Accumulated mass air flow monitored during the Delayed Response Test</p>	<p>< 300 mvolts</p> <p>> 179 grams</p>	<p>No Active DTC's</p> <p>B1S2 DTC's Not Active this key cycle</p> <p>System Voltage Learned heater resistance</p> <p>Green O2S Condition</p>	<p>TPS_ThrottleAuthorityDefaulted ECT_Sensor_FA IAT_SensorFA MAF_SensorFA MAP_SensorFA AIR_System_FA FuelInjectorCircuit_FA FuelTrimSystemB1_FA FuelTrimSystemB2_FA EngineMisfireDetected_FA Ethanol Composition Sensor FA O2S_Bank_1_TFTKO O2S_Bank_2_TFTKO</p> <p>P013A, P013B, P013E, P2270 or P2271</p> <p>> 10.0 Volts = Valid (the heater resistance has learned since NVM reset, see enable conditions for "HO2S Heater Resistance DTC's")</p> <p>= Not Valid, Green O2S condition is considered valid until the accumulated air flow is greater than Multiple DTC Use_Green Sensor Delay Criteria - Limit for the following locations: B1S2, B2S2 (if applicable) in Supporting Tables tab. Airflow accumulation is only enabled when airflow</p>	<p>Frequency: Once per trip Note: if NaPOPD_b_Res etFastRespFunc = FALSE for the given Fuel Bank OR NaPOPD_b_Rap idResponseActiv e = TRUE, multiple tests per trip are allowed</p>	Type B, 2 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
					<p>Green Cat System Condition</p> <p>Low Fuel Condition Only when FuelLevelDataFault</p> <p>Post fuel cell</p> <p>DTC's Passed</p> <p>Number of fueled cylinders =====</p> <p>After above conditions are met: Fuel Enrich mode entered. =====</p> <p>During this test the</p>	<p>s a ove . grams sec.</p> <p>= Not Valid, Green Cat System condition is considered valid until accumulated airflow is greater than 360,000 grams. Airflow accumulation is only enabled when estimated Cat temperature is above 600 Deg C and airflow is greater than 22.0 grams/sec. (Note: This feature is only enabled when the vehicle is new and cannot be enabled in service).</p> <p>= False</p> <p>= False</p> <p>= Enabled, refer to Multiple DTC Use - Block learn cells to enable Post oxygen sensor tests for additional info.</p> <p>P2270 P013E P013A P2271</p> <p>≥ 1 cylinders =====</p>		

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
					following must stay TRUE or the test will abort: 0.960 ≤ Base Commanded EQR ≤ 1.010			

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
O2S Heater Performance Bank 1 Sensor 2) (For Single Bank Exhaust Only	P0141	<p>This DTC determines if the O2 sensor heater is functioning properly by monitoring the current through the heater circuit. This test compares the measured heater current (monitored thru the low side driver) and compares it to the expected values (over the voltage range provided) for the released sensor.</p> <p>The diagnostic failure counter is incremented if the heater current is outside the expected range. This DTC is set based on the fail and sample counters.</p>	Heater Current outside of the expected range of	0.3 > amps > 2.5	<p>No Active DTC's System Voltage Heater Warm-up delay O2S Heater device control B1S1 O2S Heater Duty Cycle</p> <p>All of the above met for</p>	<p>ECT_Sensor_FA > 10.0 Volts = Complete</p> <p>= Not active</p> <p>> zero</p> <p>> 120 seconds</p>	<p>8 failures out of 10 samples</p> <p>Frequency: 3 tests per trip 30 seconds delay between tests and 1 second execution rate.</p>	Type B, 2 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
O2 Sensor Delayed Response Rich to Lean Bank 1 Sensor 1) (For use w/o WRAF	P015A	<p>DTC P015A detects that the primary oxygen sensor for Bank 1 has delayed response when the air fuel ratio transitions from rich to lean condition. This diagnostic runs simultaneously with the intrusive secondary O2 monitor rich to lean tests (P013E / P013A / P2271), which commands fuel cut off.</p> <p>Note: The Primary method is used when the primary O2 sensor signal transitions from above to below the O2 voltage threshold, otherwise the Secondary method is used.</p> <p>Primary method: The P015A diagnostic measures the primary O2 sensor response time between a rich condition above a starting voltage threshold and a lower voltage threshold. The response time is then scaled and normalized to mass air flow rate, engine speed, Baro, and intake air temperature resulting in a normalized delay</p>	<p>Primary Method: The EWMA of the Pre O2 sensor normalized R2L time delay value. The EWMA repass limit is The EWMA calculation uses a 0.25 coefficient. This method calculates the result when the Pre O2 sensor voltage is</p> <p>OR</p> <p>Secondary Method: The Accumulated time monitored during the R2L Delayed Response Test.</p> <p>AND</p> <p>Pre O2 sensor voltage is</p>	<p>> 0.50 EWMA(sec) ≤ 0.40 EWMA (sec)</p> <p>< 550 mvolts</p> <p>≥ 2.5 Seconds</p> <p>> 100.0 mvolts</p>	<p>No Active DTC's</p> <p>System Voltage EGR Device Control Idle Device Control Fuel Device Control AIR Device Control</p> <p>Low Fuel Condition Only when FuelLevelDataFault</p> <p>Green O2S Condition</p>	<p>TPS_ThrottleAuthorityDefaulted MAP_SensorFA IAT_SensorFA ECT_Sensor_FA AmbientAirDefault MAF_SensorFA EvapPurgeSolenoidCircuit_FA EvapFlowDuringNonPurge_FA EvapVentSolenoidCircuit_FA EvapSmallLeak_FA EvapEmissionSystem_FA FuelTankPressureSnrCkt_FA FuelInjectorCircuit_FA AIR System FA FuelTrimSystemB1_FA FuelTrimSystemB2_FA EthanolCompositionSensor_FA EngineMisfireDetected_FA P0131, P0132, P013A, P013B, P013E, P013F, P2270, P2271</p> <p>> 10.0 Volts = Not active = Not active = Not active = Not active</p> <p>= False = False</p> <p>= Not Valid, Green O2S condition is</p>	<p>Frequency: Once per trip Note: if NaESPD_b_Fast InitResplsActive = TRUE for the given Fuel Bank OR NaESPD_b_RapidResponseIsActive = TRUE, multiple tests per trip are allowed</p>	Type A, 1 Trips EWMA

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
		<p>value. The normalized delay is fed into a 1st order lag filter to update the final EWMA result. DTC P015A is set when the EWMA value exceeds the EWMA threshold.</p> <p>Note: This EWMA diagnostic employs two features, Fast Initial Response (FIR) and Rapid Step Response (RSR). The FIR feature is used following a code clear event or any event that results in erasure of the engine controller's non-volatile memory. The RSR feature is used when a step change in the test result is identified. Both these temporary features improve the EWMA result following a non-typical event by allowing multiple intrusive tests on a given trip until the total number of tests reach a calibration value.</p> <p>Secondary method: This fault is set if the primary O2 sensor does not achieve the required lower voltage threshold before a delay time threshold is reached.</p>			<p>O2 Heater (pre sensor) on for Learned Htr resistance</p> <p>Engine Coolant (Or OBD Coolant Enable Criteria</p> <p>IAT Engine run Accum</p> <p>Engine Speed to initially enable test Engine Speed range to keep test enabled (after initially enabled)</p> <p>Engine Airflow Vehicle Speed to initially enable test Vehicle Speed range to keep test enabled (after initially enabled)</p> <p>ose oop n egra</p>	<p>considered valid until the accumulated air flow is greater than</p> <p>Multiple DTC Use_Green Sensor Delay Criteria - Limit</p> <p>for the following locations: B1S1, B2S1 (if applicable) in Supporting Tables tab. Airflow accumulation is only enabled when airflow is above 22.0 grams/sec.</p> <p>≥ 40 seconds = Valid (the heater resistance has learned since NVM reset, see enable conditions for "HO2S Heater Resistance DTC's")</p> <p>> 62 °C = TRUE)</p> <p>> -40 °C > 30 seconds</p> <p>1,250 ≤ RPM ≤ 2,600</p> <p>1,100 ≤ RPM ≤ 2,750</p> <p>2.5 ≤ gps ≤ 11.0</p> <p>34.2 ≤ MPH ≤ 74.6</p> <p>31.7 ≤ MPH ≤ 82.0</p> <p>. n .</p>		

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
					ose oop c ve Evap Ethanol Estimation in Progress Baro Post fuel cell EGR Intrusive diagnostic All post sensor heater delays eater post sensor on Time Predicted Catalyst temp Fuel State ===== All o the above met or a least 3.0 seconds, and t en t e orce at c intrusive stage is requested. ===== Pre O2S voltage B1S1 at end o at Rich stage Fuel State um er o ue e cylinders ===== A ter above conditions are met: DF Mode is en ere wo r ver	= Please see Closed Loop na e lari ication in Supporting Tables). not in control of purge = Not Active Please see “Ethanol Estimation in Progress” in Supporting Tables). > 70 kpa = enabled = not active = not active ≥ 60.0 sec 600 ≤ °C ≤ 850 = DFCO possible ===== ===== ≥ mvolts = DFCO active ≤ 3 cylinders =====		

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
					initiated pedal input).			

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
O2 Sensor Delayed Response Lean to Rich Bank 1 Sensor 1) (For use w/o WRAF	P015B	<p>DTC P015B detects that the primary oxygen sensor for Bank 1 has delayed response when the air fuel ratio transitions from lean to rich condition. This diagnostic runs simultaneously with the intrusive secondary O2 monitor lean to rich tests (P013F / P013B), which commands fuel enrichment.</p> <p>Note: The Primary method is used when the primary O2 sensor signal transitions from lean condition to above the O2 voltage threshold, otherwise the Secondary method is used.</p> <p><u>Primary method:</u> The P015B diagnostic measures the primary O2 sensor response time between a lean condition and a higher voltage threshold. The response time is then scaled and normalized to mass air flow rate, engine speed, Baro, and intake air temperature resulting in a normalized delay value. The normalized delay is fed into a 1st</p>	<p>Primary method: The EWMA of the Pre O2 sensor normalized L2R time delay value. The EWMA repass limit is The EWMA calculation uses a 0.25 coefficient.</p> <p>OR</p> <p>Secondary method: The Accumulated time monitored during the L2R Delayed Response Test.</p> <p>AND</p> <p>Pre O2 sensor voltage is</p> <p>OR</p> <p>At end of Cat Rich stage the Pre O2 sensor output is</p>	<p>> 0.50 EWMA (sec) ≤ 0.41 EWMA (sec)</p> <p>≥ 4.5 Seconds</p> <p>< 350 mvolts</p> <p>< 690 mvolts</p>	<p>No Active DTC's</p> <p>P015A test is complete and</p> <p>System Voltage EGR Device Control Idle Device Control Fuel Device Control AIR Device Control</p> <p>Low Fuel Condition Only when FuelLevelDataFault</p>	<p>TPS_ThrottleAuthorityDefaulted MAP_SensorFA IAT_SensorFA ECT_Sensor_FA AmbientAirDefault MAF_SensorFA EvapPurgeSolenoidCircuit_FA EvapFlowDuringNonPurge_FA EvapVentSolenoidCircuit_FA EvapSmallLeak_FA EvapEmissionSystem_FA FuelTankPressureSnrCkt_FA FuelInjectorCircuit_FA AIR System FA FuelTrimSystemB1_FA FuelTrimSystemB2_FA EthanolCompositionSensor_FA EngineMisfireDetected_FA P0131, P0132, P013A, P013B, P013E, P013F, P015A, P2270, P2271</p> <p>= Passed</p> <p>> 10.0 Volts = Not active = Not active = Not active = Not active</p> <p>= False</p> <p>= False</p>	<p>Frequency: Once per trip Note: if NaESPD_b_Fast InitResplsActive = TRUE for the given Fuel Bank OR NaESPD_b_RapidResponseIsActive = TRUE, multiple tests per trip are allowed</p>	Type A, 1 Trips EWMA

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
		<p>order lag filter to update the final EWMA result. DTC P015B is set when the EWMA value exceeds the EWMA threshold.</p> <p>Note: This EWMA diagnostic employs two features, Fast Initial Response (FIR) and Rapid Step Response (RSR). The FIR feature is used following a code clear event or any event that results in erasure of the engine controller's non-volatile memory. The RSR feature is used when a step change in the test result is identified. Both these temporary features improve the EWMA result following a non-typical event by allowing multiple intrusive tests on a given trip until the total number of tests reach a calibration value.</p> <p><u>Secondary method:</u> This fault is set if the primary O2 sensor does not achieve the required higher voltage threshold before a delay time threshold is reached.</p>			<p>Green O2S Condition</p> <p>O2 Heater (pre sensor) on for Learned Htr resistance</p> <p>Engine Coolant (Or OBD Coolant Enable Criteria</p> <p>IAT Engine run Accum</p> <p>Engine Speed to initially enable test Engine Speed range to keep test enabled (after initially enabled)</p> <p>Engine Airflow Vehicle Speed to initially enable test Vehicle Speed range to keep test enabled (after</p>	<p>= Not Valid, Green O2S condition is considered valid until the accumulated air flow is greater than</p> <p>Multiple DTC Use_Green Sensor Delay Criteria - Limit for the following locations: B1S1, B2S1 (if applicable) in Supporting Tables tab. Airflow accumulation is only enabled when airflow is above 22.0 grams/sec.</p> <p>≥ 40 seconds = Valid (the heater resistance has learned since NVM reset, see enable conditions for "HO2S Heater Resistance DTC's")</p> <p>> 62°C = TRUE)</p> <p>> -40 °C > 30 seconds</p> <p>1,250 ≤ RPM ≤ 2,600</p> <p>1,100 ≤ RPM ≤ 2,750</p> <p>2.5 ≤ gps ≤ 11.0 34.2 ≤ MPH ≤ 74.6</p>		

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
					initially enabled)	31.7 ≤ MPH ≤ 82.0		
					Closed loop integral Closed Loop Active	0.85 ≤ C/L Int ≤ 1.07 = TRUE (Please see “ Closed Loop Enable Clarification ” in Supporting Tables).		
					Evap	not in control of purge		
					Ethanol Estimation in Progress	= Not Active (Please see “ Ethanol Estimation in Progress ” in Supporting Tables).		
					Baro	> 70 kpa		
					Post fuel cell	= enabled		
					EGR Intrusive diagnostic	= not active		
					All post sensor heater delays	= not active		
					O2S Heater (post sensor) on Time	≥ 60.0 sec		
					Predicted Catalyst temp	600 ≤ °C ≤ 850		
					Fuel State	= DFCO inhibit		
					Number of fueled cylinders	≥ 1 cylinders		
					=====	=====		
					When above conditions are met: Fuel Enrich mode is entered.			
					=====	=====		
					During this test: Engine Airflow must stay between: and the delta Engine Airflow over 12.5msec	0 ≤ gps ≤ 10		

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
					must be :	≤ 5.0 gps		

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Fuel System Too Lean Bank 1	P0171	<p>Determines if the primary fuel control system for Bank 1 is in a lean condition, based on the filtered long-term and short-term fuel trim. A normally operating system operates centered around long-term fuel trim metric of 1.0. For lean conditions extra fuel trim is required therefor values > 1.0 indicate a Lean condition.</p> <p>A fault is determined, when the long term fuel metric exceeds the threshold value. In addition to the long-term fuel trim limit, the short-term fuel trim metric can be monitored and the fault sets once both threshold values are exceeded. The short-term fuel trim metric is only monitored on programs that have acceptable emissions when the long-term fuel metric reaches its full authority.</p>	<p>The filtered long-term fuel trim metric</p> <p>AND</p> <p>The filtered short-term fuel trim metric (Note: any value below 0.95 effectively nullifies the short-term fuel trim criteria)</p>	<p>>= 1.385</p> <p>>= 0.100</p> <p>If a fault has been detected the long-term fuel trim metric must be < 1.385 and the short-term fuel trim metric must be < 2.000 to repass the diagnostic.</p>	<p>The primary fuel trim diagnostic is enabled</p> <p>Engine speed BARO Coolant Temp</p> <p>Coolant Temp MAP Inlet Air Temp MAF Fuel Level</p> <p>Long Term Fuel Trim data accumulation:</p> <p>Sometimes, certain Long-Term Fuel Trim Cells are not utilized for control and/or diagnosis</p> <p>Closed Loop Long Term FT</p>	<p>500 <rpm< 6,300 > 70 kPa > -20 °C (or OBD Coolant Enable Criteria = TRUE) < 130 °C 14 <kPa< 255 -20 <°C< 150 1 <g/s< 1,000 > 10 % or if fuel sender is faulty the diagnostic will bypass the fuel level criteria.</p> <p>> 80.0 seconds of data must accumulate on each trip, with at least 50.0 seconds of data in the current fuel trim cell before a pass or fail decision can be made.</p> <p>(Please see P0171_P0172_P0174_P0175 Long-Term Fuel Trim Cell Usage in Supporting Tables for a list of cells utilized for diagnosis)</p> <p>Enabled Enabled (Please see "Closed Loop Enable Clarification" and "Long</p>	Frequency: 100 ms Continuous Loop	Type B, 2 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
					<p>EGR Diag. Catalyst Diag. Post O2 Diag. Device Control EVAP Diag.</p> <p>No active DTC:</p>	<p>Term FT Enable Criteria" in Supporting Tables.)</p> <p>Intrusive Test Not Active Intrusive Test Not Active Intrusive Test Not Active Not Active Large Leak Diagnostic (P0455) Not Active</p> <p>IAC_SystemRPM_FA MAP_SensorFA MAF_SensorFA MAF_SensorTFTKO AIR_System FA EvapExcessPurgePsbI_F A Ethanol Composition Sensor FA FuelInjectorCircuit_FA EngineMisfireDetected_F A EGRValvePerformance_F A EGRValveCircuit_FA MAP_EngineVacuumStat us AmbPresDfltStatus TC_BoostPresSnsrFA O2S_Bank_1_Sensor_1_ FA</p>		

21OBDG03C ECM Summary Tables

[illegible]

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
		<p>term fuel trim metric is only monitored on programs that have acceptable emissions when the long-term fuel metric reaches its full authority.</p> <p>Once purge is enabled if the filtered Purge Long Term Fuel Trim metric > 0.790 , the test passes without intrusively checking the filtered Non-Purge Long Term Fuel Trim metric. However if the filtered Purge Long Term Fuel Trim metric is <= 0.790 , the Intrusive test is invoked. The purge is ramped off to determine if excess purge vapor is the cause of the rich condition. If during 2 out of 3 intrusive segments, the filtered Purge Long Term Fuel Trim metric <= 0.770 the fault will set.</p> <p>Performing intrusive tests too frequently may also affect EVAP and EPAIII emissions, and the execution frequency of other diagnostics. This is why the intrusive test is operated over several</p>		<p>term fuel trim metric must be > 0.000 to repass the diagnostic. The intrusive test will be enabled at long-term fuel metric values < 0.79 until the diagnostic repasses after a failure.</p>		<p>If the accumulated purge volume is > 0.0 grams, the intrusive test will not be inhibited even if Purge Vapor Fuel is > 100.0 %.</p>	<p>time to purge excess vapors from the canister. During this period, fuel trim will pass if the filtered Purge Long Term Fuel Trim metric > 0.790 for at least 200.0 seconds, indicating that the canister has been purged.</p>	

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
		segments allowing Purge to renable between segments. Likewise, for these reasons, if after the 3 intrusive segments the diagnostic continues to pass, there is a delay period of 300 seconds to allow sufficient time to purge excess vapors from the canister, before re-evaluating a Rich condition if it still exists.						

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Fuel Pressure Sensor "B" Circuit Range/ Performance	P018B	<p>This DTC detects a fuel pressure sensor response stuck within the normal operating range using an intrusive test (as follows)</p> <p>a] Intrusive Test Trigger: 1] Fuel Pump Duty Cycle Clamped Time (min or max duty cycle) >= 5 sec</p> <p>Or 2] Fuel Pres Err Variance <= calibration value KeFRPD_cmp_FPSS_MinPres Variance (typically 0.3 to 0.6);</p> <p>Otherwise, Report status as Pass</p> <p>b] Intrusive test freq limit: 60 sec between intrusive tests that pass,</p> <p>c] Intrusive test Fuel Flow limit: Fuel Flow Actual < Max allowed Fuel Flow rate</p>	Absolute value of fuel pressure change (as sensed during intrusive test)	<= 30 kPa	<p>a] Diagnostic Enabled</p> <p>b] Engine Run Time</p> <p>c] Engine Fuel Flow</p> <p>d] Fuel Pump Control Enabled</p> <p>e] Fuel Pump Control State</p> <p>f] Emissions Fuel Level Low</p> <p>g] Validity status VeFRPD_b_FPSS_DataIntegrityOK</p> <p>IF [1] FRP Circuit Low Fault Active (DTC P018C) [2] FRP Circuit High Fault Active (DTC P018D) [3] Fuel Pump Circuit Low Fault Active (DTC P0231) [4] Fuel Pump Circuit High Fault Active (DTC P0232) [5] Fuel Pump Circuit Open Fault Active (DTC P023F) [6] Reference Voltage Fault Status (DTC P0641) [7] Fuel Pump Control Module Driver Over-temperature Fault Active (DTC P1255) [8] Fuel Pump Driver Mod</p>	<p>a] == TRUE</p> <p>b] >= 5.00 sec</p> <p>c] > 0.05 g / sec</p> <p>d] == TRUE</p> <p>e] Normal OR Fuel Pres Sensor Stuck Ctrl (rationality)</p> <p>f] <> True</p> <p>g] == TRUE</p> <p>IF [1] <> True [2] <> True [3] <> True [4] <> True [5] <> True [6] <> Active This Key [7] <> True [8] <> True</p>	<p>1 sample / 12.5 millisec</p> <p>Intrusive Test Duration: Fuel Flow - related (5 to 12 sec)</p>	Type B, 2 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
					Ign Sw RunStart Pstn Ckt Low Fault Active (DTC P129D) [9] Fuel Pump Driver Control Mod Enable Ckt Perf Fault Active(DTC P12A6)	[9] <> True		

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Fuel Pressure Sensor "B" Circuit Low	P018C	This DTC detects if the fuel pressure sensor circuit is shorted low	Fuel Pressure Sensor Voltage Percent, 5.0V Nominal ((Abs(5.0V - SensorV_actual) /5.0V) *100)	< 4.00 % or [0 kPa ga]	Ignition circuit input state	High (Run or Crank)	64 failures / 80 samples 1 sample/12.5 ms	Type B, 2 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Fuel Pressure Sensor "B" Circuit High	P018D	This DTC detects if the fuel pressure sensor circuit is shorted high	Fuel Pressure Sensor Voltage Percent, 5.0V Nominal ((Abs(5.0V - SensorV_actual) /5.0V) *100)	> 96.00 % or [743 kPa ga]	Ignition circuit input state	High (Run or Crank)	64 failures / 80 samples 1 sample/12.5 millisec	Type B, 2 Trips

210BDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
SENT SIDI High Pressure Sensor Performance	P0191	The DTC determines if there is a skewed control fuel rail sensor (Sensor1) via a comparison to diagnostic sensor (sensor2) continuously when the engine is running and the commanded pressure is steady.	<p>Primary sensor (P1) vs. Secondary sensor (P2) performance rationality</p> <p>((Low Limit fail Filtered Fuel Control Error)</p> <p>OR</p> <p>(High Limit Fail: Filtered Fuel Control Error))</p> <p>AND</p> <p>(Filtered Absolute delta between sensor1 and sensor2</p>	<p><=</p> <p>P0191 - Low fail limit of fuel control due to pressure sensor skewed low (See supporting table)</p> <p>>=</p> <p>P0191 - High fail limit of fuel control due to high pressure sensor skewed High (see Supporting table)</p> <p>>= 1.00 mpa</p> <p>Note: fuel control error is calcuated based on the squerroot of senor1 divided by sensor2, this value is filter to ensure proper failure detection.</p> <p>Absolute delta between sensor1 and sensor2 value is filter to ensure proper failure detection.</p>	<p>Commanded Pressure rate of change (increasing or dercresing)</p> <p>for a period of time</p>	<p>< 3.00 mpa</p> <p>>= 1.25 seconds</p> <p>Enabled when a code clear is not active or not exiting device control</p>	<p>Filter Fuel Control Error term and Absolute delta between sensor1 and sensor2 exceed Low or High Fail limit for a duration >= 1.50 seconds</p> <p>This is diagnostic runs Continuous</p>	Type A, 1 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
SENT Fuel Rail Pressure Sensor 1 Out of Range	P0192	<p>This DTC diagnose SENT high pressure sensor 1 that is too low out of range.</p> <p>If the sensor digital value (representing the reference voltage) is below the lower digital threshold, the low fail counter then increments. If the low fail counter reaches its threshold then a fail is reported. A pass is reported for this DTC if the low sample counter reaches its threshold.</p>	High Pressure Rail Sensor 1 SENT digital read value	=< 66			<p>Time Based: 400 Failuer out of 500 Samples 6.25 ms per Sample Continuous</p>	Type A, 1 Trips

210BDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Coolant Temperature Dropped Below Diagnostic Monitoring Temperature	P01F0	This DTC detects an unexplained cooling system cool down below the OBD monitoring threshold during normal operating conditions. This check is run throughout the key cycle.	For this application the "type" cal (KeTHMG_b_TMS_ElectHstEquipped) = 1 If the type cal is equal to one, the application has an electrically heated t-stat, if equal to zero the the application has an non heated t-stat. See appropriate section below. ***** Type cal above = 0 (non - heated t-stat) == == == ==	≤ 84.9 Deg C	No Active DTC's	ECT_Sensor_Ckt_FA VehicleSpeedSensor_FA OAT_PIEstFiltFA THMR_AWP_AuxPumpFA THMR_AHV_FA THMR_SWP_Control_FA EngineTorqueEstInaccuracy ECT_Sensor_Perf_FA THMR_SWP_NoFlow_FA THMR_SWP_FlowStuckOn_FA	32 seconds out of a 40 seconds window Continuous	Type B, 2 Trips
			Engine coolant temperature ***** Type cal above = 1 (Electrically heated t-stat) == == == ==		Engine Runtime Distance traveled this key cycle Ambient air pressure Ambient air temperature ***** Engine coolant temperature	≥ 20.0 seconds ≥ 0.8 km ≥ 55.0 kPa ≥ -9.0 Deg C		
			Engine coolant temperature	≤ 60.0 Deg C	At least once during the key cycle Type 0 (non-heated t-stat) Type 1 (Electrically heated T-stat) ***** Heat to coolant	≥ 86 Deg C ≥ 78.9 to 85.9 Deg C Cool Down Diagnostic ≥ Min Heat to Coolant		
			DFCO time Thermostat duty cycle RPM Active Fuel Management is not in	≤ 0.0 seconds ≤ 35.0 % ≤ 8,192 Half Cylinder Mode				

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Injector 1 Open Circuit - (SID1)	P0201	<p>Controller specific output driver circuit diagnoses Injector 1 low sided driver for an open circuit failure when the output is powered off by comparing a voltage measurement to controller specific voltage thresholds.</p> <p>Or</p> <p>Controller specific output driver circuit diagnoses Injector 1 high sided driver for an open circuit failure when the output is powered on by comparing a voltage measurement to controller specific voltage thresholds.</p>	<p>Voltage measurement outside of controller specific acceptable range during driver off state indicates open circuit failure.</p> <p>Controller specific output driver circuit voltage thresholds are set to meet the following controller specification for an open circuit.</p> <p>Or</p> <p>Voltage measurement outside of controller specific acceptable range during driver on state indicates open circuit failure.</p> <p>Controller specific output driver circuit voltage thresholds are set to meet the following controller specification for an open circuit.</p>	<p>>= 200 KOhms impedance between signal and controller ground</p> <p>>= 200 KOhms impedance between signal and controller ground</p>	Battery Voltage Engine Run Time	<p>>= 11 Volts >= 5 Seconds</p> <p>P062B not FA or TFTK</p>	<p>10.00 failures out of 20.00 samples</p> <p>100 ms /sample Continuous</p>	Type A, 1 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Injector 2 Open Circuit - (SID1)	P0202	<p>Controller specific output driver circuit diagnoses Injector 2 low sided driver for an open circuit failure when the output is powered off by comparing a voltage measurement to controller specific voltage thresholds.</p> <p>Or</p> <p>Controller specific output driver circuit diagnoses Injector 2 high sided driver for an open circuit failure when the output is powered on by comparing a voltage measurement to controller specific voltage thresholds.</p>	<p>Voltage measurement outside of controller specific acceptable range during driver off state indicates open circuit failure.</p> <p>Controller specific output driver circuit voltage thresholds are set to meet the following controller specification for an open circuit.</p> <p>Or</p> <p>Voltage measurement outside of controller specific acceptable range during driver on state indicates open circuit failure.</p> <p>Controller specific output driver circuit voltage thresholds are set to meet the following controller specification for an open circuit.</p>	<p>>= 200 KOhms impedance between signal and controller ground</p> <p>>= 200 KOhms impedance between signal and controller ground</p>	<p>Battery Voltage</p> <p>Engine Run Time</p>	<p>>= 11 Volts</p> <p>>= 5 Seconds</p> <p>P062B not FA or TFTK</p>	<p>10.00 failures out of 20.00 samples</p> <p>100 ms /sample Continuous</p>	Type A, 1 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Injector 3 Open Circuit - (SID1)	P0203	<p>Controller specific output driver circuit diagnoses Injector 3 low sided driver for an open circuit failure when the output is powered off by comparing a voltage measurement to controller specific voltage thresholds.</p> <p>Or</p> <p>Controller specific output driver circuit diagnoses Injector 3 high sided driver for an open circuit failure when the output is powered on by comparing a voltage measurement to controller specific voltage thresholds.</p>	<p>Voltage measurement outside of controller specific acceptable range during driver off state indicates open circuit failure.</p> <p>Controller specific output driver circuit voltage thresholds are set to meet the following controller specification for an open circuit.</p> <p>Or</p> <p>Voltage measurement outside of controller specific acceptable range during driver on state indicates open circuit failure.</p> <p>Controller specific output driver circuit voltage thresholds are set to meet the following controller specification for an open circuit.</p>	<p>>= 200 KOhms impedance between signal and controller ground</p> <p>>= 200 KOhms impedance between signal and controller ground</p>	<p>Battery Voltage</p> <p>Engine Run Time</p>	<p>>= 11 Volts</p> <p>>= 5 Seconds</p> <p>P062B not FA or TFTK</p>	<p>10.00 failures out of 20.00 samples</p> <p>100 ms /sample Continuous</p>	Type A, 1 Trips

210BDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Injector 4 Open Circuit - (SID1)	P0204	<p>Controller specific output driver circuit diagnoses Injector 4 low sided driver for an open circuit failure when the output is powered off by comparing a voltage measurement to controller specific voltage thresholds.</p> <p>Or</p> <p>Controller specific output driver circuit diagnoses Injector 4 high sided driver for an open circuit failure when the output is powered on by comparing a voltage measurement to controller specific voltage thresholds.</p>	<p>Voltage measurement outside of controller specific acceptable range during driver off state indicates open circuit failure.</p> <p>Controller specific output driver circuit voltage thresholds are set to meet the following controller specification for an open circuit.</p> <p>Or</p> <p>Voltage measurement outside of controller specific acceptable range during driver on state indicates open circuit failure.</p> <p>Controller specific output driver circuit voltage thresholds are set to meet the following controller specification for an open circuit.</p>	<p>>= 200 KOhms impedance between signal and controller ground</p> <p>>= 200 KOhms impedance between signal and controller ground</p>	<p>Battery Voltage</p> <p>Engine Run Time</p>	<p>>= 11 Volts</p> <p>>= 5 Seconds</p> <p>P062B not FA or TFTK</p>	<p>10.00 failures out of 20.00 samples</p> <p>100 ms /sample Continuous</p>	Type A, 1 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
TPS2 Circuit Low	P0222	Detects a continuous or intermittent short low or open in TPS2 circuit by monitoring the TPS 2 sensor percent Vref and failing the diagnostic when the TPS percent Vref is too low. This diagnostic only runs when battery voltage is high enough.	TPS2 % Vref <	0.250 % Vref	Run/Crank voltage No 5V reference error or fault for # 4 5V reference circuit	> 6.41 Volts P06A3	79 /159 counts; 57 counts continuous; 3.125 ms /count in the ECM main processor	Type A, 1 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
TPS2 Circuit High	P0223	Detects a continuous or intermittent short high in TPS2 circuit by monitoring the TPS 2 sensor percent Vref and failing the diagnostic when the TPS percent Vref is too high. This diagnostic only runs when battery voltage is high enough.	TPS2 % Vref >	4.590 % Vref	Run/Crank voltage No 5V reference error or fault for # 4 5V reference circuit	> 6.41 Volts P06A3	79 /159 counts; 57 counts continuous; 3.125 ms /count in the ECM main processor	Type A, 1 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Fuel Pump Secondary Circuit Low [FPPM applications only]	P0231	This DTC detects if the fuel pump control circuit is shorted to low. Fuel Pump Power Driver device reports a Faulted state enumeration if current $\geq 18A$ [25A for high performance variants. FPDCM reports Not Faulted enumeration if current $< 18A$ FPDCM reports Indeterminate state enumeration if the circuit is not being evaluated during current decision loop due to other conditions.	Power driver output current (Fuel Pump Power Module Driver Circuit Ground Short enumeration)	Current $\geq 18.0 A$	a) Chassis Fuel Pres Sys Type configuration selection b) Diagnostic Enabled c) Fuel Pump Control Enable command d) Fuel Pump Control Enable time [FAFR FPPM GshtDlyThr] e) System Voltage f) FPDCM Driver Status Alive Rolling Count Sample Faulted g) Diagnostic feedback received	a) == FCBR Gas ECM FPPM Sys b) == TRUE c) == TRUE d) ≥ 40.00 seconds e) > 7.00 Volts f) $<> TRUE$ g) == TRUE	64.00 failures/ 80.00 samples 1 sample/12.5 millisec	Type A, 1 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Fuel Pump Secondary Circuit High [FPPM applications only]	P0232	<p>This DTC detects if the fuel pump control circuit is shorted to high voltage by measuring voltage offset relative to low state level of duty cycle pulse.</p> <p>Fuel Pump Power device reports a Faulted state enumeration if circuit voltage $\geq 4V$. FPPM reports Not Faulted enumeration if circuit voltage $< 4V$. FPPM reports Indeterminate state enumeration if the circuit is not being evaluated during current decision loop due to other conditions.</p>	Voltage offset relative to low state level of duty cycle pulse measured at fuel pump circuit	$> 4.0 V$	<p>a) Chassis Fuel Pres Sys Type configuration selection</p> <p>b) Diagnostic Enabled</p> <p>c) Diagnostic System Disabled</p> <p>d) Fuel Pump Control Enabled</p> <p>e) Arbitrated Fuel Pump Duty Cycle Rate of Change [FCBR]</p> <p>f) System voltage</p> <p>g) FPPM Driver Status Alive Rolling Count Sample Faulted</p> <p>h) Diagnostic serial data received</p>	<p>a) == FCBR Gas ECM FPPM Sys</p> <p>b) == TRUE</p> <p>c) \neq True</p> <p>d) == TRUE</p> <p>e) $\geq -100.0 \% / \text{sec}$</p> <p>f) $> 7.0 \text{ volts}$</p> <p>g) \neq True</p> <p>h) == TRUE</p>	<p>64 failures / 80 samples</p> <p>1 sample / 12.5 millisec</p>	Type B, 2 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Fuel Pump Secondary Circuit Open [FPPM applications only]	P023F	This DTC detects if the fuel pump control circuit is open Fuel Pump Power device reports a Faulted state enumeration if current <= 1A . FPPM reports Not Faulted enumeration if current > 1A. FPPM reports Indeterminate state enumeration if the circuit is not being evaluated during current decision loop due to other conditions.	Output driver current (Fuel Pump Power Module Driver Circuit Open enumeration)	Current <= 1.0 A	a) Chassis Fuel Pres Sys Type configuration selection b) Diagnostic Enabled c) Arbitrated Fuel Pump Duty Cycle (%) d] Fuel Pump Control Enable Faulted e] FPPM Fuel Pmp Driver Over-temperature Faulted f] FPPM Driver Status Alive Rolling Count Sample Faulted g] Diagnostic feedback received h] System Voltage	a) == FCBR Gas ECM FPPM Sys b) == TRUE c) > 48.40 % d] <> TRUE e] <> TRUE f] <> TRUE g] == TRUE h] > 11.00 Volts	40 failures / 80 samples 1 sample/12.5ms	Type A, 1 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Injector 1 Low side circuit shorted to ground (SIDI)	P0261	Controller specific output driver circuit diagnoses Injector 1 low sided driver for a short to ground failure when the output is powered off by comparing a voltage measurement to controller specific voltage thresholds.	Voltage measurement outside of controller specific acceptable range during driver off state indicates short to ground failure. Controller specific output driver circuit voltage thresholds are set to meet the following controller specification for a short to ground.	 ≤ 1 volt between signal and controller ground	Battery Voltage Engine Run Time	≥ 11 Volts ≥ 5 Seconds P062B not FA or TFTK	10.00 failures out of 20.00 samples 100 ms /sample Continuous	Type A, 1 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Injector 1 Low side circuit shorted to power (SIDI)	P0262	Controller specific output driver circuit diagnoses Injector 1 low sided driver for a short to power failure when the output is powered on by comparing a voltage measurement to controller specific voltage thresholds.	Voltage measurement outside of controller specific acceptable range during driver on state indicates short to power failure. Controller specific output driver circuit voltage thresholds are set to meet the following controller specification for a short to power.	25 amp >= through low side driver	Battery Voltage Engine Run Time	>= 11 Volts >= 5 Seconds P062B not FA or TFTK	10.00 failures out of 20.00 samples 100 ms /sample Continuous	Type A, 1 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Injector 2 Low side circuit shorted to ground (SIDI)	P0264	Controller specific output driver circuit diagnoses Injector 2 low sided driver for a short to ground failure when the output is powered off by comparing a voltage measurement to controller specific voltage thresholds.	Voltage measurement outside of controller specific acceptable range during driver off state indicates short to ground failure. Controller specific output driver circuit voltage thresholds are set to meet the following controller specification for a short to ground.	 ≤ 1 volt between signal and controller ground	Battery Voltage Engine Run Time	≥ 11 Volts ≥ 5 Seconds P062B not FA or TFTK	10.00 failures out of 20.00 samples 100 ms /sample Continuous	Type A, 1 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Injector 2 Low side circuit shorted to power (SIDI)	P0265	Controller specific output driver circuit diagnoses Injector 2 low sided driver for a short to power failure when the output is powered on by comparing a voltage measurement to controller specific voltage thresholds.	Voltage measurement outside of controller specific acceptable range during driver on state indicates short to power failure. Controller specific output driver circuit voltage thresholds are set to meet the following controller specification for a short to power.	25 amp >= through low side driver	Battery Voltage Engine Run Time	>= 11 Volts >= 5 Seconds P062B not FA or TFTK	10.00 failures out of 20.00 samples 100 ms /sample Continuous	Type A, 1 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Injector 3 Low side circuit shorted to ground (SIDI)	P0267	Controller specific output driver circuit diagnoses Injector 3 low sided driver for a short to ground failure when the output is powered off by comparing a voltage measurement to controller specific voltage thresholds.	Voltage measurement outside of controller specific acceptable range during driver off state indicates short to ground failure. Controller specific output driver circuit voltage thresholds are set to meet the following controller specification for a short to ground.	 ≤ 1 volt between signal and controller ground	Battery Voltage Engine Run Time	≥ 11 Volts ≥ 5 Seconds P062B not FA or TFTK	10.00 failures out of 20.00 samples 100 ms /sample Continuous	Type A, 1 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Injector 3 Low side circuit shorted to power (SIDI)	P0268	Controller specific output driver circuit diagnoses Injector 3 low sided driver for a short to power failure when the output is powered on by comparing a voltage measurement to controller specific voltage thresholds.	Voltage measurement outside of controller specific acceptable range during driver on state indicates short to power failure. Controller specific output driver circuit voltage thresholds are set to meet the following controller specification for a short to power.	25 amp >= through low side driver	Battery Voltage Engine Run Time	>= 11 Volts >= 5 Seconds P062B not FA or TFTK	10.00 failures out of 20.00 samples 100 ms /sample Continuous	Type A, 1 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Injector 4 Low side circuit shorted to ground (SIDI)	P0270	Controller specific output driver circuit diagnoses Injector 4 low sided driver for a short to ground failure when the output is powered off by comparing a voltage measurement to controller specific voltage thresholds.	Voltage measurement outside of controller specific acceptable range during driver off state indicates short to ground failure. Controller specific output driver circuit voltage thresholds are set to meet the following controller specification for a short to ground.	 ≤ 1 volt between signal and controller ground	Battery Voltage Engine Run Time	≥ 11 Volts ≥ 5 Seconds P062B not FA or TFTK	10.00 failures out of 20.00 samples 100 ms /sample Continuous	Type A, 1 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Injector 4 Low side circuit shorted to power (SIDI)	P0271	Controller specific output driver circuit diagnoses Injector 4 low sided driver for a short to power failure when the output is powered on by comparing a voltage measurement to controller specific voltage thresholds.	Voltage measurement outside of controller specific acceptable range during driver on state indicates short to power failure. Controller specific output driver circuit voltage thresholds are set to meet the following controller specification for a short to power.	25 amp >= through low side driver	Battery Voltage Engine Run Time	>= 11 Volts >= 5 Seconds P062B not FA or TFTK	10.00 failures out of 20.00 samples 100 ms /sample Continuous	Type A, 1 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Random Misfire Detected	P0300	These DTC's will determine if a random or a cylinder specific misfire is occurring by monitoring various terms derived from crankshaft velocity. The rate of misfire over an interval is compared to both emissions and catalyst damaging thresholds. The pattern of crankshaft acceleration after the misfire is checked to differentiate between real misfire and other sources of crank shaft noise.	Crankshaft Deceleration Value(s) vs. Engine Speed and Engine load		Engine Run Time	> 2 crankshaft revolution	Emission Exceedence = any (5) failed 200 rev blocks out of (16) 200 rev block tests	Type B, 2 Trips (Mil Flashes with Catalyst damage level of Misfire)
Cylinder 1 Misfire Detected	P0301		The equation used to calculate deceleration value is tailored to specific vehicle operating conditions.		Engine Coolant Temp	"ECT" If OBD Max Coolant Achieved = FALSE -12 °C < ECT Or if OBD Max Coolant Achieved = TRUE -12 °C < ECT < 127 °C		
Cylinder 2 Misfire Detected	P0302		The selection of the equation used is based on the 1st single cylinder continuous misfire threshold tables encountered that are not max of range. If all tables are max of range at a given speed/load, that speed load region is an Undetectable region see Algorithm Description Document for additional details.		Or If ECT at startup Then	< -12 °C If OBD Max Coolant Achieved = FALSE 21 °C < ECT If OBD Max Coolant Achieved = TRUE 21 °C < ECT < 127 °C	Failure reported for (1) Exceedence in 1st (16) 200 rev block tests, or (4) Exceedences thereafter.	
Cylinder 3 Misfire Detected	P0303							
Cylinder 4 Misfire Detected	P0304							
		Emissions Neutral Default Action: If consumed Emissions Neutral Default DTCs from other subsystems are set: Ignore Rough Road, Traction, Stability, and Antilock brake signals. If default action not activated, Misfire Monitor could complete less frequently or inaccurately. Default Action Latched for duration of Trip		- see details of thresholds on Supporting Tables Tab	System Voltage + Throttle delta - Throttle delta	9.00 < volts < 32.00 < 95.00 % per 25 ms < 95.00 % per 25 ms		
			SINGLE CYLINDER CONTINUOUS MISFIRE((Medres_Decel Medres_Jerk	> RufSCD_Decel AND > RufSCD_Jerk)	Early Termination option: (used on plug ins that may not have enough engine run time at end of trip for normal interval to complete.)	Not Enabled	OR when Early Termination Reporting = Enabled and engine rev > 1,000 revs and < 3,200 revs at end of trip	
			OR (Medres_Decel Medres_Jerk	> SCD_Decel AND > SCD_Jerk)				
			OR (Lores_Decel Lores_Jerk	> RufCyl_Decel AND > RufCyl_Jerk)				
			OR (Lores_Decel Lores_Jerk	> CylModeDecel AND > CylModeJerk)				
		Default Action: If Misfire P030x sets on some hybrid applications, the isolation damper	OR RevBalanceTime)	>RevMode_Decel				

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
		between engine and transmission can go into extreme resonance. Default action is to move rpm out of the resonance zone. If default action not activated, significant hardware damage could occur rendering vehicle inoperable.	<p>*****</p> <p>**This Feature not used on Gasoline engines**</p> <p>Combustion Modes that force selection of Idle Tables</p> <p>*****</p> <p>Other patterns of misfire use adjustments to the single cylinder continuous misfire threshold tables:</p> <p>RANDOM MISFIRE Use random misfire thresholds If no misfire for</p> <p>(Medres_Decel</p> <p>AND</p> <p>Medres_Jerk)</p> <p>OR (Medres_Decel</p> <p>AND</p> <p>Medres_Jerk)</p> <p>OR (Lores_Decel</p> <p>AND</p> <p>Lores_Jerk)</p>	<p>*****</p> <p>**This Feature not used on Gasoline engines**</p> <p>CombustModelIdleTbl in Supporting Tables</p> <p>*****</p> <p>> 6 Engine Cycles</p> <p>> RufSCD_Decel * Random_SCD_Decel</p> <p>>RufSCD_Jerk * Random_SCD_Jerk</p> <p>> SCD_Decel * Random_SCD_Decel</p> <p>> SCD_Jerk * Random_SCD_Jerk</p> <p>> RufCyl_Decel * RandomCylModDecel</p> <p>> RufCyl_Jerk * RandomCylModJerk</p>			<p>any Catalyst Exceedence = (1) 200 rev block as data supports for catalyst damage.</p> <p>Catalyst Failure reported with (1 or 3) Exceedences in FTP, or (1) Exceedence outside FTP.</p> <p>on nuous</p>	

210BDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
			OR (Lores_Decel AND Lores_Jerk) OR RevBalanceTime PAIRED CYLINDER MISFIRE If a cylinder & it's pair are above PAIR thresholds (Medres_Decel AND Medres_Jerk) OR (Medres_Decel AND Medres_Jerk) OR (Lores_Decel AND Lores_Jerk) OR (Lores_Decel AND Lores_Jerk)	> CylModeDecel * RandomCylModDecel > CylModeJerk * RandomCylModJerk > RevMode_Decel * RandomRevModDecl > RufSCD_Decel * Pair_SCD_Decel > RufSCD_Jerk * Pair_SCD_Jerk > SCD_Decel * Pair_SCD_Decel > SCD_Jerk * Pair_SCD_Jerk > RufCyl_Decel * PairCylModeDecel > RufCyl_Jerk * PairCylModeJerk > CylModeDecel * PairCylModeDecel > CylModeJerk * PairCylModeJerk				

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
			<p>OR (Revmode Active AND (within one engine cycle: 2nd largest Lores_Decel)</p> <p>AND Above TRUE for))</p> <p>BANK MISFIRE Cylinders above Bank Thresholds</p> <p>(Medres_Decel</p> <p>AND Medres_Jerk)</p> <p>OR (Medres_Decel</p> <p>AND Medres_Jerk)</p> <p>OR (Lores_Decel</p> <p>AND Lores_Jerk)</p> <p>OR (Lores_Decel</p> <p>AND Lores_Jerk)</p>	<p>> CylModeDecel * PairCylModeDecel</p> <p>> 50 engine cycles out of 100 engine cycles</p> <p>>= 4 cylinders</p> <p>> RufSCD_Decel * Bank_SCD_Decel</p> <p>> RufSCD_Jerk * Bank_SCD_Jerk</p> <p>> SCD_Decel * Bank_SCD_Decel</p> <p>> SCD_Jerk * Bank_SCD_Jerk</p> <p>> RufCyl_Decel * BankCylModeDecel</p> <p>> RufCyl_Jerk * BankCylModeJerk</p> <p>> CylModeDecel * BankCylModeDecel</p> <p>> CylModeJerk * BankCylModeJerk</p>				

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
			<p>CONSECUTIVE CYLINDER MISFIRE 1st cylinder uses single cyl continuous misfire thresholds; 2nd Cylinder uses: (Medres_Decel AND Medres_Jerk)</p> <p>OR (Medres_Decel AND Medres_Jerk)</p> <p>OR (Lores_Decel AND Lores_Jerk)</p> <p>OR (Lores_Decel AND Lores_Jerk)</p> <p>CYLINDER DEACTIVATION MODE (Active Fuel Managment)</p>	<p>> RufSCD_Decel * ConsecSCD_Decel</p> <p>> RufSCD_Jerk * ConsecSCD_Jerk</p> <p>> SCD_Decel * ConsecSCD_Decel</p> <p>> SCD_Jerk * ConsecSCD_Jerk</p> <p>> RufCyl_Decel * ConsecCylModDecel</p> <p>> RufCyl_Jerk * ConsecCylModeJerk</p> <p>> CylModeDecel * ConsecCylModDecel</p> <p>> CylModeJerk * ConsecCylModeJerk</p>				

210BDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
			<p>AFM: SINGLE CYLINDER CONTINUOUS MISFIRE (CylAfterDeacCyl_Decel AND CylAfterDeacCyl_Jerk)</p> <p>OR (CylBeforeDeacCylDecel AND CylBeforeDeacCyl_Jerk)</p> <p>AFM: RANDOM MISFIRE Use random misfire thresholds If no misfire for</p> <p>(CylAfterDeacCyl_Decel AND CylAfterDeacCyl_Jerk)</p> <p>(CylBeforeDeacCylDecel AND CylBeforeDeacCyl_Jerk)</p>	<p>> CylModeDecel * ClyAfterAFM_Decel</p> <p>> CylModeJerk * CylAfterAFM_Jerk</p> <p>> CylModeDecel * CylBeforeAFM_Decel</p> <p>> CylModeJerk * ClyBeforeAFM_Jerk</p> <p>> 6 Engine Cycles</p> <p>> CylModeDecel * ClyAfterAFM_Decel * RandomAFM_Decl</p> <p>> CylModeJerk * CylAfterAFM_Jerk * RandomAFM_Jerk</p> <p>> CylModeDecel * CylBeforeAFM_Decel * RandomAFM_Decl</p> <p>> CylModeJerk * ClyBeforeAFM_Jerk * RandomAFM_Jerk</p> <p>- see details on Supporting Tables Tab</p>				

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
			<p>Misfire Percent Emission Failure Threshold</p> <p>Misfire Percent Catalyst Damage</p> <p>When engine speed and load are less than the FTP calcs (3) catalyst damage exceedences are allowed.</p>	<p>≥ 2.13 % P0300</p> <p>> Catalyst_Damage_Misfire_Percentage in Supporting Tables whenever secondary conditions are met.</p> <p>≤ 0 FTP rpm AND ≤ 0 FTP % load</p>	<p>(at low speed/loads, one cylinder may not cause cat damage)</p> <p>Engine Speed Engine Load Misfire counts</p> <p>Engine Speed</p>	<p>> 1,800 rpm AND > 30 % load AND < 180 counts on one cylinder</p> <p>500 < rpm < ((Engine Over Speed Limit) - 150) OR 8,191)</p> <p>Engine speed limit is a function of inputs like Gear and temperature</p>	<p>4 cycle delay</p>	

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
						see EngineOverSpeedLimit in supporting tables		
					No active DTCs:	TPS_FA EnginePowerLimited MAF_SensorTFTKO MAP_SensorTFTKO IAT_SensorTFTKO ECT_Sensor_Ckt_TFTKO 5VoltReferenceB_FA CrankSensor_TFTKO CrankSensor_FA CamLctnIntFA CamLctnExhFA CamSensorAnyLctnTFTKO AnyCamPhaser_FA AnyCamPhaser_TFTKO AmbPresDfItStatus	4 cycle delay	
					P0315 & engine speed	> 1,000 rpm	4 cycle delay	
					Fuel Level Low	LowFuelConditionDiagnostic	500 cycle delay	
					Cam and Crank Sensors	in sync with each other	4 cycle delay	
					Misfire requests TCC unlock	Not honored because Transmission in hot mode or POPD intrusive diagnostic running	4 cycle delay	
					Fuel System Status	≠ Fuel Cut	4 cycle delay	
					Active FuelManagement	Transition in progress	0 cycle delay	
					Undetectable engine	Undetectable region	4 cycle delay	

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
					speed and engine load region	from Malfunction Criteria		
					Abusive Engine Over Speed	> 8,192 rpm	0 cycle delay	
					Below zero torque (except CARB approved 3000 rpm to redline triangle.)	< ZeroTorqueEngLoad or < ZeroTorqueAFM if AFM is active in Supporting Tables	4 cycle delay	
					Below zero torque: TPS Vehicle Speed	≤ 0.7 % (≤ 2.0 % in AFM) > 19 mph (> 19 mph AFM)	4 cycle delay	
					NEGATIVE TORQ AFM If deactivated cylinders appear to make power, torque is negative: DeactivatedCyl_Decel AND DeactivatedCyl_Jerk AND # of Deact Cyls Inverted	< DeacCylInversionDecel < DeacCylInversionJerk > 4 cylinders	0 cycle delay	
					EGR Intrusive test	if Active	12 cycle delay	
					Manual Trans	Clutch shift	4 cycle delay	
					Accel Pedal Position AND Automatic transmission shift	> 95.00 %	7 cycle delay	
					After Fuel resumes on Automatic shift containing Fuel Cut		2 Cylinder delay	

210BDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
					Delay if PTO engaged ***** **This Feature not used on Gasoline engines** Combustion Mode Driver cranks before Wait to Start lamp extinguishes Brake Torque ***** DRIVELINE RING FILTER After a low level misfire, another misfire may not be detectable until driveline ringing ceases. If no ringing seen, stop filter early. Filter Driveline ring: Stop filter early: ABNORMAL ENGINE SPEED OSCILLATION: (checks each "misfire" candidate in 100 engine	Enabled ***** = InfrequentRegen value in Supporting Tables IF TRUE > 199.99 % Max Torque ***** > "Ring Filter" # of engine cycles after misfire in Supporting Tables > "Number of Normals" # of engine cycles after misfire in Supporting Tables tab	4 cycle delay ***** 0 cycle delay WaitToStart cycle delay 0 cycle delay *****	

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
					<p>Cycle test to see if it looks like some disturbance like rough road (abnormal).)</p> <p>Used Off Idle, and while not shifting,</p> <p>TPS > 3 %</p> <p>Engine Speed > 1,000 rpm</p> <p>Veh Speed > 3 mph</p> <p>Auto Transmission not shifting</p> <p>individual candidate deemed abnormal if number of consecutive decelerating cylinders after "misfire": (Number of decels can vary with misfire detection equation)</p> <p>Consecutive decels while in SCD Mode</p> <p>Cyl Mode</p> <p>Rev Mode</p> <p>> Abnormal SCD Mode</p> <p>> Abnormal Cyl Mode</p> <p>> Abnormal Rev Mode</p> <p>in Supporting Tables</p> <p>At the end of 100 engine cycle test, the ratio of abnormal/candidate is checked to confirm if real misfire is present within the 100 engine cycles.</p> <p>abnormal candidates/ total candidates</p> <p>> 0.50 ratio</p> <p>discard 100 engine cycle test</p> <p>MISFIRE CRANKSHAFT</p>			

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
					<p>PATTERN RECOGNITION checks each "misfire" candidate in 100 engine Cycle test to see if overall crankshaft pattern looks like real misfire (recognized), or some disturbance like rough road (unrecognized). At the end of 100 engine cycle test, the ratio of unrecog/recognized is checked to confirm if real misfire is present within the 100 engine cycles. Typically used for checking a single misfire per engine cycle but can support some other patterns on some packages</p> <p>Pattern Recog Enabled:</p> <p>Pattern Recog Enabled during Cylinder Deac</p> <p>Pattern Recog Enabled consecutive cyl pattn</p> <p>Engine Speed Veh Speed</p> <p>The 1st check for "recognized" is the 1st fired cylinder after the misfire candidate should both accelerate and jerk an amount based acceleration and jerk of Single Cylinder Misfire</p>	<p>Enabled</p> <p>Not Enabled</p> <p>Enabled</p> <p>700 < rpm < 6,800 > 0.6 mph</p>		

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
					<p>thresholds in effect at that speed and load.</p> <p>(CylAfter_Accel AND CylAfter_Jerk)</p> <p>Additionally, the crankshaft is checked again a small calibratable number of cylinders later to see if the disturbance is still large like rough road, or has calmed down like real misfire. The size of disturbance is compared to a multiplier times the ddt_jerk value used to detect misfire at that speed and load. If there is repetitive misfire on consecutive engine cycles, the expected snap is adjusted due to the higher expected disturbance.</p> <p>Num of Cylinders after misfire to start check of crankshaft snap</p> <p>"misfire" recognized if: Crankshaft snap after: isolated "misfire"</p>	<p>> Misfire_decel * 1st_FireAftrMisfr_Acel</p> <p>> Misfire_Jerk * 1st_FireAftrMisfr_Jerk</p> <p>Or if AFM mode is active: > Misfire_decel * 1stFireAftrMisAcelAFM > Misfire_Jerk * 1stFireAfterMisJerkAFM</p> <p>2 Cylinders</p> <p>< Misfire_Jerk * SnapDecayAfterMisfire</p>		

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
					<p>repetative "misfire"</p> <p>At the end of 100 engine cycle test, the ratio of unrecog/recognized is checked to confirm if real misfire is present.</p> <p>Ratio of Unrecog/Recog</p> <p>*****</p> <p>NON-CRANKSHAFT BASED ROUGH ROAD:</p> <p>Rough Road Source *****</p> <p>IF Rough Road Source = WheelSpeedInECM ABS/TCS Wheel speed noise VSES</p> <p>AND No Emission Neutral Default Action DTCs</p> <p>*****</p> <p>IF Rough Road Source = "FromABS" ABS/TCS</p>	<p>< Misfire_Jerk * SnapDecayAfterMisfire * RepetSnapDecayAdjst in Supporting Tables</p> <p>> 0.90</p> <p>*****</p> <p>Disabled</p> <p>TOSS *****</p> <p>active > WSSRoughRoadThres active</p> <p>ABS Failed Vehicle Dynamics Control System Status Driven Wheel Rotation Status Non Driven Wheel Rotation Status</p> <p>*****</p> <p>active</p>	<p>discard 100 engine cycle test</p> <p>*****</p> <p>discard 100 engine cycle test</p> <p>*****</p> <p>discard 100</p>	

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
					<p>RoughRoad VSES</p> <p>AND No Emission Neutral Default Action DTCs</p> <p>*****</p> <p>IF Rough Road Source = "TOSS" TOSS dispersion</p> <p>AND No Active DTCs</p> <p>*****</p> <p>Default Action</p> <p>Isolator Resonance Default Action Option *****</p> <p>If Isolator Resonance Option Enabled AND Misfire P030x TFTKO</p>	<p>detected active</p> <p>ABS Failed Vehicle Dynamics Control System Status</p> <p>*****</p> <p>>TOSSRoughRoadThres in supporting tables</p> <p>Transmission Output Shaft Angular Velocity Validity TransmissionEngagedStat e_FA (Auto Trans only) ClutchPstnSnsr FA (Manual Trans only)</p> <p>*****</p> <p>Not Enabled *****</p> <p>Set engine speed limits: 0 < Eng RPM < 9,000</p>	<p>engine cycle test</p> <p>*****</p> <p>discard 100 engine cycle test</p> <p>4 cycle delay</p> <p>*****</p> <p>*****</p>	

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Crankshaft Position System Variation Not Learned	P0315	This DTC determines if the crankshaft sensor learn values that are stored in memory are valid. The angle between each tooth of the reluctor wheel is learned, and the sum of all angles together should sum to 360° (one revolution of the reluctor wheel). Default values, or corrupted values will not sum to 360°.	<p>The Crankshaft target wheel should be 360 degrees around in circumference. Loss or controller non-volatile memory or an error in memory will cause the values of individual teeth learn to be defaulted or incorrect.</p> <p>Set the DTC if the Difference between the sum of the reluctor wheel's teeth and 360 degrees is greater than:</p>	> 0.001 degrees	OBD Manufacturer Enable Counter	MEC = 0	0.50 seconds Frequency Continuous100 msec	Type A, 1 Trips

21OBDG03C ECM Summary Tables

Component/System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Knock Sensor (KS) Performance Per Cylinder	P0324	This diagnostic checks for knock sensor performance out of the normal expected range on a per cylinder basis due to Excessive Knock (either real or false knock). In the knock detection algorithm, the term "Knock Intensity" (KI) is used to define the relative size of a knock event, and is calculated as (KI = current knock event - knock threshold). This results in a KI amplitude that is proportional to the size of the knock event (as seen by the knock sensor). In addition, Knock Intensity cannot be less than zero as it is forced/limited to be = 0 with no knock detected (i.e. whenever the current knock event < knock threshold, KI = 0). This diagnostic calculates a first-order lag filter version of the Knock Intensity and sets a fault when: (Filtered KI) > (Excessive Knock Diagnostic Threshold)	Filtered Knock Intensity (where 'Knock Intensity' = 0 with no knock; and > 0 & proportional to knock magnitude with knock)	> P0324_PerCyl_ExcessiveKnock_Threshold (no units)	Diagnostic Enabled? Engine Run Time Engine Speed Engine Air Flow Engine Coolant Temperature or OBD Coolant Enable Criteria Inlet Air Temperature Cumulative Number of Engine Revs Above Min Eng Speed (per key cycle)	Yes ≥ 2.0 seconds ≥ 600 RPM AND ≤ 8,500 RPM ≥ 40 mg/cylinder AND ≤ 2,000 mg/cylinder ≥ -40 deg's C = TRUE ≥ -40 deg's C ≥ 168 revs	First Order Lag Filters with Weight Coefficient = 0.0191 Updated each engine event	Type B, 2 Trips

21OBDG03C ECM Summary Tables

Component/System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Knock Sensor (KS) Circuit Bank 1	P0325	<p>This diagnostic checks for an open in the knock sensor circuit Sensor 1/Bank 1. There are two possible methods used:</p> <p>1. 20 kHz Method: This method injects a 20 kHz signal (internal to the ECU) onto one of the Knock Sensor inputs. For a normal/good circuit the 20 kHz signal will propagate through the Knock sensor and back to the ECU through the sensor return circuit. The 20 kHz signal is processed through the Fast Fourier Transform (FFT) and then filtered with a first-order lag filter. Since the Knock Detection algorithm uses a Differential Op-Amp to compare the input from the two knock sensor wires, the FFT 20 kHz diagnostic signal will have either:</p> <p>A. Low output with a good circuit (because the 20 kHz injected signal is detected on both of the sensor inputs)</p> <p>or</p> <p>B. High output for an Open Circuit (because</p>	<p>Open Circuit Method chosen (2 possible methods: 20 kHz or Normal Noise):</p> <p>Filtered FFT Output</p> <p>Filtered FFT Output</p>	<p>= P0325_P0330_OpenMethod_2</p> <p><u>Case 1 (20 kHz Method):</u></p> <p>> P0325_P0330_OpenCktThrshMin (20 kHz) AND < P0325_P0330_OpenCktThrshMax (20 kHz)</p> <p><u>Case 2 (Normal Noise Method):</u></p> <p>> P0325_P0330_OpenCktThrshMin (Normal Noise) AND < P0325_P0330_OpenCktThrshMax (Normal Noise)</p>	<p>Diagnostic Enabled?</p> <p>Engine Run Time</p> <p>Engine Speed</p> <p>Cumulative Number of Engine Revs (per key cycle) within min/max Engine Speed enable (above)</p> <p>Engine Air Flow</p> <p>Engine Coolant Temperature</p> <p>or</p> <p>OBD Coolant Enable Criteria</p> <p>Inlet Air Temperature</p>	<p>Yes</p> <p>≥ 2.0 seconds</p> <p>≥ 600 RPM and ≤ 8,500 RPM</p> <p>≥ 200 revs</p> <p>≥ 40 mg/cylinder and ≤ 2,000 mg/cylinder</p> <p>≥ -40 deg's C</p> <p>= TRUE</p> <p>≥ -40 deg's C</p>	<p>First Order Lag Filter with Weight Coefficient</p> <p>Weight Coefficient = 0.0100</p> <p>Updated each engine event</p>	Type B, 2 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
		<p>the 20 kHz injected signal is detected only on one of the sensor inputs). The 20 kHz method is typically used for the entire operating region of the engine. However, some engines may not have adequate separation between good and bad circuits at high engine speed. In these cases the 20 kHz method is used at low and medium engine speeds, and the "Normal Noise" method is used at high engine speed only.</p> <p>2. Normal Noise: The Normal Noise method monitors the background engine noise level for a selected frequency range output of the knock detection FFT. The background noise (i.e. Normal Noise) is filtered with a first-order lag filter. A good circuit is determined when the filtered Normal Noise signal is greater than the threshold.</p> <p>See Supporting Tables for method definition: P0325_P0330_OpenM</p>						

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
		ethod defines which of the two diagnostic methods is used as a fuction of engine speed (RPM). Typical implementations: A. Use 20 kHz method at allengine RPM (used when acceptable separation achieved at all RPM) or B. Use 20 kHz method at low/medium RPM and Normal Noise at high RPM						

21OBDG03C ECM Summary Tables

Component/System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Knock Sensor (KS) Performance Bank 1	P0326	This diagnostic checks for knock sensor performance out of the normal expected range, on a per sensor basis. This diagnostic is specifically designed to identify the fault condition where the knock sensor is properly attached electrically, but produces an abnormally low output due to being unattached (or loosely attached) with the mounting bolt (and thus unable to properly transfer the engine vibration energy from the engine block to the knock sensor). The term "Abnormal (engine) Noise" is used to define this diagnostic method. A fault condition is identified when a first-order lag filtered version of the Abnormal Noise signal falls below the diagnostic threshold.	<p>Filtered FFT Intensity</p> <p>(where 'FFT Intensity' = Non-knocking, background engine noise for a selected frequency)</p> <p>Filtered FFT Intensity</p>	<p><u>Case 1: Engine not in AFM mode</u></p> <p>< P0326_P0331_AbnormalNoise_Threshold (Supporting Table)</p> <p>OR</p> <p><u>Case 2: Engine is in AFM mode</u></p> <p>< P0326_P0331_AbnormalNoise_Thresh_AFM (Supporting Table; Engine is in AFM mode)</p>	<p>Diagnostic Enabled?</p> <p>Engine Run Time</p> <p>Engine Speed</p> <p>Engine Air Flow</p> <p>Engine Coolant Temperature</p> <p>or</p> <p>OBD Coolant Enable Criteria</p> <p>Inlet Air Temperature</p> <p>Individual Cylinders enabled for Abnormal Noise</p> <p>Cumulative Number of Engine Revs Above Min Eng Speed (per key cycle)</p>	<p>Yes</p> <p>≥ 2.0 seconds</p> <p>≥ 1,500 RPM (not in AFM mode) OR ≥ 1,999 (in AFM mode)</p> <p>AND ≤ 8,500 RPM</p> <p>≥ 40 mg/cylinder AND ≤ 2,000 mg/cylinder</p> <p>≥ -40 deg's C</p> <p>= TRUE</p> <p>≥ -40 deg's C</p> <p>P0326_P0331_AbnormalNoise_CylsEnabled (Supporting Table)</p> <p>≥ 300 Revs</p>	<p>First Order Lag Filters with Weight Coefficient =</p> <p>0.0080</p> <p>Updated each engine event</p>	Type B, 2 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Knock Sensor (KS) Circuit Low Bank 1	P0327	This diagnostic checks for an out of range low knock sensor signal. A 3-resistor bias network at each sensor input to the ECM provides a DC diagnostic voltage that will remain within a normal range when the external knock sensor circuit is free of short circuit faults. The diagnostic output is reported as a percentage (0 to 100%) when compared to the 5.0 volt reference voltage.	Sensor Input or Return Signal Line	< 8.0 Percent (of 5.0 Volt reference)	Diagnostic Enabled? Engine Speed	Yes > 0 RPM and < 8,500 RPM	50 Failures out of 63 Samples 100 msec rate	Type B, 2 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Knock Sensor (KS) Circuit High Bank 1	P0328	This diagnostic checks for an out of range high knock sensor signal. A 3-resistor bias network at each sensor input to the ECM provides a DC diagnostic voltage that will remain within a normal range when the external knock sensor circuit is free of short circuit faults. The diagnostic output is reported as a percentage (0 to 100%) when compared to the 5.0 volt reference voltage.	Sensor Input or Return Signal Line	> 39.0 Percent (of 5 Volt Reference)	Diagnostic Enabled? Engine Speed	Yes > 0 RPM and < 8,500 RPM	50 Failures out of 63 Samples 100 msec rate	Type B, 2 Trips

210BDG03C ECM Summary Tables

Component/System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Knock Sensor (KS) Circuit Bank 2	P0330	<p>This diagnostic checks for an open in the knock sensor circuit Sensor 2/Bank 2 There are two possible methods used:</p> <p>1. 20 kHz Method: This method injects a 20 kHz signal (internal to the ECU) onto one of the Knock Sensor inputs. For a normal/ good circuit the 20 kHz signal will propagate through the Knock sensor and back to the ECU through the sensor return circuit. The 20 kHz signal is processed through the Fast Fourier Transform (FFT) and then filtered with a first-order lag filter. Since the Knock Detection algorithm uses a Differential Op-Amp to compare the input from the two knock sensor wires, the FFT 20 kHz diagnostic signal will have either:</p> <p>A. Low output with a good circuit (because the 20 kHz injected signal is detected on both of the sensor inputs) or B. High output for an</p>	<p>Individual Sensor Thresholds Enabled?</p> <p>Open Circuit Method chosen (2 possible methods: 20 kHz or Normal Noise):</p> <p>Filtered FFT Output</p> <p>Filtered FFT Output</p>	<p>= 0.00 , Use Case 1 and 2</p> <p>=OpenMethod_2 (supporting table)</p> <p><u>Case 1 (20 kHz Method):</u></p> <p>> OpenCktThrshMin (20 kHz) AND < OpenCktThrshMax (20 kHz)</p> <p><u>Case 2 (Normal Noise Method):</u></p> <p>> OpenCktThrshMin (Normal Noise) AND < OpenCktThrshMax (Normal Noise)</p> <p>Case 3 (20 kHz Method):</p> <p>> OpenCktThrshMin2 (20 kHz)</p>	<p>Diagnostic Enabled?</p> <p>Engine Run Time</p> <p>Engine Speed</p> <p>Cumulative Number of Engine Revs (per key cycle) within min/max Engine Speed enable (above)</p> <p>Engine Air Flow</p> <p>Engine Coolant Temperature</p> <p>or</p> <p>OBD Coolant Enable Criteria</p> <p>Inlet Air Temperature</p>	<p>Yes</p> <p>≥ 2.0 seconds</p> <p>≥ 600 RPM and ≤ 8,500 RPM</p> <p>≥ 200 revs</p> <p>≥ 40 mg/cylinder and ≤ 2,000 mg/cylinder</p> <p>≥ -40 deg's C</p> <p>= TRUE</p> <p>≥ -40 deg's C</p>	<p>First Order Lag Filter with Weight Coefficient</p> <p>Case 1 & 2: Weight Coefficient = 0.0100</p> <p>Updated each engine event</p>	Type B, 2 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
		<p>Open Circuit (because the 20 kHz injected signal is detected only on one of the sensor inputs).</p> <p>The 20 kHz method is typically used for the entire operating region of the engine. However, some engines may not have adequate separation between good and bad circuits at high engine speed. In these cases the 20 kHz method is used at low and medium engine speeds, and the "Normal Noise" method is used at high engine speed only.</p> <p>2. Normal Noise: The Normal Noise method monitors the background engine noise level for a selected frequency range output of the knock detection FFT. The background noise (i.e. Normal Noise) is filtered with a first-order lag filter. A good circuit is determined when the filtered Normal Noise signal is greater than the threshold.</p> <p>See Supporting Tables</p>	<p>Filtered FFT Output</p> <p>Filtered FFT Output</p>	<p>AND</p> <p>< OpenCktThrshMax2 (20kHz)</p> <p>Case 4 (Normal Noise Method):</p> <p>> OpenCktThrshMin2 (NN)</p> <p>AND</p> <p>< OpenCktThrshMax2 (NN)</p>			<p>Case 3 & 4 Weight Coefficient = 0.01</p> <p>Updated each engine event</p>	

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
		<p>for method definition: P0325_P0330_OpenM ethod defines which of the two diagnostic methods is used as a function of engine speed (RPM). Typical implementations:</p> <p>A. Use 20 kHz method at all engine RPM (used when acceptable separation achieved at all RPM) or</p> <p>B. Use 20 kHz method at low/medium RPM and Normal Noise at high RPM</p> <p>For each method the failure thresholds can be the same for both sensors (in a 2 sensor application), or the failure thresholds can be unique to each sensor.</p>						

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Knock Sensor (KS) Performance Bank 2	P0331	<p>This diagnostic checks for knock sensor performance out of the normal expected range, on a per sensor basis. This diagnostic is specifically designed to identify the fault condition where the knock sensor is properly attached electrically, but produces an Abnormally low output due to being unattached (or loosely attached) with the the mounting bolt (and thus unable to properly transfer the engine vibration energy from the engine block to the knock sensor). The term "Abnormal (engine) Noise" is used to define this diagnostic method. A fault condition is identified when a first-order lag filtered version of the Abnormal Noise signal falls below the diagnostic threshold.</p> <p>The failure thresholds can be the same for both sensors (in a 2 sensor application), or the failure thresholds can be unique to each sensor.</p>	<p>Individual Sensor Thresholds Enabled?</p> <p>Filtered FFT Intensity (where 'FFT Intensity' = Non-knocking, background engine noise)</p> <p>Filtered FFT Intensity</p>	<p>= 0.00 , Use Case 1 and 2</p> <p>Case 1: Engine <u>not</u> in AFM mode < AbnormalNoise_Threshold (Supporting Table)</p> <p>OR</p> <p>Case 2: Engine <u>is</u> in AFM mode < AbnormalNoise_Threshold_AFM (Supporting Table)</p> <p>Case 3: Engine not in AFM mode < AbnormalLo2 (Supporting Table)</p> <p>OR</p> <p>Case 4: Engine is in AFM mode < AbnormalLoAFM_2 (Supporting Table)</p>	<p>Diagnostic Enabled?</p> <p>Engine Run Time</p> <p>Engine Speed</p> <p>Engine Air Flow</p> <p>Engine Coolant Temperature</p> <p>or</p> <p>OBD Coolant Enable Criteria</p> <p>Inlet Air Temperature</p> <p>Individual Cylinders enabled for Abnormal Noise</p> <p>Cumulative Number of Engine Revs Above Min Eng Speed (per key cycle)</p>	<p>Yes ≥ 2.0 seconds</p> <p>≥ 1,500 RPM (not in AFM mode) OR ≥ 1,999 (inAFM mode)</p> <p>AND ≤ 8,500 RPM</p> <p>≥ 40 mg/cylinder AND ≤ 2,000 mg/cylinder</p> <p>≥ -40 deg's C</p> <p>= TRUE</p> <p>≥ -40 deg's C</p> <p>AbnormalNoise_CylsEnabled (Supporting Table)</p> <p>≥ 300 Revs</p>	<p>First Order Lag Filter with Weight Coefficient</p> <p>Case 1 & 2: Weight Coefficient = 0.0100</p> <p>Updated each engine event</p> <p>Case 3 & 4: Weight Coefficient = 0.01</p> <p>Updated each engine eventFirst</p>	Type B, 2 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Knock Sensor (KS) Circuit Low Bank 2	P0332	This diagnostic checks for an out of range low knock sensor signal. A 3-resistor bias network at each sensor input to the ECM provides a DC diagnostic voltage that will remain within a normal range when the external knock sensor circuit is free of short circuit faults. The diagnostic output is reported as a percentage (0 to 100%) when compared to the 5.0 volt reference voltage.	Sensor Input or Return Signal Line	< 8.0 Percent (of 5 Volt Reference)	Diagnostic Enabled? Engine Speed	Yes > 0 RPM and < 8,500 RPM	50 Failures out of 63 Samples 100 msec rate	Type B, 2 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Knock Sensor (KS) Circuit High Bank 2	P0333	This diagnostic checks for an out of range high knock sensor signal. A 3-resistor bias network at each sensor input to the ECM provides a DC diagnostic voltage that will remain within a normal range when the external knock sensor circuit is free of short circuit faults. The diagnostic output is reported as a percentage (0 to 100%) when compared to the 5.0 volt reference voltage.	Sensor Input or Return Signal Line	> 39.00 Percent (of 5 Volt Reference)	Diagnostic Enabled? Engine Speed	Yes > 0 RPM and < 8,500 RPM	50 Failures out of 63 Samples 100 msec rate	Type B, 2 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Crankshaft Position (CKP) Sensor A Circuit	P0335	Diagnostic will fail if a crank sensor pulse was not received during a period of time; if crank sensor pulses are received the diagnostic will pass.	Time since last crankshaft position sensor pulse received	>= 4.0 seconds	Starter engaged AND (cam pulses being received OR (MAF_SensorFA AND Engine Air Flow	Test is Enabled = FALSE > 3.0 grams/second))	Continuous every 100 msec	Type B, 2 Trips
			No crankshaft pulses received	>= 1.0 seconds	Engine is Running Starter is not engaged	Test is Enabled	Continuous every 12.5 msec	
			No crankshaft pulses received		Engine is Running OR Starter is engaged No DTC Active:	Test is Enabled P0365 P0366	2 failures out of 10 samples One sample per engine revolution	

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Crankshaft Position (CKP) Sensor A Performance	P0336	1. Fail counts will occur if the engine goes out of synchronization repeatedly over a period of time and will pass if the engine stays in synchronization. 2. Diagnostic will fail if synchronization gap is not found in a specified period of time and will pass if the synchronization gap is found. 3. Diagnostic will fail if the incorrect number of crank sensor teeth are detected in-between detecting the synchronization gap and will pass if the correct number of teeth are seen.	Time in which 10 or more crank re-synchronizations occur	< 10.0 seconds	Engine Air Flow Cam-based engine speed No DTC Active:	Test is Enabled >= 3.0 grams/second > 450 RPM P0335	Continuous every 250 msec	Type B, 2 Trips
			No crankshaft synchronization gap found	>= 0.4 seconds	Engine is Running Starter is not engaged	Test is Enabled	Continuous every 12.5 msec	
			Time since starter engaged without detecting crankshaft synchronization gap	>= 1.5 seconds	Starter engaged AND (cam pulses being received OR (MAF_SensorFA AND Engine Air Flow	Test is Enabled = FALSE > 3.0 grams/second))	Continuous every 100 msec	
			Crank pulses received in one engine revolution OR Crank pulses received in one engine revolution	< 51 pulses > 65 pulses	Engine is Running OR Starter is engaged No DTC Active:	Test is Enabled P0365 P0366	8 failures out of 10 samples One sample per engine revolution	

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Camshaft Position (CMP) Sensor Circuit Bank 1 Sensor A	P0340	Diagnostic will fail if a cam sensor pulse was not received during a period of time; if cam sensor pulses are received the diagnostic will pass.	Time since last camshaft position sensor pulse received	>= 5.5 seconds	Starter engaged AND (crank pulses being received OR (MAF_SensorFA AND Engine Air Flow	Test is Enabled = FALSE > 3.0 grams/second))	Continuous every 100 msec	Type B, 2 Trips
			OR Time that starter has been engaged without a camshaft sensor pulse	>= 4.0 seconds				
			Fewer than 4 camshaft pulses received in a time	> 3.0 seconds	Engine is running Starter is not engaged	Test is Enabled	Continuous every 100 msec	
			No camshaft pulses received during 12 MEDRES events (There are 12 MEDRES events per engine cycle) Test begins when MEDRES region AND accumulated number of MEDRES events	= region 4 >= 0 counts	Crankshaft is synchronized Starter must be engaged to enable the diagnostic, but the diagnostic will not disable when the starter is disengaged No DTC Active:	Test is Enabled CrankSensor_FA	Continuous, every MEDRES event until test completes, one test at every start attempt	
			The number of camshaft pulses received during 100 engine cycles	= 0 pulses	Crankshaft is synchronized No DTC Active:	Test is Enabled CrankSensor_FA	8 failures out of 10 samples Continuous every engine cycle	

210BDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Camshaft Position (CMP) Sensor Performance Bank 1 Sensor A	P0341	Diagnostic will fail if an incorrect number of cam sensor pulses are detected over a number of engine cycles and will pass if the number of cam pulses is correct.	The number of camshaft pulses received during 12 MEDRES events is OR (There are 12 MEDRES events per engine cycle) Test begins when MEDRES region AND accumulated number of MEDRES events	< 4 pulses > 10 pulses = region 4 >= 0 counts	Crankshaft is synchronized Starter must be engaged to enable the diagnostic, but the diagnostic will not disable when the starter is disengaged No DTC Active:	Test is Enabled CrankSensor_FA	Continuous, every MEDRES event until test completes, one test at every start attempt	Type B, 2 Trips
			The number of camshaft pulses received during 100 engine cycles OR	< 398 pulses > 402 pulses	Crankshaft is synchronized No DTC Active:	Test is Enabled CrankSensor_FA	8 failures out of 10 samples Continuous every engine cycle	

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
IGNITION CONTROL #1 CIRCUIT	P0351	Diagnoses Cylinder #1 Ignition Control (EST) output driver circuit for an Open Circuit fault. Controller specific output driver circuit diagnoses the low sided driver for an open circuit failure when the output is powered off by comparing a voltage measurement to controller specific voltage thresholds.	Voltage measurement outside of controller specific acceptable range during driver off state indicates open circuit failure. Controller specific output driver circuit voltage thresholds are set to meet the following controller specification for an open circuit.	$\geq 30 \text{ k}\Omega$ impedance between signal and controller ground	Engine running Ignition Voltage	> 11.0 Volts	50 Failures out of 63 Samples 100 msec rate	Type A, 1 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
IGNITION CONTROL #2 CIRCUIT	P0352	Diagnoses Cylinder #2 Ignition Control (EST) output driver circuit for an Open Circuit fault. Controller specific output driver circuit diagnoses the low sided driver for an open circuit failure when the output is powered off by comparing a voltage measurement to controller specific voltage thresholds.	<p>Voltage measurement outside of controller specific acceptable range during driver off state indicates open circuit failure.</p> <p>Controller specific output driver circuit voltage thresholds are set to meet the following controller specification for an open circuit.</p>	$\geq 30 \text{ k}\Omega$ impedance between signal and controller ground	<p>Engine running</p> <p>Ignition Voltage</p>	> 11.0 Volts	<p>50 Failures out of 63 Samples</p> <p>100 msec rate</p>	Type A, 1 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
IGNITION CONTROL #3 CIRCUIT	P0353	Diagnoses Cylinder #3 Ignition Control (EST) output driver circuit for an Open Circuit fault. Controller specific output driver circuit diagnoses the low sided driver for an open circuit failure when the output is powered off by comparing a voltage measurement to controller specific voltage thresholds.	<p>Voltage measurement outside of controller specific acceptable range during driver off state indicates open circuit failure.</p> <p>Controller specific output driver circuit voltage thresholds are set to meet the following controller specification for an open circuit.</p>	<p>$\geq 30 \text{ k}\Omega$ impedance between signal and controller ground</p>	<p>Engine running</p> <p>Ignition Voltage</p>	> 11.0 Volts	<p>50 Failures out of 63 Samples</p> <p>100 msec rate</p>	Type A, 1 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
IGNITION CONTROL #4 CIRCUIT	P0354	Diagnoses Cylinder #4 Ignition Control (EST) output driver circuit for an Open Circuit fault. Controller specific output driver circuit diagnoses the low sided driver for an open circuit failure when the output is powered off by comparing a voltage measurement to controller specific voltage thresholds.	<p>Voltage measurement outside of controller specific acceptable range during driver off state indicates open circuit failure.</p> <p>Controller specific output driver circuit voltage thresholds are set to meet the following controller specification for an open circuit.</p>	<p>$\geq 30 \text{ k}\Omega$ impedance between signal and controller ground</p>	<p>Engine running</p> <p>Ignition Voltage</p>	> 11.0 Volts	<p>50 Failures out of 63 Samples</p> <p>100 msec rate</p>	Type A, 1 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Camshaft Position (CMP) Sensor Circuit Bank 1 Sensor B	P0365	Diagnostic will fail if a cam sensor pulse was not received during a period of time; if cam sensor pulses are received the diagnostic will pass.	Time since last camshaft position sensor pulse received	>= 5.5 seconds	Starter engaged AND (crank pulses being received OR (MAF_SensorFA AND Engine Air Flow	Test is Enabled = FALSE > 3.0 grams/second))	Continuous every 100 msec	Type B, 2 Trips
			OR Time that starter has been engaged without a camshaft sensor pulse	>= 4.0 seconds				
			Fewer than 4 camshaft pulses received in a time	> 3.0 seconds	Engine is running Starter is not engaged	Test is Enabled	Continuous every 100 msec	
			No camshaft pulses received during 12 MEDRES events (There are 12 MEDRES events per engine cycle) Test begins when MEDRES region AND accumulated number of MEDRES events	= region 3 >= 0 counts	Crankshaft is synchronized Starter must be engaged to enable the diagnostic, but the diagnostic will not disable when the starter is disengaged No DTC Active:	Test is Enabled CrankSensor_FA	Continuous, every MEDRES event until test completes, one test at every start attempt	
			The number of camshaft pulses received during 100 engine cycles	= 0 pulses	Crankshaft is synchronized No DTC Active:	Test is Enabled CrankSensor_FA	8 failures out of 10 samples Continuous every engine cycle	

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Camshaft Position (CMP) Sensor Performance Bank 1 Sensor B	P0366	Diagnostic will fail if an incorrect number of cam sensor pulses are detected over a number of engine cycles and will pass if the number of cam pulses is correct.	<p>The number of camshaft pulses received during 12 MEDRES events is OR</p> <p>(There are 12 MEDRES events per engine cycle)</p> <p>Test begins when MEDRES region AND accumulated number of MEDRES events</p>	<p>< 4 pulses > 10 pulses</p> <p>= region 3</p> <p>>= 0 counts</p>	<p>Crankshaft is synchronized</p> <p>Starter must be engaged to enable the diagnostic, but the diagnostic will not disable when the starter is disengaged</p> <p>No DTC Active:</p>	<p>Test is Enabled</p> <p>CrankSensor_FA</p>	<p>Continuous, every MEDRES event until test completes, one test at every start attempt</p>	Type B, 2 Trips
			<p>The number of camshaft pulses received during 100 engine cycles OR</p>	<p>< 398 pulses > 402 pulses</p>	<p>Crankshaft is synchronized</p> <p>No DTC Active:</p>	<p>Test is Enabled</p> <p>CrankSensor_FA</p>	<p>8 failures out of 10 samples</p> <p>Continuous every engine cycle</p>	

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Catalyst System Low Efficiency Bank 1	P0420	<p>NOTE: The information below applies to applications that use the Decel Catalyst Monitor Algorithm</p> <p>Oxygen Storage. The catalyst washcoat contains Cerium Oxide. Cerium Oxide reacts with NO and O2 during lean A/F excursions to store the excess oxygen (I.e. Cerium Oxidation). During rich A/F excursions, Cerium Oxide reacts with CO and H2 to release this stored oxygen (I.e. Cerium Reduction). This is referred to as the Oxygen Storage Capacity, or OSC. CatMon's strategy is to "measure" the OSC of the catalyst through forced Rich (intrusive rich) and Lean (decel fuel cutoff) A/F excursions</p> <p>Normalized Ratio OSC Value Calculation Information and Definitions =</p> <p>1. Raw OSC Calculation = (post cat O2 Resp time - pre cat O2 Resp time)</p> <p>2. BestFailing OSC value from a calibration</p>	<p>Normalized Ratio OSC Value</p> <p>The EWMA calculation uses a 0.09 coefficient.</p>	< 0.35	<p>All enable criteria associated with P0420 can be found under P2270 - (O2 Sensor Signal Stuck Lean Bank 1 Sensor 2)</p> <p>Rapid Step Response (RSR) feature will initiate multiple tests:</p> <p>If the difference between current EWMA value and the current OSC Normalized Ratio value is</p> <p>and the current OSC Normalized Ratio value is</p> <p>Maximum number of RSR tests to detect failure when RSR is enabled.</p> <p>MAF</p> <p>Predicted catalyst temperature</p> <p>Front O2 Sensor or Front WRAF</p> <p>Rear O2 Sensor</p> <p>General Enable Criteria</p> <p>In addition to the p-codes listed under P2270, the following DTC's shall also</p>	<p>> 0.67</p> <p>< 0.10</p> <p>10</p> <p>> 1.00 g/s < 15.00 g/s</p> <p>< 850 ° C</p> <p>> 690.00 mV or > 1.25 EQR</p> <p>> 825.00 mV</p>	<p>1 test attempted per valid decel period</p> <p>Minimum of 1 test per trip</p> <p>Maximum of 2 tests per trip</p> <p>Frequency: Fueling Related : 12.5 ms</p> <p>OSC Measurements: 100 ms</p> <p>Temp Prediction: 12.5ms</p>	Type A, 1 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
		<p>table (based on temp and exhaust gas flow)</p> <p>3. WorstPassing OSC value (based on temp and exhaust gas flow)</p> <p>Normalized Ratio Calculation = (1-2) / (3-2)</p> <p>A Normalized Ratio of 1 essentially represents a good part and a ratio of 0 essentially represents a very bad part.</p> <p>Refer to the P0420_WorstPassingOSCTableB1 and P0420_BestFailingOSCTableB1 in Supporting Tables tab for details</p> <p>The Catalyst Monitoring Test is completed during a decel fuel cutoff event. This fuel cutoff event occurs following a rich intrusive fueling event initiated by the O2 Sensor Signal Stuck Lean Bank 1 Sensor 2 test (P2270). Several conditions must be met in order to execute this test.</p> <p>Additional conditions and their related values</p>			<p>not be set:</p> <p>For switching O2 sensors:</p> <p>For WRAF O2 sensors:</p>	<p>O2S_Bank_1_Sensor_1_FA O2S_Bank_1_Sensor_2_FA O2S_Bank_2_Sensor_1_FA O2S_Bank_2_Sensor_2_FA</p> <p>WRAF_Bank_1_FA WRAF_Bank_2_FA</p> <p>P0420_WorstPassingOSCTableB1</p> <p>P0420_BestFailingOSCTableB1</p>		

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
		are listed in the "Secondary Parameters" and "Enable Conditions" section of this document for P2270 (O2 Sensor Signal Stuck Lean Bank 1 Sensor 2)						

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Evaporative Emission (EVAP) System Small Leak Detected (No ELCP - Conventional EVAP Diagnostic - with EAT using OAT Sensor - without Fuel Tank Zone Module (FTZM))	P0442	This DTC will detect a small leak (≥ 0.020 ") in the EVAP system between the fuel fill cap and the purge solenoid. On some applications a small leak is defined as ≥ 0.025 " , 0.030 " , or 0.150 " . The engine off natural vacuum method (EONV) is used. EONV is an evaporative system leak detection diagnostic that runs when the vehicle is shut off when enable conditions are met. Prior to sealing the system and performing the diagnostic, the fuel volatility is analyzed. In an open system (Canister Vent Solenoid [CVS] open) high volatility fuel creates enough flow to generate a measurable pressure differential relative to atmospheric. After the volatility check, the vent solenoid will close. After the vent is closed, typically a build up of pressure from the hot soak begins (phase-1). The pressure typically will peak and then begin to decrease as the fuel cools. When	<p>The total delta from peak pressure to peak vacuum during the test is normalized against a calibration pressure threshold table that is based upon fuel level and ambient temperature. (Please see P0442 EONV Pressure Threshold (Pascals) in Supporting Tables). The normalized value is calculated by the following equation: $1 - (\text{peak pressure} - \text{peak vacuum}) / \text{pressure threshold}$. The normalized value is entered into EWMA (with 0= perfect pass and 1= perfect fail).</p> <p>When EWMA is</p> <p>the DTC light is illuminated.</p> <p>The EWMA calculation uses a 0.14 weighting coefficient.</p> <p>The DTC light can be turned off if the EWMA is</p> <p>and stays below the EWMA fail threshold for 3 additional consecutive trips.</p>	<p>> 0.60 (EWMA Fail Threshold),</p> <p>≤ 0.35 (EWMA Re-Pass Threshold)</p>	<p>Fuel Level Drive Time Drive length</p> <p>(ECT</p> <p>OR</p> <p>OBD Coolant Enable Criteria</p> <p>Baro Distance since assembly plant Engine not run time before key off must be</p> <p>Time since last complete test if normalized result and EWMA is passing</p> <p>OR</p> <p>Time since last complete test if normalized result or EWMA is failing</p> <p>Estimated Ambient Temperature (EAT) using OAT sensor at end of drive</p> <p>Conditions for Estimated Ambient Temperature Using OAT Sensor to be</p>	<p>$10\% \leq \text{Percent} \leq 90\%$ ≥ 600 seconds ≥ 5.0 miles</p> <p>$\geq 63\text{ }^{\circ}\text{C}$</p> <p>= TRUE)</p> <p>$\geq 70$ kPa ≥ 10.0 miles</p> <p>\leq refer to P0442 Engine Off Time Before Vehicle Off Maximum as a Function of Estimated Ambient Temperature in Supporting Tables.</p> <p>≥ 8 hours</p> <p>≥ 8 hours</p> <p>$0\text{ }^{\circ}\text{C} \leq \text{Temperature} \leq 35\text{ }^{\circ}\text{C}$</p>	<p>Once per trip, during hot soak (up to 2,400 sec.). No more than 2 unsuccessful attempts between completed tests.</p>	<p>Type A, 1 Trips</p> <p>EWMA</p> <p>Average run length is 8 to 12 trips under normal conditions</p> <p>Run length is 3 to 6 trips after code clear or non-volatile reset</p>

210BDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
		the pressure drops (-62) Pa from peak pressure, the vent is then opened for 60 seconds to normalize the system pressure. The vent is again closed to begin the vacuum portion of the test (phase-2). As the fuel temperature continues to fall, a vacuum will begin forming. The vacuum will continue until it reaches a vacuum peak. When the pressure rises 62 Pa from vacuum peak, the test then completes. If the key is turned on while the diagnostic test is in progress, the test will abort.			Valid ***** 1. Startup OAT is less than previous trip EAT OR 2. Startup ECT - previous trip EAT OR 3. Engine off time OR 4. At startup, time since previous EAT valid and able to learn OR 5. EAT - current OAT OR 6. EAT < current OAT and speed timer and current OAT - EAT Speed timer increments at 100 msec rate and increments vary based on vehicle speed as follows: vehicle speed < 16 mph - 0.2seconds 16 mph<speed< 47 mph 0.13 seconds 47 mph<speed< 124 0.25 seconds 124 mph<speed< 124 0.20 seconds Speed timer can never be less than 0 seconds ***** 1. High Fuel Volatility During the volatility	***** ≤ 0 °C ≥ 7,200seconds ≤ 3,600seconds 0 °C ≤ difference ≤ 2 °C ≥ 240 seconds ≤ 2 °C - 0.2seconds 0.13 seconds 0.25 seconds 0.20 seconds *****		

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
					<p>phase, pressure in the fuel tank is integrated vs. volatility time. If the integrated pressure is then test aborts and unsuccessful attempts is incremented. This value equates to an average integrated fuel tank pressure > 1,245 Pa. Please see P0442 Volatility Time as a Function of Estimate of Ambient Temperature in Supporting Tables.</p> <p>OR</p> <p>2. Vacuum Refueling Detected</p> <p>See P0454 Fault Code for information on vacuum refueling algorithm.</p> <p>OR</p> <p>3. Fuel Level Refueling Detected</p> <p>See P0464 Fault Code for information on fuel level refueling.</p> <p>OR</p> <p>4. Vacuum Out of Range and No Refueling</p> <p>See P0451 Fault Code for information on vacuum sensor out of range and P0464 Fault Code for information on fuel level refueling.</p>	< -5		

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
					<p>OR</p> <p>5. Vacuum Out of Range and Refueling Detected</p> <p>See P0451 Fault Code for information on vacuum sensor out of range and P0464 Fault Code for information on fuel level refueling.</p> <p>OR</p> <p>6. Vent Valve Override Failed</p> <p>Device control using an off-board tool to control the vent solenoid, cannot exceed during the EONV test</p> <p>OR</p> <p>7. Key up during EONV test</p> <p>No active DTCs:</p> <p>No Active DTC's TFTKO</p>	<p>0.50 seconds</p> <p>MAF_SensorFA ECT_Sensor_FA IAT_SensorFA VehicleSpeedSensor_FA IgnitionOffTimeValid AmbientAirDefault FuelLevelDataFault</p> <p>P0443 P0446 P0449 P0452 P0453 P0455 P0458 P0459</p>		

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
						P0498 P0499 P0496		

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Evaporative Emission (EVAP) Canister Purge Solenoid Valve Circuit (ODM) (No ELCP - Conventional EVAP Diagnostic)	P0443	Controller specific output driver circuit diagnoses the canister purge solenoid low sided driver for an open circuit failure when the output is powered off by comparing a voltage measurement to controller specific voltage thresholds.	Voltage measurement outside of controller specific acceptable range during driver off state indicates open circuit failure. Controller specific output driver circuit voltage thresholds are set to meet the following controller specification for an open circuit.	 ≥ 200 K Ω impedance between output and controller ground.	Powertrain relay voltage	Voltage ≥ 11.0 volts	20 failures out of 25 samples 250 ms / sample	Type B, 2 Trips Note: In certain controlle rs P0458 may also set (Caniste r Purge Solenoid Short to Ground)

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Evaporative Emission (EVAP) Vent System Performance (No ELCP - Conventional EVAP Diagnostic - without Fuel Tank Zone Module (FTZM))	P0446	<p>This DTC will determine if a restriction is present in the vent solenoid, vent filler, vent hose or EVAP canister.</p> <p>This diagnostic runs with normal purge control and canister vent solenoid commanded open. The diagnostic fails when the FTP sensor vacuum measurement is above a vacuum threshold before it accumulates purge volume above a threshold. The diagnostic passes when it accumulates purge volume above a threshold before the FTP sensor vacuum measurement is above a vacuum threshold.</p>	<p>Vent Restriction Prep Test: Vented Vacuum for OR Vented Vacuum for</p> <p>Vent Restriction Test: Tank Vacuum for before Purge Volume</p> <p>After setting the DTC for the first time, 0 liters of fuel must be consumed before setting the DTC for the second time.</p>	<p>< -623 Pa 60 seconds</p> <p>> 1,245 Pa 60 seconds</p> <p>> 2,989 Pa 5 seconds ≥ 6 liters</p>	<p>Fuel Level System Voltage Startup IAT Startup ECT BARO</p> <p>No active DTCs:</p> <p>No Active DTC's TFTKO</p>	<p>10 % ≤ Percent ≤ 90 % ≥ 10.0 volts 4 °C ≤ Temperature ≤ 35 °C ≤ 35 °C ≥ 70 kPa</p> <p>MAP_SensorFA TPS_FA VehicleSpeedSensor_FA IAT_SensorFA ECT_Sensor_FA AmbientAirDefault EnginePowerLimited</p> <p>P0443 P0449 P0452 P0453 P0454 P0458 P0459 P0498 P0499</p>	<p>Once per Cold Start</p> <p>Time is dependent on driving conditions</p> <p>Maximum time before test abort is 1,400 seconds</p>	Type B, 2 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Evaporative Emission (EVAP) Vent Solenoid Control Circuit (ODM) (No ELCP - Conventional EVAP Diagnostic - without Fuel Tank Zone Module (FTZM))	P0449	Controller specific output driver circuit diagnoses the vent solenoid low sided driver for an open circuit failure when the output is powered off by comparing a voltage measurement to controller specific voltage thresholds.	Voltage measurement outside of controller specific acceptable range during driver off state indicates open circuit failure. Controller specific output driver circuit voltage thresholds are set to meet the following controller specification for an open circuit.	$\geq 200\text{ K } \Omega$ impedance between output and controller ground			50 failures out of 63 samples 100 ms / sample	Type B, 2 Trips Note: In certain controlle rs P0498 may also set (Vent Solenoid Short to Ground)

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Fuel Tank Pressure (FTP) Sensor Circuit Performance (No ELCP - Conventional EVAP Diagnostic)	P0451	<p>The DTC will be set if the fuel tank vacuum sensor is out of range when it tries to re-zero prior to the phase-1 or phase-2 portions of the engine-off natural vacuum small leak test.</p> <p>During the EONV test, the fuel tank vacuum sensor is re-zeroed. A re-zero occurs:</p> <ol style="list-style-type: none"> 1) At the transition from the volatility phase to the pressure phase. 2) At the transition from the pressure phase to the vacuum phase. <p>The re-zero test determines if the tank vacuum signal falls within a calibratable window about atmospheric pressure. If after some time, the tank vacuum signal does not fall to within the window, the re-zero test exits to the refueling rationality test.</p> <p>The refueling rationality test determines if a refueling event caused the re-zero problem. If so, the re-zero problem is ignored. If a refueling event is not</p>	<p>The tank vacuum sensor voltage is compared to a window about the nominal sensor voltage offset (~1.5 volts)</p> <p>Upper voltage threshold (voltage addition above the nominal voltage)</p> <p>Lower voltage threshold (voltage subtraction below the nominal voltage)</p> <p>The difference between tank vacuum sensor voltage and the nominal offset voltage is then normalized against the appropriate threshold listed above to produce a ratio between 0.0 and 1.0. This normalized re-zero ratio is then filtered with a EWMA (with 0= perfect pass and 1=perfect fail).</p> <p>When EWMA is the DTC light is illuminated.</p> <p>The EWMA calculation uses a 0.20 weighting coefficient.</p> <p>The DTC light can be turned off if the EWMA is and stays below the</p>	<p>0.2 volts</p> <p>0.2 volts</p> <p>> 0.73 (EWMAFail Threshold),</p> <p>≤ 0.40 (EWMA Re-Pass Threshold)</p>	<p>This test will execute whenever the engine-off natural vacuum small leak test (P0442) executes</p>		<p>This test is executed during an engine-off natural vacuum small leak test. The number of times that it executes can range from zero to two per engine-off period. The length of the test is determined by the refueling rationality test, which can take up to 600 seconds to complete.</p>	<p>Type A, 1 Trips</p> <p>EWMA</p> <p>Average run length: 6</p> <p>Run length is 2 trips after code clear or non-volatile reset</p>

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
		<p>detected, then the results of the re-zero test are used to determine if there is a re-zero problem.</p> <p>1) An individual re-zero test generates a re-zero ratio. The ratio goes from 0.0 to 1.0.</p> <p>2) A 0.0 means that the re-zero pressure signal achieved exactly atmospheric pressure.</p> <p>3) A ratio of 1.0 means that the re-zero pressure did not get within the window.</p> <p>4) Re-zero pressure within the window generates values between 0.0 and 1.0.</p> <p>If a refueling event is not detected, then the resulting re-zero ratio is filtered using an exponentially weighted moving average (EWMA). When the EWMA exceeds a fail threshold, the vacuum re-zero test reports a failure. Once the vacuum re-zero test fails, the EWMA fall below a lower re-pass threshold before it can pass the vacuum re-zero test again.</p>	EWMA fail threshold for 3 additional consecutive trips.					

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Fuel Tank Pressure (FTP) Sensor Circuit Low Voltage (No ELCP - Conventional EVAP Diagnostic - without Fuel Tank Zone Module (FTZM))	P0452	<p>This DTC will detect a Fuel Tank Pressure (FTP) sensor signal that is too low out of range.</p> <p>The FTP sensor circuit out of range diagnostic compares the raw sensor voltage to a lower voltage threshold. It is an X out of Y diagnostic that runs continuously anytime the controller is awake.</p> <p>If the sensor voltage is below the lower voltage threshold, the low fail counter then increments. If the low fail counter reaches its threshold then a fail is reported for P0452 DTC. A pass is reported for P0452 DTC if the low sample counter reaches its threshold.</p>	<p>FTP sensor signal</p> <p>The normal operating range of the FTP sensor is 0.5 volts (~1245 Pa) to 4.5 volts (~ -3736 Pa).</p>	< 0.15 volts (3.0 % of Vref or ~ 1,495 Pa)			<p>640 failures out of 800 samples</p> <p>12.5 ms / sample</p>	Type B, 2 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Fuel Tank Pressure (FTP) Sensor Circuit High Voltage (No ELCP - Conventional EVAP Diagnostic - without Fuel Tank Zone Module (FTZM))	P0453	<p>This DTC will detect a Fuel Tank Pressure (FTP) sensor signal that is too high out of range.</p> <p>The FTP sensor circuit out of range diagnostic compares the raw sensor voltage to an upper voltage threshold. It is an X out of Y diagnostic that runs continuously anytime the controller is awake.</p> <p>If the sensor voltage is above the upper voltage threshold, the high fail counter then increments. If the high fail counter reaches its threshold then a fail is reported for P0453 DTC. A pass is reported for P0453 DTC if the high sample counter reaches its threshold.</p>	<p>FTP sensor signal</p> <p>The normal operating range of the FTP sensor is 0.5 volts (~1245 Pa) to 4.5 volts (~ -3736 Pa).</p>	> 4.85 volts (97.0 % of Vref or ~ -3,985 Pa)			<p>640 failures out of 800 samples</p> <p>12.5 ms / sample</p>	Type B, 2 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Fuel Tank Pressure (FTP) Sensor Circuit Intermittent (No ELCP - Conventional EVAP Diagnostic)	P0454	<p>This DTC will detect intermittent tank vacuum sensor signals that would have caused the engine-off natural vacuum small leak test to abort due to an apparent re-fueling event.</p> <p>During the EONV test, an abrupt change in fuel tank vacuum is identified as a possible refueling event. If the abrupt change occurs while the vent valve is closed, the EONV small-leak test aborts and the refueling rationality test starts.</p> <p>If the refueling rationality test detects a refueling event, then the vacuum change is considered "rational." If the refueling rationality test does not detect a refueling event, then the vacuum change is considered "irrational."</p> <p>The vacuum change rationality diagnostic is an "X out of Y" test. 1) Each time the EONV test completes, the (Y) sample counter is incremented. 2) Each time the</p>	<p>If an abrupt change in tank vacuum is detected the engine-off natural vacuum test is aborted due to an apparent refueling event. Subsequent to the abort, a refueling rationality test is executed to confirm that a refueling event occurred. If a refueling is confirmed, then the test sample is considered passing. Otherwise, the sample is considered failing indicating an intermittent signal problem. An abrupt change is defined as a change in vacuum in the span of 1.0 seconds. But</p> <p>in 12.5 msec. A refueling event is confirmed if the fuel level has a persistent change of</p> <p>for 30 seconds during a 600 second refueling rationality test.</p>	<p>> 112 Pa</p> <p>< 249 Pa</p> <p>> 10 %</p>	<p>This test will execute whenever the engine-off natural vacuum small leak test (P0442) executes and the canister vent solenoid is closed</p>		<p>This test is executed during an engine-off natural vacuum small leak test. The test can only execute up to once per engine-off period. The length of the test is determined by the refueling rationality test, which can take up to 600 seconds to complete. The test will report a failure if 2 out of 3 samples are failures.</p> <p>12.5 ms / sample</p>	Type A, 1 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
		rationality test has an irrational result; the (X) fail counter is incremented. 3) If the (X) fail counter reaches the fail limit before the (Y) sample counter reaches the sample limit, the vacuum change rationality test fails. 4) If the (Y) sample counter reaches the limit before the (X) fail counter fails, the vacuum change rationality test passes.						

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Evaporative Emission (EVAP) System Large Leak Detected (No ELCP - Conventional EVAP Diagnostic - without Fuel Tank Zone Module (FTZM))	P0455	<p>This DTC will detect a weak vacuum condition (large leak or purge blockage) in the EVAP system.</p> <p>This mode checks for large leaks and blockages when proper driving conditions are met. If these conditions are met, the diagnostic commands the vent valve closed and controls the purge duty cycle to allow purge flow to purge the fuel tank and canister system while monitoring the fuel tank vacuum level.</p> <p>The algorithm accumulates purge flow during the test to determine a displaced purge volume as the test proceeds.</p> <p>If the displaced purge volume reaches a threshold before the fuel tank vacuum level reaches its passing threshold, then a large leak failure is detected.</p> <p>On fuel systems with fuel caps</p> <p>If the first failure of</p>	<p>Purge volume while Tank vacuum</p> <p>After setting the DTC for the first time, 0 liters of fuel must be consumed before setting the DTC for the second time.</p> <p>Weak Vacuum Follow-up Test (fuel cap replacement test) Weak Vacuum Test failed.</p> <p>Passes if tank vacuum</p> <p>Note: Weak Vacuum Follow-up Test can only report a pass.</p>	<p>> 15 liters ≤ 2,740 Pa</p> <p>≥ 2,740 Pa</p>	<p>Fuel Level System Voltage BARO Purge Flow</p> <p>No active DTCs:</p> <p>No Active DTC's TFTKO</p> <p>If ECT > IAT, Startup temperature delta (ECT-IAT): Startup IAT Startup ECT</p> <p>Weak Vacuum Follow-up Test This test can run following a weak vacuum failure or on a hot restart.</p>	<p>10 % ≤ Percent ≤ 90 % ≥ 10.0 volts ≥ 70 kPa ≥ 2.10 %</p> <p>MAP_SensorFA TPS_FA VehicleSpeedSensor_FA IAT_SensorFA ECT_Sensor_FA AmbientAirDefault EnginePowerLimited</p> <p>P0443 P0449 P0452 P0453 P0454 P0458 P0459 P0498 P0499</p> <p>≤ 8 °C 4 °C ≤ Temperature ≤ 35 °C ≤ 35 °C</p>	<p>Once per cold start</p> <p>Time is dependent on driving conditions</p> <p>Maximum time before test abort is 1,400 seconds</p> <p>Weak Vacuum Follow-up Test</p> <p>With large leak detected, the follow-up test is limited to 0 seconds. Once the MIL is on, the follow-up test runs indefinitely.</p>	Type B, 2 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
		<p>P0455 occurred after a refueling event was detected and the MIL is off for P0455, the MIL will be commanded off after the first pass of P0455 is reported. If the first failure of P0455 did not occur after a refueling event was detected, the MIL will be commanded off on the ignition cycle after the third consecutive pass of P0455 is reported.the MIL will be commanded off on the ignition cycle after the third consecutive pass of P0455 is reported.</p> <p>On fuel systems without fuel caps</p> <p>The P0455 MIL will be commanded off on the ignition cycle after the third consecutive pass of P0455 is reported.</p>						

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Evaporative Emission System Purge Control Valve Circuit Low (No ELCP - Conventional EVAP Diagnostic)	P0458	Controller specific output driver circuit diagnoses the canister purge solenoid low sided driver for a short to ground failure when the output is powered off by comparing a voltage measurement to controller specific voltage thresholds.	<p>Voltage measurement outside of controller specific acceptable range during driver off state indicates short to ground failure.</p> <p>Controller specific output driver circuit voltage thresholds are set to meet the following controller specification for a short to ground.</p>	$\leq 0.5 \Omega$ impedance between output and controller ground	Powertrain relay voltage	Voltage ≥ 11.0 volts	<p>20 failures out of 25 samples</p> <p>250 ms / sample</p>	<p>Type B, 2 Trips</p> <p>Note: In certain controllers P0443 may also set (Canister Purge Solenoid Open Circuit)</p>

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Evaporative Emission System Purge Control Valve Circuit High (No ELCP - Conventional EVAP Diagnostic)	P0459	Controller specific output driver circuit diagnoses the canister purge solenoid low sided driver for a short to power failure when the output is powered on by comparing a voltage measurement to controller specific voltage thresholds.	<p>Voltage measurement outside of controller specific acceptable range during driver on state indicates short to power failure.</p> <p>Controller specific output driver circuit voltage thresholds are set to meet the following controller specification for a short to power.</p>	$\leq 0.5 \Omega$ impedance between output and controller power	Powertrain relay voltage	Voltage ≥ 11.0 volts	<p>20 failures out of 25 samples</p> <p>250 ms / sample</p>	Type B, 2 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Fuel Level Sensor 1 Performance (For use on vehicles with a single fuel tank)	P0461	This DTC will detect a primary fuel tank level sensor stuck in-range.	a) Sensed fuel volume change is b) while engine fuel consumption is	a) < 3liters b) \geq 38.22 liters	1. Diagnostic Enabled 2. Engine Operational State	1. == True 2. == Running	250 ms / sample	Type B, 2 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Fuel Level Sensor 1 Circuit Low Voltage	P0462	This DTC will detect a primary fuel tank sensor out-of-range low.	Fuel level Sender % of 5V range	< 10 % or 77.17 liters	a) Diagnostic enabled status b) Fuel Level Sensor Initialized status c) Fuel Level Sensor Data Available Status d) Communication faults status	a) == True b) == True c) == True d) <> True	100 failures out of 125 samples 100 ms / sample	Type B, 2 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Fuel Level Sensor 1 Circuit High Voltage	P0463	This DTC will detect a primary fuel tank level sensor out-of-range high.	Fuel level Sender % of 5V range	> 60 % or 5.91 liters	a) Diagnostic enabled status b) Fuel Level Sensor Initialized status c) Fuel Level Sensor Data Available Status d) Communication faults status	a) == True b) == True c) == True d) <> True	100 failures out of 125 samples 100 ms / sample	Type B, 2 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Fuel Level Sensor 1 Circuit Intermittent (No ELCP - Conventional EVAP Diagnostic)	P0464	<p>This DTC will detect intermittent fuel level sensor signals that would have caused the engine-off natural vacuum small leak test to abort due to an apparent re-fueling event.</p> <p>During the EONV test, a change in fuel level is identified as a possible refueling event. If the change occurs while the vent valve is closed, the EONV small-leak test aborts and the refueling rationality test starts.</p> <p>If the refueling rationality test detects a refueling event, the fuel level change is considered "rational." If the refueling rationality test does not detect refueling, the fuel level change is considered "irrational."</p> <p>The fuel level change rationality diagnostic is an "X out of Y" test. 1) Each time the EONV test completes, the (Y) sample counter is incremented. 2) Each time the rationality test has an</p>	<p>If a change in fuel level is detected, the engine-off natural vacuum test is aborted due to an apparent refueling event. Subsequent to the abort, a refueling rationality test is executed to confirm that an actual refueling event occurred. If a refueling event is confirmed, then the test sample is considered passing. Otherwise, if a refueling event is not confirmed, then the test sample is considered failing which indicates an intermittent signal problem.</p> <p>An intermittent fuel level signal problem is defined as:</p> <p>The fuel level changes by and does not remain for 30 seconds during a 600 second refueling rationality test.</p>	<p>> 10 % > 10 %</p>	This test will execute whenever the engine-off natural vacuum small leak test (P0442) executes		<p>This test is executed during an engine-off natural vacuum small leak test. The test can only execute up to once per engine-off period. The length of the test is determined by the refueling rationality test, which can take up to 600 seconds to complete. The test will report a failure if 2 out of 3 samples are failures.</p> <p>100 ms / sample</p>	Type A, 1 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
		irrational result; the (X) fail counter is incremented. 3) If the (X) fail counter reaches the fail limit before the (Y) sample counter reaches the sample limit, the fuel level change rationality test fails. 4) If the (Y) sample counter reaches the limit before the (X) fail counter fails, the fuel level change rationality test passes.						

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Cooling Fan Speed Low [LIN Bus Electric PWM Fans Only - Internal or External controller]	P0494	Measured actual fan speed is monitored against a calibrated lower acceptable limit for the cooling fan RPM under normal operating conditions. The diagnostic is set when the threshold is crossed. This diagnostic ensures that the fan is not under cooling. Only after first fan activation, the fan will be held commanded on for enough time to ensure this monitor has an opportunity to mature a decision.	Measured Fan Speed	<= Speed Low Limit [Supporting Table] P0494_LIN_Threshold	a] Diagnostic Enabled b] Configuration calibration for number of fans c] Diagnostic System Disabled d] Battery Voltage In-Range e] LIN Bus based Fan Operation Enabled f] LIN Bus Lost Communication Fault Active g] LIN Bus Continuous Operation Fault Active h] Fan Commanded On	a] == 1.00 [True if 1; False if 0] b] >= 1 unit c] <> True d] > 11.00 volts e] == TRUE f] <> True g] <> True h] == TRUE	16.00 failures / 20.00 samples; 1000 ms / sample	Type B, 2 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Evaporative Emission (EVAP) System Flow During Non- Purge (No ELCP - Conventional EVAP Diagnostic - without Fuel Tank Zone Module (FTZM))	P0496	<p>This DTC will determine if the purge solenoid is leaking to engine manifold vacuum.</p> <p>This test checks for purge valve leaks to intake manifold vacuum such that there would always be a small amount of purge flow present. It does this by sealing the EVAP system (purge and vent valve closed) and then monitors fuel tank vacuum level. The fuel tank vacuum level should not increase. If tank vacuum increases above a threshold, a malfunction is indicated.</p> <p>Additional Information</p> <p>This diagnostic test detects purge valve leaks to intake manifold vacuum. It is not intended to detect purge valve leaks to the atmosphere which are monitored by the EONV small leak diagnostic (P0442).</p> <p>The purge valve leak diagnostic exists to help service replace</p>	<p>Tank Vacuum for</p> <p>Test time</p>	<p>> 2,491 Pa 5 seconds</p> <p>≤ refer to P0496 Purge Valve Leak Test Engine Vacuum Test Time (Cold Start) as a Function of Fuel Level in Supporting Tables.</p> <p>Test time only increments when engine vacuum ≥ 10.0 kPa.</p>	<p>Fuel Level System Voltage BARO Startup IAT</p> <p>Startup ECT Engine Off Time</p> <p>No active DTCs:</p> <p>No Active DTC's TFTKO</p>	<p>10 % ≤ Percent ≤ 90 % ≥ 10.0 volts ≥ 70 kPa 4 °C ≤ Temperature ≤ 35 °C</p> <p>≤ 35 °C ≥ 28,800.0 seconds</p> <p>MAP_SensorFA TPS_FA VehicleSpeedSensor_FA IAT_SensorFA ECT_Sensor_FA AmbientAirDefault EnginePowerLimited</p> <p>P0443 P0449 P0452 P0453 P0454 P0458 P0459 P0498 P0499</p>	<p>Once per cold start</p> <p>Cold start: max time is 1,400 seconds</p>	Type B, 2 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
		leaking purge valves that could otherwise be detected with the EONV small leak diagnostic (P0442).						

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Evaporative Emission System Vent Solenoid Control Circuit Low (No ELCP - Conventional EVAP Diagnostic - without Fuel Tank Zone Module (FTZM))	P0498	Controller specific output driver circuit diagnoses the vent solenoid low sided driver for a short to ground failure when the output is powered off by comparing a voltage measurement to controller specific voltage thresholds.	Voltage measurement outside of controller specific acceptable range during driver off state indicates short to ground failure. Controller specific output driver circuit voltage thresholds are set to meet the following controller specification for a short to ground.	$\leq 0.5 \Omega$ impedance between output and controller ground			50 failures out of 63 samples 100 ms / sample	Type B, 2 Trips Note: In certain controlle rs P0449 may also set (Vent Solenoid Open Circuit)

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Evaporative Emission System Vent Solenoid Control Circuit High (No ELCP - Conventional EVAP Diagnostic - without Fuel Tank Zone Module (FTZM))	P0499	Controller specific output driver circuit diagnoses the vent solenoid low sided driver for a short to power failure when the output is powered off by comparing a voltage measurement to controller specific voltage thresholds. If the P0499 is active, an intrusive test is performed with the vent solenoid commanded closed for 15 seconds.	Voltage measurement outside of controller specific acceptable range during driver on state indicates short to power failure. Controller specific output driver circuit voltage thresholds are set to meet the following controller specification for a short to power.	$\leq 0.5 \Omega$ impedance between output and controller power			50 failures out of 63 samples 100 ms / sample	Type B, 2 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Low Engine Speed Idle System	P0506	This DTC indicates that actual engine speed is lower than desired engine speed at idle so that it is out of speed control capability. Testing is performed when basic conditions are met. If filtered engine speed error exceeds a calibrated threshold for a calibrated duration, code is set. This testing is performed continuously per trip if basic conditions are met	Filtered Engine Speed Error. It is calculated with a calibrated filter coefficient Filter coefficient	> 86.50 rpm 0.00250	Baro Coolant Temp Engine run time Ignition voltage Time since gear change Time since a TCC mode change IAT Vehicle speed Commanded RPM delta Idle time For manual transmissions: Clutch Pedal Position or Clutch Pedal Position PTO not active Transfer Case not in 4WD LowState	> 70 kPa > 60 °C ≥ 60 sec 32 ≥ volts ≥ 11 ≥ 3 sec > 3 sec > -20 °C ≤ 1.24 mph, 2kph ≤ 25 rpm > 5 sec > 90.00 pct < 75.00 pct PTO not active Transfer Case not in 4WD LowState	Diagnostic runs in every 12.5 ms loop Diagnostic reports pass or fail in 10 seconds once all enable conditions are met	Type B, 2 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
					No active DTCs	Off-vehicle device control (service bay control) must not be active. following conditions not TRUE: (VeTESR_e_EngSpdReqIntvType = CeTESR_e_EngSpdMinLimit AND VeTESR_e_EngSpdReqRespType = CeTESR_e_NoSuggestion) Clutch is not depressed TC_BoostPresSnsrFA ECT_Sensor_FA EnginePowerLimited EGRValveCircuit_FA EGRValvePerformance_FA IAT_SensorCircuitFA EvapFlowDuringNonPurge_FA FuelTrimSystemB1_FA FuelTrimSystemB2_FA FuelInjectorCircuit_FA MAF_SensorFA EngineMisfireDetected_FA IgnitionOutputDriver_FA TPS_FA TPS_Performance_FA VehicleSpeedSensor_FA FuelLevelDataFault LowFuelConditionDiagnostic Clutch Sensor FA AmbPresDfltStatus		

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
					All of the above met for Idle time	P2771 > 5sec The diagnostic does not run during autostop as engine is shutdown during that time (occurs in a hybrid or 12v start stop vehicle)		

210BDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
High Engine Speed Idle System	P0507	This DTC indicates that actual engine speed is higher than desired engine speed at idle so that it is out of speed control capability. Testing is performed when basic conditions are met. If filtered engine speed error exceeds a calibrated threshold for a calibrated duration, code is set. This testing is performed continuously per trip if basic conditions are met	Filtered Engine Speed Error. It is calculated with a calibrated filter coefficient Filter coefficient	< -173.10 rpm 0.00250	Baro Coolant Temp Engine run time Ignition voltage Time since gear change Time since a TCC mode change IAT Vehicle speed Commanded RPM delta For manual transmissions: Clutch Pedal Position or Clutch Pedal Position	> 70 kPa > 60 °C ≥ 60 sec 32 ≥ volts ≥ 11 ≥ 3 sec > 3 sec > -20 °C ≤ 1.24 mph, 2kph ≤ 25 rpm > 90.00 pct < 75.00 pct PTO not active Transfer Case not in 4WD LowState Off-vehicle device control (service bay control) must not be active.	Diagnostic runs in every 12.5 ms loop Diagnostic reports pass or fail in 10 seconds once all enable conditions are met	Type B, 2 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
					No active DTCs	<p>following conditions not TRUE: (VeTESR_e_EngSpdReqIntvType = CeTESR_e_EngSpdMinLimit AND VeTESR_e_EngSpdReqRespType = CeTESR_e_NoSuggestion)</p> <p>Clutch is not depressed</p> <p>TC_BoostPresSnsrFA ECT_Sensor_FA EnginePowerLimited EGRValveCircuit_FA EGRValvePerformance_FA IAT_SensorCircuitFA EvapFlowDuringNonPurge_FA FuelTrimSystemB1_FA FuelTrimSystemB2_FA FuelInjectorCircuit_FA MAF_SensorFA EngineMisfireDetected_FA IgnitionOutputDriver_FA TPS_FA TPS_Performance_FA VehicleSpeedSensor_FA FuelLevelDataFaultLow FuelConditionDiagnostic Clutch SensorFA AmbPresDfltStatus P2771</p>		
					All of the above met	> 5 sec		

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
					for Idle time	The diagnostic does not run during autostop as engine is shutdown during that time (occurs in a hybrid or 12v start stop vehicle)		

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Cold Start Rough Idle	P050D	Monitors the combustion performance when the cold start emission reduction strategy is active by accumulating and determining the percentage of engine cycles that have less than complete combustion relative to the total number of engine cycles in which Dual Pulse is active.	<p>Deceleration index vs. Engine Speed Vs Engine load</p> <p>Deceleration index calculation is tailored to specific vehicle. Tables used are 1st tables encountered that are not max of range. Undetectable region at a given speed/load point is where all tables are max of range point.</p> <p>Incomplete combustion identified by P0300 threshold tables:</p>	<p>(>Idle SCD AND >Idle SCD ddt Tables) OR (>Idle Cyl Mode AND > Idle Cyl Mode ddt Tables)</p>	<p>Misfire Algorithm Enabled (Refer to P0300 for Enablement Requirements)</p> <p>OBD Manufacturer Enable Counter</p> <p>To enable the diagnostic, the Cold Start Emission Reduction Strategy Must Be Active per the following:</p> <p>Catalyst Temperature AND Engine Coolant AND Engine Coolant AND Barometric Pressure</p> <p>In addition, Dual Pulse Strategy Is Enabled and Active Per the following:</p> <p>Engine Speed</p> <p>Accel Position</p> <p>Engine Run Time</p> <p>For the engine speeds and loads in which Dual Pulse is active:</p>	<p>= 0</p> <p>< 500.00 degC > -12.00 degC <= 66.00 degC >= 72.00 KPa</p> <p>>= 250.00 RPM <= 2,000.00 RPM</p> <p><= 1.00 Pct</p> <p>< 20 seconds</p>	<p>Runs once per trip when the cold start emission reduction strategy is active and Dual Pulse is enabled and active.</p> <p>Frequency: 100ms</p> <p>Test completes after Dual Pulse is no longer active OR The first 500 engine cycles have been reached</p>	Type B, 2 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
					Dual Pulse Error induced misfires percentage	>= catalyst damaging misfire		
					Dual Pulse Error induced misfires percentage	< 90% of the maximum achievable catalyst damaging misfire.		
					Engine Cycles	>= 50.00 < 501		
					The Cold Start Emission Reduction strategy must not be exiting. The strategy will exit per the following:			
					Catalyst Temperature AND Engine Run Time	>= 1,000.00 degC >= 17.50 seconds		
					OR			
					Engine Run Time	> 5 minutes catalyst		
						ExtendedEngineRunTimeExit		
						This Extended Engine run time exit is a function of percent ethanol and Catmons form at 0.1 e er to support ng a es or details.		
					OR			
					Barometric Pressure	< 72.00 KPa		

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
					<p>Dual Pulse Strategy will exit per the following:</p> <p>Engine Speed OR Accel Position</p> <p>Engine Run Time</p> <p>Dual Pulse Strategy will also exit if the any of the "Additional Dual Pulse Enabling Criteria" is not satisfied:</p> <p>"Additional Dual Pulse Enabling Criteria":</p> <p>Green Engine Enrichment</p> <p>Misfire Converter Protection strategy</p> <p>Engine Metal Overtemp strategy</p> <p>Fuel control state</p> <p>Output State Control</p> <p>DOD Or DFCO</p> <p>Power Enrichment</p> <p>Dynamic Power Enrichment</p> <p>Piston Protection</p> <p>Hot Coolant Enrichment</p>	<p>> 2,200.00 RPM</p> <p>> 2.00 Pct</p> <p>>= 20 seconds</p> <p>Not Enabled</p> <p>Not being requested</p> <p>Not being requested</p> <p>pen oop</p> <p>Not being requested for fuel</p> <p>Not Active</p> <p>Not Active</p> <p>Not Active</p> <p>Not Active</p> <p>Not Active</p>		

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
					Injector Flow Test General Enable DTC's Not Set:	Not Active AcceleratorPedalFailure ECT_Sensor_FA IAT_SensorCircuitFA MnfdTempSensorCktFA CrankSensor_FA FuelInjectorCircuit_FA MAF_SensorFA MAP_SensorFA AnyCamPhaser_TFTKO ClutchPstnSnsr FA IAC_SystemRPM_FA IgnitionOutputDriver_FA TPS_FA VehicleSpeedSensor_FA FuelInjectorCircuit_TFTK O FHPR_b_FRP_SnsrCkt_F A FHPR_b_FRP_SnsrCkt_T FTKO FHPR_b_PumpCkt_FA FHPR_b_PumpCkt_TFTK O TransmissionEngagedStat e_FA EngineTorqueEstInaccu rate FuelPumpRlyCktFA		

210BDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Engine Oil Pressure (EOP) Sensor Performance - Two Stage Oil Pump	P0521	<p>Determines if the Engine Oil Pressure (EOP) Sensor is stuck or biased in range. The engine oil pressure is compared against thresholds when engine is running and when engine is off. The engine oil pressure rationality diagnostic has two parts: engine running test and engine off test.</p> <p>The engine running test compares the measured oil pressure to threshold. If the measured oil pressure is out of the thresholds, then the error counter increments. The engine off test compares the measured oil pressure against thresholds after the engine has stopped rotating. If the measured oil pressure is out of the thresholds, then the error counter increments.</p>	<p>Two Stage Oil Pump EOP Sensor Test with Engine Running, High Pressure State</p> <p><u>To Fail when previously passing with the engine running:</u></p> <p>Filtered Engine Oil Pressure below expected threshold</p> <p>OR</p> <p>Filtered Engine Oil Pressure above expected threshold</p> <p><u>To pass when previously failing:</u></p> <p>Filtered Engine Oil Pressure above low threshold plus an offset</p> <p>OR</p>	<p>Filtered Oil Pressure < (P0521_P06DD_P06D E_OP_HiStatePressure * 1.00 - 133.0 kPa)</p> <p>OR</p> <p>Filtered Oil Pressure > (P0521_P06DD_P06D E_OP_HiStatePressure * 1.00 + 133.0 kPa)</p> <p>Filtered Oil Pressure > (P0521_P06DD_P06D E_OP_HiStatePressure (re * 1.00 - 133.0 kPa + 10.0 kPa)</p> <p>OR</p> <p>Filtered Oil Pressure < (</p>	<p>Two Stage Oil Pump is Present = TRUE</p> <p>Pump is in high pressure state</p> <p>Engine Running Diagnostic Status</p> <p>Engine Off Rationality Test Diagnostic Reporting Status</p> <p>Oil Pressure Sensor In Use</p> <p>Engine Running</p> <p>Ambient Air Pressure</p> <p>Oil Aeration (= TRUE if engine speed > 5,000 RPM for longer than 30.0seconds)</p> <p>Filtered Engine Speed within range</p> <p>Modelled Oil Temperature within range</p> <p>Pump state change complete</p> <p>No active DTC's</p>	<p>TRUE</p> <p>Enabled</p> <p>Test not report a fail state</p> <p>Yes</p> <p>≥ 20.0 seconds</p> <p>≥ 70.0 kPa</p> <p>FALSE</p> <p>1,500 RPM ≤ Filtered Engine Speed ≤ 2,150 RPM</p> <p>50.0 deg C ≤ Oil Temp ≤ 105.0 deg C</p> <p>Time since state change > 1.50 s</p> <p>Fault bundles: MAF_SensorFA ECT_Sensor_FA IAT_SensorFA EngOilPressureSensorCkt FA AmbientAirDefault</p>	<p>≥ 40 errors out of 50 samples.</p> <p>Performed every 100 msec</p> <p>≥ 10 passes out of 50 samples.</p> <p>Performed every 100 msec</p>	Type B, 2 Trips

210BDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
			Filtered Engine Oil Pressure below high threshold minus an offset	P0521_P06DD_P06DE_OP_HiStatePressure * 1.00 + 133.0 kPa - 10.0 kPa) (Details on Supporting Tables Tab: P0521_P06DD_P06DE_OP_HiStatePressure)		EngOilTempFA CrankSensor_FA		
			Two Stage Oil Pump EOP Sensor Test with Engine Running, Low Pressure State <u>To Fail when previously passing with the engine running:</u> Filtered Engine Oil Pressure below expected threshold Filtered Engine Oil Pressure above expected threshold	Filtered Oil Pressure < (P0521_P06DD_P06DE_OP_LoStatePressure * 1.00 - 140.0 kPa) Filtered Oil Pressure > (P0521_P06DD_P06DE_OP_LoStatePressure * 1.00 + 133.0 kPa)	Two Stage Oil Pump is Present = TRUE Pump is in low pressure state Engine Running Diagnostic Status Engine Off Rationality Test Diagnostic Reporting Status Oil Pressure Sensor In Use Engine Running Ambient Air Pressure Oil Aeration (= TRUE if engine speed > 5,000 RPM for longer than 30.0seconds) Filtered Engine Speed within range	TRUE Enabled Test not report a fail state Yes ≥ 20.0 seconds ≥ 70.0 kPa FALSE 1,500 RPM ≤ Filtered Engine Speed ≤ 2,150 RPM	≥ 40 errors out of 50 samples. Performed ever 100 msec	

210BDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
			<p><u>To pass when previously failing:</u></p> <p>Filtered Engine Oil Pressure above low threshold plus an offset</p> <p>OR</p> <p>Filtered Engine Oil Pressure below high threshold minus an offset</p>	<p>Filtered Oil Pressure > (P0521_P06DD_P06DE_OP_LoStatePressure * 1.00 - 140.0 kPa + 10.0 kPa)</p> <p>OR</p> <p>Filtered Oil Pressure < (P0521_P06DD_P06DE_OP_LoStatePressure * 1.00 + 133.0 kPa - 10.0 kPa)</p> <p>(Details on Supporting Tables Tab: P0521_P06DD_P06DE_OP_LoStatePressure)</p>	<p>Modelled Oil Temperature within range</p> <p>Pump state change complete</p> <p>No active DTC's</p>	<p>50.0 deg C ≤ Oil Temp ≤ 105.0 deg C</p> <p>Time since state change > 1.50 s</p> <p>Fault bundles: MAF_SensorFA ECT_Sensor_FA IAT_SensorFA EngOilPressureSensorCktFA AmbientAirDefault EngOilTempFA CrankSensor_FA</p>	<p>≥ 10 passes out of 50 samples.</p> <p>Performed every 100 msec</p>	
			<p>Two Stage Oil Pump EOP Sensor Test with Engine Off</p> <p>If enabled:</p> <p><u>To Fail when previously passing with the engine off:</u></p> <p>Filtered Engine Oil Pressure greater than threshold</p>	<p>Filtered Oil Pressure ≥ 40.0 kPa</p>	<p>Two Stage Oil Pump is Present = TRUE</p> <p>Engine Off Rationality Test Diagnostic Status</p> <p>Engine Running Rationality Test Diagnostic Status</p> <p>Modelled Oil Temperature No Engine Movement No active DTC's</p>	<p>TRUE</p> <p>Enabled</p> <p>Test not report a fail state</p> <p>≥ 70.0 deg C > 4.0 seconds EngineModeNotRunTimer_FA EngOilTempFA</p>	<p>≥ 20 errors out of 40 samples.</p> <p>Run once per trip</p>	

210BDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
						EngOilPressureSensorCkt FA CrankSensor_FA		

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Engine Oil Pressure (EOP) Sensor Circuit Low Voltage	P0522	Determines if the Engine Oil Pressure (EOP) Sensor circuit voltage is too low. This diagnostic compares the EOP circuit voltage to the reference voltage.	(Engine Oil Pressure Sensor Circuit Voltage) ÷ 5 Volts) *100	< 5.00percent Deadband: < 5 percent or > 95 percent	Engine Speed Enable Engine Speed Disable Oil Pressure Sensor In Use Diagnostic Status	> 400 rpm < 350 rpm Yes Enabled	1,280 failures out of 1,600 samples Performed every 3.125 msec	Type B, 2 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Engine Oil Pressure (EOP) Sensor Circuit High Voltage	P0523	Determines if the Engine Oil Pressure (EOP) Sensor circuit voltage is too high. This diagnostic compares the EOP circuit voltage to the reference voltage.	(Engine Oil Pressure Sensor Circuit Voltage) ÷ 5 Volts) *100	> 95.00 percent Deadband: < 5 percent or > 95 percent	Oil Pressure Sensor In Use Diagnostic Status	Yes Enabled	1,280 failures out of 1,600 samples Performed every 3.125 msec	Type B, 2 Trips

210BDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Cruise Control Mutil- Functon Switch Circuit	P0564	<p>Detect when cruise control multi-function switch circuit (analog) voltage is in an invalid range.</p> <p>"Emissions Neutral Default Action : When the BCM tells the ECM that the cruise control analog input voltage is in an invalid range, ECM sets the code and cruise control will be disabled and disengaged for the remainder of the key cycle regardless of current pass/fail condition once it fails."Detect when cruise control multi-function switch circuit (analog) voltage is in an invalid range</p>	Cruise Control analog circuit voltage must be "between ranges" for greater than a calibratable period of time.	<p>The cruise control analog voltage A/D count ratio is considered to be "between ranges" when the ratio is measured in the following ranges:</p> <p>0.28 -0.31, 0.415-0.445, 0.585 - 0.615 0.78 - 0.81, 1.005 - 1.035</p>	<p>Diagnostic is Enabled.</p> <p>CAN cruise switch diagnostic enable in ECM</p>	1.00	fail continuously for greater than 0.500 seconds	<p>Type C, No SVS</p> <p>"Emissions Neutral Diagnostics – special type C"</p> <p>"Neutral Default State - When the BCM tells the ECM that the cruise control analog input voltage is in an invalid range, ECM sets the code and cruise control is disabled"</p>

210BDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Cruise Control On Switch Circuit	P0565	<p>Detects a failure of the cruise on/off switch in a continuously applied state</p> <p>"Emissions Neutral Default Action - When the BCM tells the ECM that the cruise control analog input voltage is in the Momentary Cruise On/Off range for too long, the code is set and cruise control is disabled and disengaged for the remainder of the key cycle regardless of current pass/fail condition once it fails." Only applicable for vehicles with a momentary on/off cruise switch architecture.</p>	Cruise Control On switch remains applied for greater than a calibratable period of time.	fail continuously in the applied state for greater than 20.00 seconds	<p>Diagnostic is Enabled.</p> <p>CAN cruise switch diagnostic enable in ECM</p>	1.00	fail continuously for greater than 20.00 seconds	Type C, No SVS , "Emissions Neutral Diagnostics – special type C"

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Cruise Control Resume Circuit	P0567	<p>Detects a failure of the cruise resume switch in a continuously applied state</p> <p>"Emissions Neutral Default Action : When the BCM tells the ECM that the cruise control analog input voltage is in the Resume range for too long, the code is set and cruise control is disabled and disengaged for the remainder of the key cycle regardless of current pass/fail condition once it fails."</p>	Cruise Control Resume switch remains applied for greater than a calibratable period of time.	fail continuously in the applied state for greater than 89.000 seconds	<p>Diagnostic is Enabled.</p> <p>CAN cruise switch diagnostic enable in ECM</p>	1.00	fail continuously for greater than 89.000 seconds	<p>Type C, No SVS</p> <p>, "Emissions Neutral Diagnostics – special type C"</p>

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Cruise Control Set Circuit	P0568	<p>Detects a failure of the cruise set switch in a continuously applied state</p> <p>"Emissions Neutral Default Action : When the BCM tells the ECM that the cruise control analog input voltage is in the Set range for too long, the code is set and cruise control will be disabled and disengaged for the remainder of the key cycle regardless of current pass/fail condition once it fails."</p>	Cruise Control Set switch remains applied for greater than a calibratable period of time.	fail continuously in the applied state for greater than 89.000 seconds	<p>Diagnostic is Enabled.</p> <p>CAN cruise switch diagnostic enable in ECM</p>	1.00	fail continuously for greater than 89.000 seconds	Type C, No SVS , "Emissions Neutral Diagnostics – special type C"

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Cruise Control Cancel Switch Circuit	P056C	<p>Detects a failure of the cruise cancel switch in a continuously applied state</p> <p>"Emissions Neutral Default Action : When the BCM tells the ECM that the cruise control analog input voltage is in the Cancel range for too long, ECM sets the code and cruise control will be disabled and disengaged for the remainder of the key cycle regardless of current pass/fail condition once it fails."</p>	Cruise Control Cancel switch remains applied for greater than a calibratable period of time.	fail continuously in the applied state for greater than 20.00 seconds	<p>Diagnostic is Enabled.</p> <p>CAN cruise switch diagnostic enable in ECM</p>	1.00	fail continuously for greater than 20.00 seconds	Type C, No SVS , "Emissions Neutral Diagnostics – special type C"

210BDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Cruise Control Input Circuit	P0575	Determines if cruise switch state received from the BCM is valid. "Emissions Neutral Default Action : When the ECM determines that a serial communication fault from the BCM has occurred with frame \$1E1, ECM sets the code and cruise control will be disabled and disengaged for the remainder of the key cycle regardless of current pass/fail condition once it fails."	If x of y rolling count / protection value faults occur, disable cruise for duration of fault	Message <> 2's complement of message Message rollying count<>previous message rolling count value plus one	Diagnostic is Enabled. Cruise Control Switch Serial Data Error Diagnostic Enable Serial communication to BCM Power Mode Engine Running	1.00 No loss of communication = RUN = TRUE	9 failures out of / 17 samples Performed on every received message 9 rolling count failures out of / 17 samples Performed on every received messagw	Type C, No SVS "Emission ns Neutral Diagnost ics – special type C"

210BDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Brake Pedal Position Sensor Circuit Range/ Performance	P057B	This diagnostic monitors the Brake Pedal Position Sensor for a stuck in range failure	.Brake pedal position sensor movement diagnostic cal is enabled 1.00	True	Diagnostic is Enabled. Brake Pedal Position Sensor Circuit Range / Performance Diagnostic Enable	1.00 ignition voltage > 10.00		MIL: Type A, 1 Trips
			Calculated EWMA value must be greater than calibratable threshold after calibratable number of tests have completed to report a "test passed" for P057B	EWMA value looked up in supporting table P057B KtBRKI_K_FastTestPointWeight P057B as a function of calculated brake pedal position delta EWMA value is > 0.80	calculated brake pedal position delta sample counter > 50.00 for fast test OR calculated brake pedal position delta sample counter > 1,000.00 for slow test	calculated brake pedal position delta > 4.21 OR (for slow test) shift lever has been in park once this key cycle vehicle speed >= 40.00 accelerator pedal position < 5.00	total number of EWMA tests > 20.00	
			Calculated EWMA Value must be less than calibratable threshold after calibratable number of tests have completed to report a "test failed" for P057B. This test runs once per key cycle	EWMA value looked up in supporting table P057B KtBRKI_K_CmpltTestPointWeight P057B as a function of calculated brake pedal position delta EWMA value is less than 0.40	no DTC's active (P057C, P057D)	shift lever has been in park once this key cycle vehicle speed >= 40.00 accelerator pedal position < 5.00	total number of EWMA tests > 2.00	

210BDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Brake Pedal Position Sensor Circuit Low	P057C	detects short to ground for brake pedal position sensor	If x of y samples are observed below failure threshold, default brake pedal position to zero percent.	5.00	Diagnostic is Enabled. Brake Pedal Position Sensore Low Voltage Diagnostic Enable	1.00	20 / 32.00 counts	MIL: Type A, 1 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Brake Pedal Position Sensor Circuit High	P057D	detects open circuit for brake pedal position sensor	If x of y samples are observed above failure threshold, default brake pedal position to zero percent and set DTC	95.00	Diagnostic is Enabled. Brake Pedal Position Sensore High Voltage Diagnostic Enable	1.00	20.00 / 32.00 counts	MIL: Type A, 1 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Brake Pedal Position Sensor Circuit Intermittent/ Erratic	P057E	detects noisy / erratic ouput for brake pedal position sensor	If x of y samples are observed above failure threshold, default brake pedal position to zero percent and set DTC	20.00	Diagnostic is Enabled. Brake Pedal Position Sensor Circuit Intermittent / Erratic Diagnostic Enable	1.00	10.00 / 16.00 counts	MIL: Type A, 1 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Cruise Control Multi- function Circuit Low Voltage	P0580	detects short to ground failure for cruise multi-function switch circuit "Emissions Neutral Default Action : When the BCM tells the ECM that the cruise switch circuit voltage is too low for too long, ECM sets the code and cruise control will be disabled and disengaged for the remainder of the key cycle regardless of current pass/fail condition once it fails." Only applicable for vehicles with a momentary on/off cruise switch architecture.	Cruise Control analog circuit voltage must be in an "Open Short To Ground" range for greater than a calibratable period of time.	The cruise control analog voltage A/D count ratio is considered to be "open short to ground when the ratio is measured in the following ranges: 0 - 0.185	Diagnostic is Enabled. CAN cruise switch diagnostic enable in ECM	1.00	fail continuously for greater than 2.00 seconds	Type C, No SVS , "Emissions Neutral Diagnostics – special type C"

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Cruise Control Multi- function Circuit High Voltage	P0581	detects short to power failure for cruise multi-function switch circuit "Emissions Neutral Default Action : When the BCM tells the ECM that the cruise switch circuit voltage is too high for too long, ECM sets the code and cruise control will be disabled and disengaged for the remainder of the key cycle regardless of current pass/fail condition once it fails." Only applicable for vehicles with a momentary on/off cruise switch architecture.	Cruise Control analog circuit voltage must be in "Short To Power" range for greater than a calibratable period of time.	The cruise control analog voltage A/D count ratio is considered to be "short to power" when the ratio is measured in the following range: 1.005 - 1.035	Diagnostic is Enabled. CAN cruise switch diagnostic enable in ECM	1.00	fail continuously for greater than 2.00 seconds	Type C, No SVS , "Emissions Neutral Diagnostics – special type C"

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Thermostat Heater Control Open Circuit	P0597	Controller specific output driver circuit diagnoses the Thermostat Heater Control sided driver for an open circuit failure when the output is powered off by comparing a voltage measurement to controller specific voltage thresholds.	<p>Voltage measurement outside of controller specific acceptable range during driver off state indicates open circuit failure.</p> <p>Controller specific output driver circuit voltage thresholds are set to meet the following controller specification for an open circuit.</p>	$\geq 200\text{ K } \Omega$ impedance between signal and controller ground.	<p>Run Crank Ignition in Range</p> <p>Engine not cranking Run Crank active</p> <p>== Above is true and ==</p> <p>Last Open Circuit Test</p>	<p>= True</p> <p>= True = True</p> <p>=====</p> <p>= not Indeterminate</p>	<p>5 failures out of 6 samples</p> <p>1 sec/ sample</p> <p>Continuous</p>	Type B, 2 Trips Note: In certian controllers P0598 may also set

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Thermostat Heater Control Circuit Low	P0598	Controller specific output driver circuit diagnoses the Thermostat Heater low sided driver for a short to ground failure when the output is powered off by comparing a voltage measurement to controller specific voltage thresholds.	<p>Voltage measurement outside of controller specific acceptable range during driver off state indicates short to ground failure.</p> <p>Controller specific output driver circuit voltage thresholds are set to meet the following controller specification for a short to ground.</p>	$\leq 0.5 \Omega$ impedance between signal and controller ground	<p>Run Crank Ignition in Range</p> <p>Engine not cranking Run Crank active</p> <p>== Above is true and ==</p> <p>Last Ground Short Circuit Test</p>	<p>= True</p> <p>= True = True</p> <p>=====</p> <p>= not Indeterminate</p>	<p>5 failures out of 6 samples</p> <p>1 sec/ sample</p> <p>Continuous</p>	Type B, 2 Trips Note: In certian controllers P0597 may also set

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Thermostat Heater Control Circuit High	P0599	Controller specific output driver circuit diagnoses the Thermostat Heater low sided driver for a short to power failure when the output is powered on by comparing a voltage measurement to controller specific voltage thresholds.	<p>Voltage measurement outside of controller specific acceptable range during driver on state indicates short to power failure.</p> <p>Controller specific output driver circuit voltage thresholds are set to meet the following controller specification for a short to power.</p>	$\leq 0.5 \Omega$ impedance between signal and controller power.	<p>Run Crank Ignition in Range</p> <p>Engine not cranking Run Crank active</p> <p>== Above is true and ==</p> <p>Last Power Short Circuit Test</p>	<p>= True</p> <p>= True = True</p> <p>=====</p> <p>= not Indeterminate</p>	<p>5 failures out of 6 samples</p> <p>1 sec/ sample</p> <p>Continuous</p>	Type B, 2 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Active Grill Air Shutter A Performance /Stuck OFF	P059F	A 2-part diagnostic. Part 1 continuously monitors for failure to achieve a commanded shutter actuator position [Suspect Stuck Condition] when X failures occur in Y samples after an electronic command latency delay. A Part 1 failure result then enables Part 2 which makes a fixed number of repeat attempts to reach the commanded position [ReTry to clear obstruction]. The DTC is set when the calibrated fault threshold count of repeat attempts is reached without achieving the original commanded shutter position.	Smart Shutter Actuator 1 Position Response	<> Smart Shutter Actuator 1 Commanded Position percent	a. Ignition Run_Crank Active, b. Ignition Run_Crank AND Ignition Accessory AND ECU Awake, c. Command Shutter1 Enable	a. = TRUE, b. = FALSE AND = FALSE AND = TRUE, c. = 1.00	1.00 failures out of 1.00 samples 1 sample / 100 milliseconds	Type B, 2 Trips
			AND Shutter 1 Diagnostic Delay Threshold count	AND Counter > 99.00 counts				
			Shutter 1 Performance Test count	= 5.00 counts	a. Ignition Run_Crank Active, b. Ignition Run_Crank AND Ignition Accessory AND ECU Awake, c. Command Shutter1 Enable	a. = TRUE, b. = FALSE AND = FALSE AND = TRUE, c. = 1.00	1-5 actuator cycles [1 cycle typically requires 10-25 seconds]	

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Control Module Read Only Memory (ROM)	P0601	This DTC will be stored if the calibration check sum is incorrect or the flash memory detects an uncorrectable error via the Error Correcting Code.	The Primary Processor's calculated checksum does not match the stored checksum value. Covers all software and calibrations.	1 failure if the fault is detected during the first pass. 5,00 failures if the fault occurs after the first pass is complete.			Diagnostic runs continuously in the background.	Type A, 1 Trips
			The Primary Processor's Error Correcting Code hardware in the flash memory detects an error. Covers all software and calibrations.	254 failures detected via Error Correcting Code			Diagnostic runs continuously via the flash hardware.	
			The Primary Processor's calculated checksum does not match the stored checksum value for a selected subset of the calibrations.	2 consecutive failures detected or 5 total failures detected.			Diagnostic runs continuously. Will report a detected fault within 200 ms.	
			The Secondary Processor's calculated checksum does not match the stored checksum value. Covers all software and calibrations.	1 failure if the fault is detected during the first pass. 5 failures if the fault occurs after the first pass is complete.			Diagnostic runs continuously in the background.	
				In all cases, the failure count is cleared when controller shuts down				

210BDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Control o u e o rogramme	P0602	This DTC will be stored e s a serv ce par a as no een programme .	Service (reflash) controller ca ra on presen	= 1		none	Diagnostic runs a powerup an once per secon con nuous y after that	Type A, r ps

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
ECM Long Term Memory Reset	P0603	This DTC detects an invalid NVM which includes a Static NVM, Perserved NVM, ECC ROM in NVM Flash Region, and Perserved NVM during shut down.	Static NVM region error detected during initialization				Diagnostic runs at controller power up.	Type A, 1 Trips
			Perserved NVM region error detected during initialization				Diagnostic runs at controller power up.	
			ECC ROM fault detected in NVM Flash region ECC ROM Error Count >	3			Diagnostic runs at controller power up.	
			Perserved NVM region error detected during shut down.				Diagnostic runs at controller power down.	

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
ECM RAM Failure	P0604	Indicates that the ECM has detected a RAM fault. This includes Primary Processor System RAM Fault, Primary Processor Cache RAM Fault, Primary Processor TPU RAM Fault, Primary Processor Update Dual Store RAM Fault, Primary Processor Write Protected RAM Fault, and Secondary Processor RAM Fault. This diagnostic runs continuously.	Indicates that the primary processor is unable to correctly read data from or write data to system RAM. Detects data read does not match data written >=	254 counts			Will finish first memory scan within 30 seconds at all engine conditions - diagnostic runs continuously (background loop)	Type A, 1 Trips
			Indicates that the primary processor is unable to correctly read data from or write data to cached RAM. Detects data read does not match data written >=	254 counts			Will finish first memory scan within 30 seconds at all engine conditions - diagnostic runs continuously (background loop)	
			Indicates that the primary processor is unable to correctly read data from or write data to TPU RAM. Detects data read does not match data written >=	5 counts			Will finish first memory scan within 30 seconds at all engine conditions - diagnostic runs continuously (background loop)	
			Indicates that the primary processor detects a mismatch between the data and dual data is found during RAM updates. Detects a mismatch in data and dual data updates >	0.46000 s			When dual store updates occur.	

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
			Indicates that the primary processor detects an illegal write attempt to protected RAM. Number of illegal writes are >	65,534 counts			Diagnostic runs continuously background loop	
			Indicates that the secondary processor's unauthorized read or write to a system memory address does not make a write =>	5 counts			Will finish first memory scan when secondary engine conditions - diagnosis runs continuously background loop)	

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Internal ECM Processor Integrity Fault	P0606	Indicates that the ECM has detected an internal processor integrity fault. These include diagnostics done on the SPI Communication as well as a host of diagnostics for both the primary and secondary processors.	Loss or invalid message of SPI communication from the Secondary Processor at initialization detected by the Primary Processor or loss or invalid message of SPI communication from the Secondary Processor after a valid message was received by the Primary Processor	Loss or invalid message at initialization detected or loss or invalid message after a valid message was recieved	Run/Crank voltage Run/Crank voltage	>= 6.41 Volts or >= 11.00 Volts, else the failure will be reported for all conditions	In the primary processor, 159/ 399 counts intermittent or 39 counts continuous; 39 counts continuous @ initialization. 12.5 ms /count in the ECM main processor	Type A, 1 Trips
			Loss or invalid message of SPI communication from the Primary Processor at initialization detected by the Secondary Processor or loss or invalid message of SPI communication from the Primary Processor after a valid message was received by the Secondary Processor	Loss or invalid message at initialization detected or loss or invalid message after a valid message was recieved			In the secondary processor, 20 / 200 counts intermittent or 0.1875 s continuous; 0.4750 s continuous @ initialization. 12.5 ms /count in the ECM secondary processor	
			Checks for stack over or underflow in secondary processor by looking for corruption of known pattern at stack boundaries. Checks number of stack over/ under flow since last powerup reset >=	5		Test is Enabled: 1 (If 0, this test is disabled)	variable, depends on length of time to corrupt stack	
			MAIN processor is verified by responding to a seed sent from the secondary with a key response to secondary. Checks number of incorrect keys	2 incorrect seeds within 8 messages, 0.2000 seconds		ignition in Run or Crank	150 ms for one seed continually failing	

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
			received > or Secondary processor has not received a new within time limit					
			Time new seed not received exceeded			always running	0.450 seconds	
			MAIN processor receives seed in wrong order			always running	3 / 17 counts intermittent. 50 ms/count in the ECM main processor	
			2 fails in a row in the Secondary processor's ALU check			Test is Enabled: 1 (If 0, this test is disabled)	25 ms	
			2 fails in a row in the Secondary processor's configuration register masks versus known good data			Test is Enabled: 1 (If 0, this test is disabled)	12.5 to 25 ms	
			Secondary processor detects an error in the toggling of a hardware discrete line controlled by the MAIN processor: number of discrete changes > = or < = over time window(50ms)	7 17		Test is Enabled: 0 (If 0, this test is disabled) time from initialization >= 0.4875 seconds	50 ms	
			Software background task first pass time to complete exceeds			Run/Crank voltage > 6.41	360.000 seconds	
			2 fails in a row in the MAIN processor's ALU check			Test is Enabled: 1 (If 0, this test is disabled)	25 ms	
			2 fails in a row in the MAIN processor's			Test is Enabled: 1	12.5 to 25 ms	

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
			configuration register masks versus known good data			(If 0, this test is disabled)		
			Checks number of stack over/under flow since last powerup reset >=	3		Test is Enabled: 1 (If 0, this test is disabled)	variable, depends on length of time to corrupt stack	
			Voltage deviation >	0.4950		Test is Enabled: 1 (If 0, this test is disabled)	5 / 10 counts or 0.150 seconds continuous; 50 ms/count in the ECM main processor	
			Checks for ECC (error correcting code) circuit test errors reported by the hardware for flash memory. Increments counter during controller initialization if ECC error occurred since last controller initialization. Counter >=	3 (results in MIL), 5 (results in MIL and remedial action)		Test is Enabled: 1 (If 0, this test is disabled)	variable, depends on length of time to access flash with corrupted memory	
			Checks for ECC (error correcting code) circuit test errors reported by the hardware for RAM memory circuit. Increments counter during controller initialization if ECC error occurred since last controller initialization. Counter >=	3 (results in MIL), 5 (results in MIL and remedial action)		Test is Enabled: 1 (If 0, this test is disabled)	variable, depends on length of time to write flash to RAM variable, depends on length of time to write flash to RAM	
			MAIN processor DMA transfer from Flash to RAM has 1 failure			Test is Enabled: 0 (If 0, this test is disabled)	variable, depends on length of time to write flash to	

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
							RAM	
			Safety critical software is not executed in proper order.	>= 1 incorrect sequence.		Test is Enabled: 1 (If 0, this test is disabled)	Fail Table, f(Loop Time). See supporting tables: P0606_PSW Sequence Fail f (Loop Time) / Sample Table, f (Loop Time)See supporting tables: P0606_PSW Sequence Sample f(Loop Time) counts 50 ms/count in the ECM main processor	
			MAIN processor determines a seed has not changed within a specified time period within the 50ms task.	Previous seed value equals current seed value.		Test is Enabled: 1 (If 0, this test is disabled)	Table, f(Loop Time). See supporting tables: P0606_Last Seed Timeout f (Loop Time)	

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Fuel Pump Relay Control Circuit Low Voltage	P0628	Controller specific output driver circuit diagnoses the Feed Fuel Pump Relay high sided driver for a short to ground failure when the output is powered on by comparing a voltage measurement to controller specific voltage thresholds.	<p>Voltage measurement outside of controller specific acceptable range during driver on state indicates short to ground failure.</p> <p>Controller specific output driver circuit voltage thresholds are set to meet the following controller specification for a short to ground.</p>	<p><= 0.5 Ohms impedance between signal and controller ground</p>	<p>Run/Crank Voltage</p> <p>Engine Speed</p>	<p>Voltage 11.00 volts</p> <p>0 RPM</p>	<p>8 failures out of 10 samples</p> <p>250 ms / sample</p>	Type A, 1 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.	
Internal Control Module Fuel Injector Control Performance	P062B	This DTC determines the internal fuel injector control module circuit is faulted. The faulted status is set on any failure that could potentially damage the drivers or injectors, or could result in uncontrolled fueling. The following general classes of failures shall be covered: Communication error with control circuit Internal corruption of control circuit values, Invalid interface values (from control circuit)	Internal ECU Boost Voltage	>= 90 Volts	Battery Voltage	>= 8 or >= 11 Enabled when a code clear is not active or not exiting device control Engine is not cranking Powertrain Relay Voltage within range	High Voltage - 160 failures out of 200 samples	Type A, 1 Trips	
			OR						Low Voltage - 160 failures out of 200 samples
			Internal ECU Boost Voltage	<= 40 Volts			Driver Status Not Ready- 160 failures out of 200 samples		
			OR				Driver Status Uninitialized - Uninitialized state for >= 100 counts		
			Driver Status	= Not Ready					
			OR						
			Driver Status	= Uninitialized		All at 12.5ms per sample			

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Powertrain Internal Control Module EEPROM Error	P062F	This DTC detects a NVM long term performance. There are two types of diagnostics that run during controller power up. One for HWIO reports a warning on shutdown with no success, and the other reports the assembly calibration integrity check as failed.	HWIO reports that writing to NVM (at shutdown) will not succeed				Diagnostic runs at controller power up.	Type B, 2 Trips
			HWIO reports the assembly calibration integrity check has failed				Diagnostic runs at controller power up.	

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
VIN Not Programmed or Mismatched - Engine Control Module (ECM)	P0630	This DTC checks that the VIN is correctly written	At least one of the programmed VIN digits	= 00 or FF	OBD Manufacturer Enable Counter	= 0	250 ms / test Continuous	Type A, 1 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
5 Volt Reference #1 Circuit	P0641	Detects a continuous or intermittent short on the 5 volt reference circuit #1 by monitoring the reference percent Vref1 and failing the diagnostic when the percent Vref1 is too low or too high or if the delta between the filtered percent Vref1 and non-filtered percent Vref1 is too large. This diagnostic only runs when battery voltage is high enough.	ECM percent Vref1 < or ECM percent Vref1 > or the difference between ECM filtered percent Vref1 and percent Vref1 >	4.875 % Vref1 5.125 % Vref1 0.0495 % Vref1	Diagnostic enabled AND [(Run/Crank voltage for Time period AND Starter engaged) OR (Run/Crank voltage AND Starter engaged)]	= 1 > 6.41 Volts = 0.02 Seconds = FALSE > 8.41 Volts = TRUE	19 / 39 counts; or 0.1875 sec continuous; 12.5 ms/count in main processor	Type A, 1 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Malfunction Indicator Lamp (MIL) Control Circuit (ODM) Open	P0650	Detects an inoperative malfunction indicator lamp control low side driver circuit. This diagnostic reports the DTC when an open circuit is detected.	Voltage low during driver off state (indicates open circuit)	Open circuit: ≥ 200 K Ω impedance between signal and controller ground	Run/Crank Voltage Remote Vehicle Start is not active	Voltage ≥ 11.00 volts	1 failures out of 1 samples 50 ms / sample	Type B, No MIL NO MIL Note: In certain controlle rs P263A may also set (MIL Control Short to Ground)

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
5 Volt Reference #2 Circuit	P0651	Detects a continuous or intermittent short on the 5 volt reference circuit #2 by monitoring the reference percent Vref2 and failing the diagnostic when the percent Vref2 is too low or too high or if the delta between the filtered percent Vref2 and non-filtered percent Vref2 is too large. This diagnostic only runs when battery voltage is high enough.	ECM percent Vref2 < or ECM percent Vref2 > or the difference between ECM filtered percent Vref2 and percent Vref2 >	4.875 % Vref2 5.125 % Vref2 0.0495 % Vref2	Diagnostic enabled AND [(Run/Crank voltage for Time period AND Starter engaged) OR (Run/Crank voltage AND Starter engaged)]	= 1 > 6.41 Volts = 0.02 Seconds = FALSE > 8.41 Volts = TRUE	19 / 39 counts; or 0.1875 sec continuous; 12.5 ms/count in main processor	Type A, 1 Trips

210BDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Powertrain Relay Control (ODM) Open	P0685	Detects an open circuit in the Powertrain Relay driver. This diagnostic reports the DTC when an open circuit failure is present. Monitoring occurs when the output is powered off. A decision is made by comparing a voltage measurement to a controller specific voltage threshold.	<p>Voltage measurement outside of controller specific acceptable range during driver off state indicates open circuit failure.</p> <p>Controller specific output driver circuit voltage thresholds are set to meet the following controller specification for an open circuit.</p>	Open Circuit: ≥ 200 K Ω ohms impedance between output and controller ground	Run/Crank Voltage	Voltage ≥ 11.00 volts	<p>8 failures out of 10 samples</p> <p>250 ms / sample</p>	<p>Type B, 2 Trips</p> <p>Note: In certain controlle rs P0686 may also set (Powertr ain Relay Control Short to Ground).</p>

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Powertrain Relay Control (ODM) Low	P0686	Detects a short to ground in the Powertrain Relay low side driver. This diagnostic reports the DTC when a short to ground failure is present. Monitoring occurs when the output is powered off. A decision is made by comparing a voltage measurement to a controller specific voltage threshold.	<p>Voltage measurement outside of controller specific acceptable range during driver off state indicates short to ground failure.</p> <p>Controller specific output driver circuit voltage thresholds are set to meet the following controller specification for a short to ground.</p>	Short to ground: ≤ 0.5 Ω impedance between output and controller ground	Run/Crank Voltage	Voltage ≥ 11.00 volts	<p>8 failures out of 10 samples</p> <p>250 ms / sample</p>	<p>Type B, 2 Trips</p> <p>Note: In certain controlle rs P0685 may also set (Powertr ain Relay Control Open Circuit).</p>

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Powertrain Relay Control (ODM) High	P0687	Detects a short to power in the Powertrain Relay low side driver. This diagnostic reports the DTC when a short to power failure is present. Monitoring occurs when the output is powered off. A decision is made by comparing a voltage measurement to a controller specific voltage threshold.	<p>Voltage measurement outside of controller specific acceptable range during driver on state indicates short to power failure.</p> <p>Controller specific output driver circuit voltage thresholds are set to meet the following controller specification for a short to power.</p>	Short to power: $\leq 0.5 \Omega$ impedance between output and controller power	Run/Crank Voltage	Voltage ≥ 11.00 volts	8 failures out of 10 samples 250 ms / sample	Type B, 2 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Control Module Power Relay Feedback Circuit Low Voltage	P0689	Detects low voltage in the control module relay feedback circuit. This diagnostic reports the DTC when low voltage is present. Monitoring occurs when run crank voltage is above a calibrated value.	Control module relay feedback circuit low voltage	Powertrain relay voltage <= 5.00	Powertrain relay short low diagnostic enable Run Crank voltage Powertrain relay state	= 1.00 > 9.00 = ON	5 failures out of 6 samples 1000 ms / sample	Type B, 2 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Powertrain Relay Feedback Circuit High	P0690	Detects higher than expected voltage in the powertrain relay feedback circuit. This diagnostic reports the DTC when higher than expected voltage is present. For example, the powertrain relay could be stuck on. Monitoring occurs when the relay is commanded "off" for a calibrated duration.	Powertrain Relay Voltage	>= 4.00 volts will increment the fail counter	Powertrain relay commanded "OFF" No active DTCs:	>= 2.00 seconds PowertrainRelayStateOn_ FA	50 failures out of 63 samples 100ms / Sample	Type B, 2 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
5 Volt Reference #3 Circuit	P0697	Detects a continuous or intermittent short on the 5 volt reference circuit #3 by monitoring the reference percent Vref3 and failing the diagnostic when the percent Vref3 is too low or too high or if the delta between the filtered percent Vref3 and non-filtered percent Vref3 is too large. This diagnostic only runs when battery voltage is high enough.	ECM percent Vref3 < or ECM percent Vref3 > or the difference between ECM filtered percent Vref3 and percent Vref3 >	4.875 % Vref3 5.125 % Vref3 0.0495 % Vref3	Diagnostic enabled AND [(Run/Crank voltage for Time period AND Starter engaged) OR (Run/Crank voltage AND Starter engaged)]	= 1 > 6.41 Volts = 0.02 Seconds = FALSE > 8.41 Volts = TRUE	19 / 39 counts; or 0.1875 sec continuous; 12.5 ms/count in main processor	Type A, 1 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
5 Volt Reference #4 Circuit	P06A3	Detects a continuous or intermittent short on the 5 volt reference circuit #4 by monitoring the reference percent Vref4 and failing the diagnostic when the percent Vref4 is too low or too high or if the delta between the filtered percent Vref4 and non-filtered percent Vref4 is too large. This diagnostic only runs when battery voltage is high enough.	ECM percent Vref4 < or ECM percent Vref4 > or the difference between ECM filtered percent Vref4 and percent Vref4 >	4.875 % Vref4 5.125 % Vref4 0.0495 % Vref4	Diagnostic enabled AND [(Run/Crank voltage for Time period AND Starter engaged) OR (Run/Crank voltage AND Starter engaged)]	= 1 > 6.41 Volts = 0.02 Seconds = FALSE > 8.41 Volts = TRUE	19 / 39 counts; or 0.1875 sec continuous; 12.5 ms/count in main processor	Type A, 1 Trips

210BDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Internal Control Module Knock Sensor Processor 1 Performance	P06B6	This diagnostic checks for a fault with the internal test circuit (sensor #1) used only for the '20 kHz' method of the Open Circuit Diagnostic. A fault is present when the signal level from the 20 kHz range of the FFT output falls between the Open Test Circuit thresholds.	FFT Diagnostic Output	> P06B6_P06B7_OpenTestCktThrshMin AND < P06B6_P06B7_OpenTestCktThrshMax See Supporting Tables	Diagnostic Enabled? Engine Run Time Engine Speed Cumulative Number of Engine Revs (per key cycle) within min/max Engine Speed enable (above) Engine Air Flow	Yes ≥ 2.0 seconds > 600 RPM and < 8,500 RPM ≥ 200 Revs ≥ 40 mg/cylinder and ≤ 2,000 mg/cylinder	First Order Lag Filter with Weight Coefficient Weight Coefficient = 0.0100 Updated each engine event	Type B, 2 Trips

210BDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Internal Control Module Knock Sensor Processor 2 Performance	P06B7	This diagnostic checks for a fault with the internal test circuit (sensor #2) used only for the '20 kHz' method of the Open Circuit Diagnostic. A fault is present when the signal level from the 20 kHz range of the FFT output falls between the Open Test Circuit thresholds.	Individual Sensor Threshold Enabled? FFT Diagnostic Output	0.00 , Use Case 1 Case 1: > P06B6_P06B7_OpenTestCktThrshMin AND < P06B6_P06B7_OpenTestCktThrshMax See Supporting Tables Case 2: > P06B7_OpenTestCktMin2 AND < P06B7_OpenTestCktMax2 See Supporting Tables	Diagnostic Enabled? Engine Run Time Engine Speed Cumulative Number of Engine Revs (per key cycle) within min/max Engine Speed enable (above) Engine Air Flow	Yes ≥ 2.0 seconds > 600 RPM and < 8,500 RPM ≥ 200 Revs ≥ 40 mg/cylinder and ≤ 2,000 mg/cylinder	First Order Lag Filter with Weight Coefficient Case 1 Weight Coefficient = 0.0100 Updated each engine event Case 2 Weight Coefficient = 0.0100 Updated each engine event	Type B, 2 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
5 Volt Reference #5 Circuit	P06D2	Detects a continuous or intermittent short on the 5 volt reference circuit #5 by monitoring the reference percent Vref5 and failing the diagnostic when the percent Vref5 is too low or too high or if the delta between the filtered percent Vref5 and non-filtered percent Vref5 is too large. This diagnostic only runs when battery voltage is high enough.	ECM percent Vref5 < or ECM percent Vref5 > or the difference between ECM filtered percent Vref5 and percent Vref5 >	4.875 % Vref5 5.125 % Vref5 0.0495 % Vref5	Diagnostic enabled AND [(Run/Crank voltage for Time period AND Starter engaged) OR (Run/Crank voltage AND Starter engaged)]	= 1 > 6.41 Volts = 0.02 Seconds = FALSE > 8.41 Volts = TRUE	19 / 39 counts; or 0.1875 sec continuous; 12.5 ms/count in main processor	Type A, 1 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Two Stage Oil Pump Control Circuit Open	P06DA	Controller specific output driver circuit diagnoses the two stage oil pump low sided driver for an open circuit failure when the output is powered off by comparing a voltage measurement to controller specific voltage thresholds.	<p>Voltage measurement outside of controller specific acceptable range during driver off state indicates open circuit failure.</p> <p>Controller specific output driver circuit voltage thresholds are set to meet the following controller specification for an open circuit.</p>	Open Circuit ≥ 200 k Ω impedance between output and controller ground	<p>Diagnostic Status</p> <p>Powertrain Relay Voltage</p> <p>Run/Crank Active</p> <p>Cranking State</p>	<p>Enabled</p> <p>≥ 11.00</p> <p>= True</p> <p>= False</p>	<p>≥ 40 errors out of 50 samples.</p> <p>Performed every 100 msec</p>	<p>Type B, 2 Trips</p> <p>Note: In certain controllers P06DB may also set (Two Stage Oil Pump Control Circuit Short To Ground)</p>

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Two Stage Oil Pump Control Circuit Short To Ground	P06DB	Controller specific output driver circuit diagnoses the two stage oil pump low sided driver for a short to ground failure when the output is powered off by comparing a voltage measurement to controller specific voltage thresholds.	<p>Voltage measurement outside of controller specific acceptable range during driver off state indicates short to ground failure.</p> <p>Controller specific output driver circuit voltage thresholds are set to meet the following controller specification for a short to ground.</p>	Short to Ground Circuit $\leq 0.5 \Omega$ impedance between output and controller ground	<p>Diagnostic Status</p> <p>Powertrain Relay Voltage</p> <p>Run/Crank Active</p> <p>Cranking State</p>	<p>Enabled</p> <p>≥ 11.00</p> <p>= True</p> <p>= False</p>	<p>≥ 40 errors out of 50 samples.</p> <p>Performed every 100 msec</p>	<p>Type A, 1 Trips</p> <p>Note: In certain controllers P06DA may also set (Two Stage Oil Pump Control Circuit Open)</p>

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Two Stage Oil Pump Control Circuit Short To Power	P06DC	Controller specific output driver circuit diagnoses the two stage oil pump low sided driver for a short to power failure when the output is powered on by comparing a voltage measurement to controller specific voltage thresholds.	<p>Voltage measurement outside of controller specific acceptable range during driver on state indicates short to power failure.</p> <p>Controller specific output driver circuit voltage thresholds are set to meet the following controller specification for a short to power.</p>	Short to Power ≤ 0.5 Ω impedance between output and controller power	<p>Diagnostic Status</p> <p>Powertrain Relay Voltage</p> <p>Run/Crank Active</p> <p>Cranking State</p>	<p>Enabled</p> <p>≥ 11.00</p> <p>= True</p> <p>= False</p>	<p>≥ 40 errors out of 50 samples.</p> <p>Performed every 100 msec</p>	Type B, 2 Trips

210BDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Two Stage Oil Pump Control Circuit Performance - Two Sided	P06DD	Diagnoses the two stage oil pump is stuck in the high pressure state. This diagnostic includes an intrusive test and a passive test. Intrusive test: The oil pump control is cycled off (high pressure) and on (low pressure) Y = 15 times at calibratable intervals. If a change in oil pressure above a calibration is not detected then the oil pressure is checked to determine if it is stuck. It takes X-out-of-Y failures to fail and set the appropriate code. Passive test: After the intrusive test passes, then a passive test will begin to run. The passive test will monitor the oil pressure changes associated with oil pump control state changes. If the passive test determines that the oil pressure change was less than desired then the intrusive test is retriggered.	<u>Fail from passing state:</u> Oil Pressure delta is less than a minimum delta pressure on a state change and the measured filtered oil pressure is above a threshold	Oil Pressure delta = ABS [Filtered Oil Pressure at beginning of state change - filtered oil pressure after 1.5 seconds] Oil Pressure delta < P06DD_P06DE_OP_StateChangeMin AND Filtered Oil Pressure ≥ (P0521_P06DD_P06DE_OP_HiStatePressure + P0521_P06DD_P06DE_OP_LoStatePressure) ÷ 2 (see P06DD details on Supporting Tables Tab P06DD_P06DE_OP_StateChangeMin P0521_P06DD_P06DE_OP_HiStatePressure P0521_P06DD_P06DE_OP_LoStatePressure)	<u>Common Criteria:</u> Two Stage Oil Pump is Present Engine Running Ambient Air Pressure Oil Aeration (= TRUE if engine speed > 5,000 RPM for longer than 30.0seconds) No active DTC's for diagnosis enable: Check oil pump TFTKO as a diagnostic enable when Enabled. No active DTC's for control enable: <u>Active Criteria:</u> One Sided Performance Test = Disabled	TRUE ≥ 20.0 seconds ≥ 70.0 kPa FALSE Fault bundles: MAF_SensorFA ECT_Sensor_FA IAT_SensorFA CrankSensor_FA EngOilPressureSensorCktFA AmbientAirDefault EngOilTempFA OilPmpTFTKO Enabled : OilPmpTFTKO Enabled Fault bundles for control disable : OilPmpTFTKO EngineTorqueEstInaccurate EngOilPressureSensorFA PowertrainRelayFault CrankSensor_FA EngOilTempFA Disabled	≥ 12 errors out of 15 samples. Run once per trip or activated by the Passive Test	Type B, 2 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
					Oil Pump in Low State Modelled Oil Temperature within range Filtered Engine Speed within range Delta Filtered Engine speed within a range Engine Torque within range Filtered Oil Pressure within range	> 1.5 seconds 60.0 deg C ≤ Oil Temp ≤ 115.0 deg C 1,500 RPM ≤ Filtered Engine Speed ≤ 2,500 RPM ABS [Filtered RPM at beginning of state change - 1000 RPM at 10 seconds] ≤ 150 RPM P06DD_P06DE_MinEnableTorque_OP ≤ Minimum requested engine torque ≤ P06DD_P06DE_MaxEnableTorque_OP (see P06DD details on supporting Tables Ta P06DD_P06DE_MinEnableTorque_OP P06DD_P06DE_MaxEnableTorque_OP) Filtered Engine Oil Pressure > P06DD_P06DE_MinOilPressureThresh (see P06DD details on supporting Tables Ta P06DD_P06DE_MinOilPressureThresh)		

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
					<p>Expected Oil Pressure Delta within range</p> <p><u>Passive Criteria:</u></p> <p>Active Test Passed</p> <p>Filtered Engine Speed within range</p> <p>Modelled Oil Temperature within range</p> <p>Delta Filtered Engine Speed within a range</p> <p>Oil Pressure Delta within a range</p>	<p>111.0 kPa < ABS [P0521_P06DD_P06DE_ OP_HiStatePressure - P0521_P06DD_P06DE_ OP_LoStatePressure] < 200.0 kPa</p> <p>TRUE</p> <p>1,500 RPM ≤ Filtered Engine Speed ≤ 2,150 RPM</p> <p>50.0 deg C ≤ Oil Temp ≤ 105.0 deg C</p> <p>ABS [Filtered RPM at beginning of State change - Filtered RPM after 1.50 seconds] ≤ 450 RPM</p> <p>Oil Pressure Delta < P06DD_P06DE_OP_Stat eChangeMin (see P06DD details on Supporting Tables Tab P06DD_P06DE_OP_Stat eChangeMin)</p>		
			<p><u>Fast Pass Condition</u></p> <p>Oil Pressure delta is less than a minimum delta pressure on a state change and the measured filtered oil pressure is</p>	<p>Oil Pressure delta =</p> <p>ABS [Filtered Oil Pressure at beginning of state change -</p>	<p><u>Common Criteria:</u></p> <p>Two Stage Oil Pump is Present</p> <p>Engine Running</p>	<p>TRUE</p> <p>≥ 20.0 seconds</p>	<p>0 errors out of 5 samples.</p> <p>Run once per trip or activated by the Passive Test</p>	

210BDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
			<p>above a res o</p> <p>ere o pressure after 1.5 seconds</p> <p>il Pressure delta < P_DD_P_DE_P_ tate_hangeMin</p> <p>AND</p> <p>tere ressure ≥</p> <p>P_5_P_DD_P E_OP_HiStatePressu re</p> <p>P0521_P06DD_P06 E_OP_LoStatePressu re</p> <p>) ÷ 2</p> <p>(see P06DD details on upporting Tables Tab</p> <p>tate_hangeMin</p> <p>P0521_P06DD_P06 E_P_Hi_tatePressu re</p> <p>P0521_P06DD_P06 _ _ o_tate ressu re</p> <p>)</p>	<p>ere o pressure after 1.5 seconds</p> <p>il Aeration = TRUE i engine speed > 5,000 RPM for longer than 30.0 seconds</p> <p>o active s or diagnsotic enable:</p> <p>Check oil pump TFTKO as a agnost c ena e when Enabled.</p> <p>No active DTC's for control enable:</p> <p>Active_riteria: One Sided Performance Test = Disabled</p> <p>Oil Pump in Low State</p> <p>Modelled Oil Temperature within range</p> <p>Filtered Engine Speed w n range</p>	<p>m en r ressure</p> <p>il Aeration = TRUE i engine speed > 5,000 RPM for longer than 30.0 seconds</p> <p>o active s or diagnsotic enable:</p> <p>Check oil pump TFTKO as a agnost c ena e when Enabled.</p> <p>No active DTC's for control enable:</p> <p>Active_riteria: One Sided Performance Test = Disabled</p> <p>Oil Pump in Low State</p> <p>Modelled Oil Temperature within range</p> <p>Filtered Engine Speed w n range</p>	<p>≥ . a</p> <p>FAL E</p> <p>aut un es: MAF_SensorF ECT_Sensor_F _ensor Eng ilPressure ensor k</p> <p>AmbientAirDe aul EngOilTempF OilPmpTFTK ran ensor_</p> <p>Enabled : OilPmpTFTK</p> <p>Enabled Fault bundles for control disable : mp EngineTorqueEstInaccura te Eng ilPressure ensorF PowertrainRelayFaul rank ensor_F ng emp</p> <p>Disabled</p> <p>> 1.5 seconds</p> <p>60.0 deg C ≤ Oil Temp ≤ 115.0 deg C</p> <p>1,500 RPM ≤ Filtered ng ne pee ,</p>		

210BDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
					<p>Engine Torque within range</p> <p>Engine Torque within range</p> <p>Filtered Oil Pressure within range</p> <p>Expected Oil Pressure Delta within range</p>	<p>RPM</p> <p>P06DD_P06DE_MinEnableTorque_P ≤ Indicated Requested Engine Torque ≤ P06DD_P06DE_MaxEnableTorque_OP)</p> <p>ABS [Filtered RPM at engine operating rate change - 150 RPM ≤ 150 RPM</p> <p>Filtered Engine Oil Pressure > P06DD_P06DE_MinOilPressureThresh)</p> <p>111.0 kPa < ABS [P0521_P06DD_P06DE_P_Lo < 200.0 kPa</p>		

210BDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Two Stage Oil Pump Control Circuit StuckOn - Two Sided	P06DE	<p>Diagnoses the two stage oil pump is stuck in the low pressure state. This diagnostic includes an intrusive test and a passive test.</p> <p>Intrusive test: The oil pump control is cycled off (high pressure) and on (low pressure) Y times at calibratable intervals. If a change in oil pressure above a calibration is not detected then the oil pressure is checked to determine if it is stuck. It takes X-out-of-Y failures to fail and set the appropriate code.</p> <p>Passive test: After the intrusive test passes, then a passive test will begin to run. The passive test will monitor the oil pressure changes associated with oil pump control state changes. If the passive test determines that the oil pressure change was less then desired then the intrusive test is retriggered.</p>	<p><u>Fail from a passing state:</u></p> <p>Oil Pressure delta is less than a minimum delta pressure on a state change and the measured filtered oil pressure is below a threshold</p>	<p>Oil Pressure delta = ABS [Filtered Oil Pressure at beginning of state change - filtered oil pressure after 1.5 seconds]</p> <p>Oil Pressure delta < P06DD_P06DE_OP_StateChangeMin (see P06DE details on Supporting Tables Tab)</p> <p>Filtered Oil Pressure ≤ P0521_P06DD_P06DE_OP_HiStatePressure - P0521_P06DD_P06DE_OP_LoStatePressure ÷ 2 (see P06DE details on Supporting Tables Tab)</p>	<p><u>Common Criteria:</u></p> <p>Two Stage Oil Pump is Present</p> <p>Engine Running</p> <p>Ambient Air Pressure</p> <p>Oil Aeration (= TRUE if engine speed > 5,000 RPM for longer than 30.0seconds)</p> <p>No active DTC's for diagnosis enable:</p> <p>Check oil pump TFTKO as a diagnostic enable when Enabled.</p> <p>No active DTC's for control enable:</p> <p><u>Active Criteria:</u> One Sided Performance</p>	<p>TRUE</p> <p>≥ 20.0 seconds</p> <p>≥ 70.0 kPa</p> <p>FALSE</p> <p>Fault bundles: MAF_SensorFA ECT_Sensor_FA IAT_SensorFA CrankSensor_FA EngOilPressureSensorCktFA AmbientAirDefault EngOilTempFA</p> <p>Enabled : OilPmpTFTKO</p> <p>Enabled Fault bundles for control disable : OilPmpTFTKO EngineTorqueEstInaccurate EngOilPressureSensorFA PowertrainRelayFault CrankSensor_FA EngOilTempFA</p> <p>Disabled</p>	<p>≥ 12 errors out of 15 samples.</p> <p>Run once per trip or activated by the Passive Test</p>	Type A, 1 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
					Test = Disabled Oil Pump in Low State Modelled Oil Temperature within range Filtered Engine Speed within range Engine Torque within range Delta Filtered Engine speed within a range Filtered Oil Pressure within range Expected Oil Pressure Delta within range	 > 1.5 seconds 60.0 deg C ≤ Oil Temp ≤ 115.0 deg C 1,500 RPM ≤ Filtered Engine speed ≤ 5,500 RPM P06DD_P06DE_MinEnableTorque_ ≤ Indicated Requested Engine Torque ≤ P06DD_P06DE_MaxEnableTorque_Offset (see table on Supporting Tables Tab) ABS [Filtered RPM at beginning of state change - Filtered RPM after 1.0 seconds] ≤ 150 RPM Filtered Engine Oil Pressure > P06DD_P06DE_MinOilPressure (see table on Supporting Tables Tab) 111.0 kPa < ABS [P0521_P06DD_P06DE_OP_HiStatePressure - P0521_P06DD_P06DE_OP_LoStatePressure] < 200.0 kPa		

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
					<u>Passive Criteria:</u> Active Test Passed Filtered Engine Speed within range Modelled Oil Temperature within range Delta Filtered Engine Speed within a range Oil Pressure Delta < P06DD_P06DE_OP_StateChangeMin (see P06DE details on Supporting Tables Tab)	TRUE 1,500 RPM ≤ Filtered Engine Speed ≤ 2,150 RPM 50.0 deg C ≤ Oil Temp ≤ 105.0 deg C ABS [Filtered RPM at beginning of State change - Filtered RPM after 1.50 seconds] ≤ 450 RPM TRUE		
			<u>Fast Pass Condition</u> Oil Pressure delta is less than a minimum delta pressure on a state change and the measured filtered oil pressure is below a threshold	Oil Pressure delta = ABS [Filtered Oil Pressure at beginning of state change - filtered oil pressure after 1.5 seconds] Oil Pressure delta <	<u>Common Criteria:</u> Two Stage Oil Pump is Present Engine Running Ambient Air Pressure Oil Aeration (= TRUE if engine speed	TRUE ≥ 20.0 seconds ≥ 70.0 kPa FALSE	0 errors out of 5 samples. Run once per trip or activated by the Passive Test	

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
				P06DD_P06DE_OP_StateChangeMin (P06DD Performance Test Details on Supporting Tables Tab) Filtered Oil Pressure \leq P0521_P06DD_P06DE_OP_HiStatePressure - P0521_P06DD_P06DE_OP_LoStatePressure) / 2 (P06DD Performance Test Details on Supporting Tables Tab)	> 5,000 RPM for longer than 30.0 seconds) No active DTC's for diagnotic enable: Check oil pump TFTKO as a diagnostic enable when Enabled. No active DTC's for control : <u>Active Criteria:</u> One Sided Performance Test = Disabled Oil Pump in Low State Modelled Oil Temperature within range Filtered Engine Speed within range Engine Torque within range	Fault bundles: MAF_SensorFA ECT_Sensor_FA IAT_SensorFA CrankSensor_FA EngOilPressureSensorCktFA AmbientAirDefault EngOilTempFA Enabled : OilPmpTFTKO Enabled Fault bundles for control disable : OilPmpTFTKO EngineTorqueEstInaccurate EngOilPressureSensorFA PowertrainRelayFault CrankSensor_FA EngOilTempFA Disabled > 1.5 seconds 60.0 deg C \leq Oil Temp \leq 115.0 deg C 1,500 RPM \leq Filtered Engine Speed \leq 2,500 RPM P06DD_P06DE_MinEnableTorque_OP \leq		

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
					<p>Delta Filtered Engine Speed within a range</p> <p>Filtered Oil Pressure within range</p> <p>Expected Oil Pressure Delta within range</p>	<p>Indicated Requested Engine Torque \leq P06DD_P06DE_MaxEnableTorque_OP (P06DD Performance Test Details on Supporting Tables Tab)</p> <p>ABS [Filtered RPM at beginning of State change - Filtered RPM after 1.0 seconds] \leq 150 RPM</p> <p>Filtered Engine Oil Pressure $>$ P06DD_P06DE_MinOilPressureThresh (see P06DD details on Supporting Tables Tab)</p> <p>111.0 kPa $<$ ABS [P0521_P06DD_P06DE_OP_HiStatePressure - P0521_P06DD_P06DE_OP_LoStatePressure] $<$ 200.0 kPa</p>		

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Transmission on road operation equipped illumination	P0700	Monitors the TCM MIL request message when the as the illumination	Transmission Control module malfunction request	Transmission Control module malfunction request		Time since power-up ≥ 3 seconds	Continuous	Type A, on

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Traction Control Torque Request Circuit	P0856	Determines if torque request from the EBCM is valid	Serial Communication 2's complement message - (\$1C7/\$1C9 for engine torque, \$1CA/\$1C6 for axle torque) OR Serial Communication message (\$1C7/\$1C9 for engine torque, \$1CA/ \$1C6 for axle torque) rolling count index value OR Too many minimum limit torque request transitions occur from TRUE to FALSE to TRUE within a time period Torque request greater than torque request diagnostic maximum threshold	Message <> 2's complement of message Message rolling count value <> previous message rolling count value plus one Requested torque intervention type toggles from not increasing request to increasing request > 250 Nm for engine torque based traction torque system, OR > 4,000 Nm for axle torque based traction torque system	Active Communication Power Mode Engine Running Status of traction in GMLAN message (\$4E9) Ignition Voltage Run/Crank Active	Serial data has been received = Run = True = Traction Present > 6.41 volts > 0.50 seconds	>= 6 failures out of 10 Performed on every received message 6 rolling count failures out of 10 samples Performed on every received message >= 3 multi- transitions out of 5 samples. Performed every 200 ms >= 4 out of 10 samples Performed on every received message	Type C, No SVS Emissio ns Neutral Diagnost ic - Type C

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
O2 Sensor Heater Supply Voltage Sense Circuit Range/ Performance	P103B	<p>The P103B diagnostic determines if the heater supply circuit is rational by comparing the heater supply voltage to the run crank voltage and calculating the difference.</p> <p>The heater supply voltage input is connected to the O2 heater supply circuit inside the vehicle relay center. It is representative of the voltage supplied to the O2 heaters. The O2 heater voltage is used by the HWIO to calculate the O2 heater resistance on switching type O2 sensors (non-WRAF). With a fault set, the resistance calculation is performed with run crank voltage.</p> <p>The diagnostic failure counter is incremented if the voltage difference is greater than the threshold. This DTC is set based on the fail and sample counters.</p>	The absolute value of Heater Supply Voltage delta from Run Crank voltage	> 2.50 volts	<p>Powertrain relay in range (Relay in range is defined as relay voltage</p> <p>Run Crank signal active</p>	<p>= True</p> <p>> 11.00 volts)</p> <p>= True</p> <p>(Please see "Run/Crank Active conditions" in Supporting Tables)</p>	<p>8 failures out of 10 samples</p> <p>250 ms / sample</p> <p>Continuous</p>	Type B, 2 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
O2 Sensor Heater Supply Voltage Sense Circuit Low	P103C	<p>The P103C diagnostic determines if the heater supply circuit is low by comparing the heater supply voltage to the threshold.</p> <p>The heater supply voltage input is connected to the O2 heater supply circuit inside the vehicle relay center. It is representative of the voltage supplied to the O2 heaters. The O2 heater voltage is used by the HWIO to calculate the O2 heater resistance on switching type O2 sensors (non-WRAF). With a fault set, the resistance calculation is performed with run crank voltage.</p> <p>The diagnostic failure counter is incremented if the heater supply voltage is less than the threshold. This DTC is set based on the fail and sample counters.</p>	Heater Supply Voltage	< 8.00 volts	<p>Powertrain relay in range (Relay in range is defined as relay voltage</p> <p>Run Crank signal active</p>	<p>= True</p> <p>> 11.00 volts)</p> <p>= True</p> <p>(Please see "Run/Crank Active conditions" in Supporting Tables)</p>	<p>8 failures out of 10 samples</p> <p>250 ms / sample</p> <p>Continuous</p>	Type B, 2 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Inlet Airflow System Performance (naturally aspirated)	P1101	<p>Detects a performance failure in the Manifold Pressure (MAP) sensor, Throttle Position sensor (TPS) or Mass Air Flow (MAF) sensor that cannot be uniquely identified as a failure in one individual sensor. This diagnostic can set when more than one of these sensors has a performance concern.</p> <p>This diagnostic is performed using the Intake Flow Rationality Diagnostic (IFRD). IFRD calculates modeled values of sensors from these three sensors.</p> <p>These modeled values are compared against the actual sensor values to see if they are similar. If they are similar, then the model passes. If they are not similar, then that model is considered to be failed. Certain combinations of model passes and model failures can be interpreted to be caused by a performance issue with the system, but no</p>	<p>Filtered Throttle Model Error</p> <p>AND</p> <p>ABS(Measured Flow – Modeled Air Flow) Filtered</p> <p>OR</p> <p>ABS(Measured MAP – MAP Model 1) Filtered</p> <p>AND</p> <p>ABS(Measured MAP – MAP Model 2) Filtered</p>	<p>> 200 kPa*(g/s)</p> <p>> 12.0 grams/sec</p> <p>> 25.0 kPa)</p> <p>> 25.0 kPa</p>	<p>Engine Speed Engine Speed</p> <p>(Coolant Temp OR OBD Coolant Enable Criteria</p> <p>(Coolant Temp OR OBD Max Coolant Achieved</p> <p>Intake Air Temp Intake Air Temp</p> <p>Minimum total weight factor (all factors multiplied together)</p> <p>See Residual Weight Factor tables.</p>	<p>>= 400 RPM <= 6,400 RPM</p> <p>>= -9 Deg C</p> <p>= TRUE)</p> <p><= 130 Deg C</p> <p>= FALSE)</p> <p>>= -20 Deg C <= 125 Deg C</p> <p>>= 0.50</p> <p>Filtered Throttle Model Error multiplied by P0101, P0106, P0121, P012B, P0236, P1101: TPS Residual Weight Factor based on RPM</p> <p>Modeled Air Flow Error multiplied by P0101, P0106, P010B, P0121, P012B, P0236, P1101: MAF1 Residual Weight Factor based on RPM and P0101, P0106, P010B, P0121, P012B, P0236, P1101: MAF1 Residual Weight Factor based on MAF Est</p>	<p>Continuous</p> <p>Calculation are performed every 12.5 msec</p>	Type B, 2 Trips

210BDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
		single failed sensor can uniquely be identified. In this case, the Inlet Airflow System Performance diagnostic will fail.			No Active DTCs: No Pending DTCs:	MAP Model 1 Error multiplied by P0101, P0106, P0121, P012B, P0236, P1101: MAP1 Residual Weight Factor based on RPM MAP Model 2 Error multiplied by P0101, P0106, P0121, P012B, P0236, P1101: MAP2 Residual Weight Factor based on RPM MAP_SensorCircuitFA EGRValvePerformance_F A MAF_SensorCircuitFA CrankSensor_FA ECT_Sensor_FA IAT_SensorFA EGRValve_FP ECT_Sensor_Ckt_FP IAT_SensorCircuitFP		

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Engine Coolant Temperature Sensor Not Plausible	P111E	This DTC detects either a biased high or low ECT (Engine Coolant temperature) sensor. This is done by comparing the ECT sensor output to two other temperature sensor outputs after a soak condition.	<p>Sensor usage definitions:</p> <p>Sensor1 = CeECTR_e_ECT_Snsr (Sensor1 is the temp sensor most impacted by the block heater (if equipped)) Sensor2 = CeECTR_e_RCT_Snsr Sensor3 = CeECTR_e_IAT_Snsr =====</p> <p>A failure will be reported if any of the following occur: 1) Sensor1 power up absolute temp difference to Sensor2 and Sensor3 is (Sensor1 fast fail) . 2) Sensor1 power up temp is greater than Sensor2 and Sensor3 in this range: (and a block heater has not been detected) 3) Sensor1 power up temp is lower than Sensor2 and Sensor3 by this amount: 4) Sensor1 power up temp is ≥ Sensor2 and</p>	<p>≥ 60.0 °C</p> <p>≥ 15.8 and < 60.0 °C</p> <p>≤ 15.8 Deg °C</p>	<p>No Active DTC's</p> <p>Engine Off Soak Time Propulsion Off Soak Time Non-volatile memory initialization</p> <p>Test complete this trip Test aborted this trip Test disabled this trip Ambient</p> <p>LowFuelCondition Diag</p> <p>===== Block Heater detection is enabled when either of the following occurs: 1) Sensor1 power up temp is greater than Sensor2 and Sensor3 in this range: 2) Cranking time</p> <p>=====</p>	<p>VehicleSpeedSensor_FA IAT_SensorCircuitFA THMR_RCT_Sensor_Ckt_FA ECT_Sensor_Ckt_FA EngineModeNotRunTimerError EngineModeNotRunTimer_FA OAT_PtEstFiltFA OAT_PtEstRawFA PSAR_PropSysInactiveCr_s_FA DRER_DiagSystemDsbl</p> <p>> 25,200 seconds > 0 seconds = Not occurred = False = False = False ≥ -9°C = False</p> <p>=====</p> <p>≥ 15.8 °C and < 60.0 °C</p> <p>< 10.0 Seconds</p> <p>=====</p>	<p>1 failure to set DTC</p> <p>1 sec/ sample</p> <p>Once per valid cold start</p>	Type B, 2 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
			Sensor3 by 15.8 °C and the time spent cranking the engine without starting is ≥ 10.0 seconds with the LowFuelConditionDiag	= False	<p>Block Heater is detected and diagnostic is aborted when 1) or 2) occurs.</p> <p>1a) IAT monitoring is enabled after the following Vehicle drive constraints</p> <p>1b) Drive time</p> <p>1c) Vehicle speed</p> <p>1d) Additional Vehicle drive time is provided to 1b when Vehicle speed is below 1c as follows:</p> <p>1e) IAT drops from power up IAT</p> <p>2a) ECT monitoring is enabled after engine start in the following engine run time window</p> <p>2b) Sensor1 temp derivative during the test is:</p> <p>2c) Consecutive samples of 2b) being true are:</p> <p>=====</p> <p>Diagnostic is aborted when 3) or 4) occurs:</p> <p>3) Engine run time with vehicle speed below 1b</p> <p>4) Engine off time (i.e. auto stop) during Block heater detection</p>	<p>> 400 Seconds with</p> <p>> 14.9 MPH and</p> <p>0.50 times the seconds with vehicle speed below 1b</p> <p>≥ 5.0 °C</p> <p>5.0 \leq seconds \leq 60.0</p> <p>< -0.10 °C/sec</p> <p>≥ 4 samples</p> <p>=====</p> <p>$\geq 1,800$ Seconds</p> <p>≥ 180.0 Seconds</p>		

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Radiator Coolant Temperature Sensor Not Plausible	P112F	This DTC detects either a biased high or low RCT (Radiator Coolant Temperature) sensor. This is done by comparing the RCT sensor output to two other temperature sensor outputs after a soak condition.	<p>Sensor usage definitions:</p> <p>Sensor1 = CeECTR_e_ECT_Snsr (Sensor1 is the temp sensor most impacted by the block heater (if equipped))</p> <p>Sensor2 = CeECTR_e_RCT_Snsr</p> <p>Sensor3 = CeECTR_e_IAT_Snsr</p> <p>=====</p> <p>A failure will be reported if (based on the above calibrations):</p> <p>1) Sensor2 (if RCT is Sensor2)power up absolute temp difference to Sensor1 and Sensor3 is:</p> <p>OR (based on usage)</p> <p>2) Sensor3 (if RCT is Sensor3) power up absolute temp difference to Sensor1 and Sensor2 is:</p>	<p>≥ 15.8 °C</p> <p>≥ 15.8 °C</p>	<p>No Active DTC's</p> <p>Engine Off Soak Time Propulsion Off Soak Time Non-volatile memory initization</p> <p>Test complete this trip Test aborted this trip Test disabled this trip Ambient LowFuelCondition Diag</p>	<p>VehicleSpeedSensor_FA IAT_SensorCircuitFA THMR_RCT_Sensor_Ckt_FA ECT_Sensor_Ckt_FA EngineModeNotRunTimer Error EngineModeNotRunTimer_FA OAT_PtEstFiltFA OAT_PtEstRawFA PSAR_PropSysInactiveCr s_FA DRER_DiagSystemDsbl</p> <p>> 25,200 seconds > 0 seconds = Not occurred</p> <p>= False = False = False ≥ -9 °C = False</p>	<p>1 failure to set DTC</p> <p>1 sec/ sample</p> <p>Once per valid cold start</p>	Type B, 2 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Injector 1 low side circuit shorted to high side circuit	P1248	Controller specific output driver circuit diagnoses injector 1 high sided driver for a short to low sided driver failure when the output is powered on by comparing a voltage measurement to controller specific voltage threshold	Voltage measurement outside of controller specific acceptable range during driver on state indicates high sided driver for a short to low sided driver failure. Controller specific output driver circuit voltage thresholds are set to meet the following controller specification for high sided driver for a short to low sided driver failure.	25 amp >= through low side driver	Battery Voltage Engine Run Time	>= 11 Volts >= 5 Seconds P062B not FA or TFTK	10.00 failures out of 20.00 samples 100 ms /sample Continuous	Type A, 1 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Injector 2 low side circuit shorted to high side circuit	P1249	Controller specific output driver circuit diagnoses injector 2 high sided driver for a short to low sided driver failure when the output is powered on by comparing a voltage measurement to controller specific voltage threshold	Voltage measurement outside of controller specific acceptable range during driver on state indicates high sided driver for a short to low sided driver failure. Controller specific output driver circuit voltage thresholds are set to meet the following controller specification for high sided driver for a short to low sided driver failure.	25 amp >= through low side driver	Battery Voltage Engine Run Time	>= 11 Volts >= 5 Seconds P062B not FA or TFTK	10.00 failures out of 20.00 samples 100 ms /sample Continuous	Type A, 1 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Injector 3 low side circuit shorted to high side circuit	P124A	Controller specific output driver circuit diagnoses injector 3 high sided driver for a short to low sided driver failure when the output is powered on by comparing a voltage measurement to controller specific voltage threshold	Voltage measurement outside of controller specific acceptable range during driver on state indicates high sided driver for a short to low sided driver failure. Controller specific output driver circuit voltage thresholds are set to meet the following controller specification for high sided driver for a short to low sided driver failure.	25 amp >= through low side driver	Battery Voltage Engine Run Time	>= 11 Volts >= 5 Seconds P062B not FA or TFTK	10.00 failures out of 20.00 samples 100 ms /sample Continuous	Type A, 1 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Injector 4 low side circuit shorted to high side circuit	P124B	Controller specific output driver circuit diagnoses injector 4 high sided driver for a short to low sided driver failure when the output is powered on by comparing a voltage measurement to controller specific voltage threshold	<p>Voltage measurement outside of controller specific acceptable range during driver on state indicates high sided driver for a short to low sided driver failure.</p> <p>Controller specific output driver circuit voltage thresholds are set to meet the following controller specification for high sided driver for a short to low sided driver failure.</p>	25 amp >= through low side driver	Battery Voltage Engine Run Time	>= 11 Volts >= 5 Seconds P062B not FA or TFTK	10.00 failures out of 20.00 samples 100 ms /sample Continuous	Type A, 1 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Fuel Pump Driver Over Temperature	P1255	To detect if an internal fuel pump driver over- temperature condition exists under normal operating conditions	Fuel Pump Driver Circuit Board temperature (Fuel Pump Driver Overtemperature enumeration)	T>= 160 degC (Fuel Pump Power Module device reports Faulted, Not Faulted or Indeterminate)	a) Chassis Fuel Pres Sys Type configuration selection b) Diagnostic Enabled c] FPPM Driver Status Alive Rolling Count Sample Faulted d] Diagnostic feedback received e] Run_Crank Ignition Switch Position Circuit VoltageSystem Voltage	a) == FCBR ECM FPPM Sys b) == TRUE c] <> True d] == TRUE e] > 7.00 volts	3 failures / 15 samples 1 sample / 12.5 millisec	Type B, 2 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
SENT Fuel Rail High Pressure Sensor 2 Out of Range	P127C	<p>This DTC diagnose SENT high pressure sensor 2 that is too low out of range.</p> <p>If the sensor digital value (representing the reference voltage) is below the lower digital threshold, the low fail counter then increments. If the low fail counter reaches its threshold then a fail is reported. A pass is reported for this DTC if the low sample counter reaches its threshold.</p>	High Pressure Rail Sensor 2 SENT digital read value	=< 66			Time Based: 400 Failuer out of 500 Samples 6.25 ms per Sample Continuous	Type A, 1 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
SENT Fuel Rail Pressure Sensor 1 Internal Performance	P128A	This DTC determines if there is internal error within the SENT pressure sensor 1 (i.e. Broken wire bond internal to the SENT Sensor). Once the internal error is detected a fixed faulted digital values is communicated to the ECU.	Digital pressure sesnor 1 value	>= 4,089	SENT Fuel Rail Pressure Sensor Internal Performance Enable No Fault Pending	Enabled when a code clear is not active or not exiting device control True P16E4 P16E5 P128F	400 failures out of 500 samples 6.25 ms per Sample Continuous	Type A, 1 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
SENT Fuel Rail Pressure Sensor 2 Internal Performance	P128B	This DTC determines if there is internal error within the SENT pressure sensor 2 (i.e. Broken wire bond internal to the SENT Sensor). Once the internal error is detected a fixed faulted digital values is communicated to the ECU.	Digital pressure sesnor 2 value	>= 4,089	SENT Fuel Rail Pressure Sensor Internal Performance Enable No Fault Pending	Enabled when a code clear is not active or not exiting device control True P16E4 P16E5 P128F	400 failures out of 500 samples 6.25 ms per Sample Continuous	Type A, 1 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
SENT Fuel Rail Pressure & Temperature Sensor Pressure Message Incorrect	P128F	This DTC determines if there is any SENT signal waveform for discrepancies (i.e. too many pulse, too few pulse, clock shift). The SENT HWIO Determines message waveform fault (i.e.too many pulse, too few pulse, clock shift) and if the message age is too long.	SENT HWIO Determines message fault (i.e.too many pulse, too few pulse, clock shift) Message Age	= true > 1.94 ms	SENT signal Serial waveform diagnostics enable SENT power up delay No Fault Active on	True >= 0.00 seconds Enabled when a code clear is not active or not exiting device control P16E4 P16E5	400 failures out of 500 samples 6.25 ms per sample Continuous	Type A, 1 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Fuel Pump Driver Control Module System Ignition Switch Run/Start Position Circuit Low (Only on applications that use an FTZM)	P129D	Detects low voltage of the fuel pump driver control module ignition switch circuit. This diagnostic reports the DTC when the fuel pump driver control module ignition switch circuit voltage is below a calibrated value.	Fuel Pump Driver Control Module Ignition switch Run/Start position circuit low	FTZM Run Crank Active is FALSE	Fuel Tank Zone Module (FTZM) is present on vehicle Fuel Pump Driver Control Module Ignition Switch Run/Start Position Circuit High diagnostic is enabled Fuel Tank Zone Module (FTZM) serial messages are available Run Crank Active Sensor Bus relay is commanded ON	= 0 = TRUE	40 failures out of 50 samples 50 ms / sample	Type B, 2 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Fuel Pump Driver Module- Ignition Switch Run/ Start Position Circuit Low [FPPM applications only]	P129D	To detect if the Run/ Start position circuit voltage is short to low / open	FPPM Run_Crank Active status	<> ECM Run_Crank Active status	a) Chassis Fuel Pressure System Type configuration b) Diagnostic Enabled calibration c) FPPM Control Status Alive Rolling Count result d) Diagnostic feedback received e) System Voltage	a) == CeFRPR_e_ECM_FPPM _Sys b) == TRUE c) == Valid d) == TRUE e) >= 0.00 V	64 failures / 80 samples 1 sample / 12.5 millisec	Type B, 2 Trips

210BDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Fuel Pump Driver Control Module Signal Message Counter Incorrect [FPPM applications only]	P129E	To detect if the command message received as serial data from the engine control module is valid The "rolling count check" value is created by adding an appended hexadecimal calculation to the pump duty cycle command value. In order to achieve a desired fuel pressure, a hexadecimal equivalent value representing the necessary fuel pump current pulse "On" time (duty cycle as a percent value) is transmitted to the FPPM. The corresponding "check" value is transmitted as well. At the FPPM, the received duty cycle command value is used to create an expected "rolling count" value using the same calculation method as the ECM. The expected "rolling count" value calculated at the receiving power module (smart device) is compared to the transmitted "rolling count" value. If these do not match, a fault condition is reported	FPPM Received Duty Cycle Rolling Count	<> Transmitted Duty Cycle Rolling Count (ECM) (Fu Pmp Pwr Mod smart device reports Faulted, Not Faulted or Indeterminate test state)	a) Chassis Fuel Pres Sys Type configuration selection b) Diagnostic Enabled c) FPPM Control Rolling Count Faulted d) FPPM Diagnostic data received [\$0CE] e) FPPM Diagnostic Data Validity Enabled f) Diagnostic System Disabled g) Communication Faulted h) Run_Crank Ignition Switch Position Circuit Voltage j) Run_Crank Ignition Status k) Sensor Bus Relay On	a) == FCBR ECM FPPM Sys b) == TRUE c) <> True d) == TRUE e) == TRUE f) <> True g) <> True h) > 7.00 Volts j) == TRUE k) == TRUE	64 failures / 80 samples 1 sample / 12.5 millisec	Type B, 2 Trips
			FPPM Received Duty Cycle Protection Value	<> Transmitted Duty Cycle Protection Value (ECM) (Fu Pmp Pwr Mod smart device reports Faulted, Not Faulted or Indeterminate test state)	a) Chassis Fuel Pres Sys Type configuration selection b) Diagnostic Enabled c) FPPM Control Rolling Count Faulted d) FPPM Diagnostic data received [\$0CE] e) FPPM Diagnostic Data Validity Enabled f) Diagnostic System Disabled g) Communication Faulted h) Run_Crank Ignition Switch Position Circuit	a) == FCBR ECM FPPM Sys b) == TRUE c) <> True d) == TRUE e) == TRUE f) <> True g) <> True h) > 7.00 Volts	64 failures / 80 samples 1 sample / 12.5 millisec	

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
		forward to the ECM where X/Y diagnostic counting is performed.			Voltage j) Run_Crank Ignition Status k) Sensor Bus Relay On	j) == TRUE k) == TRUE		

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Fuel Pump Driver Control Module Enable Circuit Performance [FPPM applications]	P12A6	The purpose of the Fuel Pump Driver Control Module Enable Circuit Performance Diagnostic is to detect if the state of the fuel control enable circuit is valid. This is accomplished by comparing the Fuel Control Enable circuit voltage state [high or low] measured by the Fuel Pump Driver Control Module to the state of Fuel Control Enable signal in the ECM. When the measured state does not match the expected state, the fail counter increments.	Fuel Control Enable Circuit Voltage State (Fuel Pump Driver Control Module)	<> Fuel Control Enable State (ECM)	a) Chassis Fuel Pres Sys Type configuration selection b) Diagnostic Enabled c) Diagnostic System Disabled d1) Run_Crank Ignition Sw Position Active OR d2) Run_Crank Ignition Sw Position Active timer [delay] e) FPPM Control Data Rolling Count Faulted f) Diagnostic serial data received g) Run_Crank Ignition Switch Position Circuit Voltage	a) == FCBR ECM FPPM Sys b) == TRUE c) <> True d1) <> True OR d2) >= 0.50 seconds e) <> True f) == TRUE g) > 7.00 volts	40 failures / 80 samples 1 sample / 12.5 millisec	Type A, 1 Trips

210BDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Fuel Pump Control Status Signal Message Counter Incorrect [FPPM applications only]	P12A8	To detect if the control status message transmitted as serial data from the driver control module is valid. The "rolling count check" value is created by adding an appended hexadecimal calculation to each control command value. The corresponding "check" value is transmitted to the FPPM as well as the actual command. At the FPPM, the received command value is used to create an expected "rolling count" value using the same calculation method as the ECM. The expected "rolling count" value calculated at the receiving power module (smart device) is compared to the transmitted "rolling count" value. If these do not match, a fault condition is reported forward to the ECM where X/Y diagnostic counting is performed.	FPPM Control Status Alive Rolling Count	<> ECM Control Status Alive Rolling Count (Fu Pmp Pwr Mod smart device reports Faulted, Not Faulted or Indeterminate test state)	a) Chassis Fuel Pres Sys Type configuration selection b) Diagnostic Enabled c) FPPM Diagnostic serial data received d) Run_Crank Ignition Switch Position Circuit Voltage	a) == FCBR ECM FPPM Sys b) == TRUE c) == TRUE d) > 0.00 Volts	64 failures / 80 samples 1 sample / 12.5 millisec	Type B, 2 Trips
			FPPM Power Consumption Alive Rolling Count	<> ECM Power Consumption Alive Rolling Count (Fu Pmp Pwr Mod smart device reports Faulted, Not Faulted or Indeterminate test state)	a) Chassis Fuel Pres Sys Type configuration selection b) Diagnostic Enabled c) FPPM Diagnostic serial data received d) Run_Crank Ignition Switch Position Circuit Voltage	a) == FCBR ECM FPPM Sys b) == TRUE c) == TRUE d) > 0.00 Volts	64 failures / 80 samples 1 sample / 12.5 millisec	
			FPPM Driver Status Alive Rolling Count	<> ECM Driver Status Alive Rolling Count (Fu Pmp Pwr Mod smart device reports Faulted, Not Faulted or Indeterminate test state)	a) Chassis Fuel Pres Sys Type configuration selection b) Diagnostic Enabled c) FPPM Diagnostic serial data received d) Run_Crank Ignition Switch Position Circuit Voltage	a) == FCBR ECM FPPM Sys b) == TRUE c) == TRUE d) > 0.00 Volts	64 failures / 80 samples 1 sample / 12.5 millisec	
			FPPM Hardware Status Alive Rolling Count	<> ECM Hardware Status Alive Rolling Count (Fu Pmp Pwr Mod smart device reports Faulted, Not Faulted or Indeterminate test state)	a) Chassis Fuel Pres Sys Type configuration selection b) Diagnostic Enabled c) FPPM Diagnostic serial data received d) Run_Crank Ignition Switch Position Circuit Voltage	a) == FCBR ECM FPPM Sys b) == TRUE c) == TRUE d) > 0.00 Volts	64 failures / 80 samples 1 sample / 12.5 millisec	

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Ignition Coil Positive Voltage Circuit Group 1 * * SIDI ONLY * *	P135A	This diagnostic checks for minimum voltage at the fuse which supplies power to the Ignition Coils (applicable only for SIDI applications). A diagnostic failure indicates a blown fuse.	Ignition Module Supply Voltage.	< 2.5 Volts	Diagnostic Enabled? Three possible Ignition Coil Power Sources (only 1 used): Ignition Coil Power Source = <u>Case 1: Battery</u> Delay starting at Key-On <u>Case 2: Ignition Run/Crank</u> Ignition Run/Crank Voltage <u>Case 3: PT Relay</u> PT Relay Voltage	Yes PT Relay (Case 3) 5 Engine Revs 5.0 volts 11.0 volts	50 Failures out of 63 Samples 6.25 msec rate	Type A, 1 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Cooling Fan 1 Status Signals Message Counter Incorrect	P135C	This DTC monitors for an error in communication with the Cooling Fan 1 Status Signals	Communication of the Alive Rolling Count or Protection Value of the Cooling Fan 1 Status Signals Message over LIN bus is incorrect for out of total samples	 <div>>= 8.00 counts</div> <div>>= 10.00 counts</div>	<div>Message frame</div> <div>All the following conditions are met for</div> <div>Power Mode</div> <div>Powertrain Relay Voltage</div> <div>Run/Crank Ignition Voltage</div>	<div>= Is available</div> <div>>= 3,000.00 milliseconds</div> <div>= Run</div> <div>>= 11.00 Volts</div> <div>>= 11.00 Volts</div>	Executes in 10ms loop.	Type B, 2 Trips

210BDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Cold Start Emissions Reduction System Fault	P1400	Model based test computes power from exhaust flow and thermal energy resulting from elevated idle speed and retarded spark advance. Detects if the cold start emission reduction system has failed resulting in the delivered power being out of range.	<p>Average desired accumulated exhaust power - Average actual accumulated exhaust power (too much energy delivered to catalyst)</p> <p>Average desired accumulated exhaust power - Average actual accumulated exhaust power (too little energy delivered to catalyst)</p> <p>(EWMA filtered)</p> <p>Average Power = output of P1400_EngineSpeedResidual_Table * output of P1400_SparkResidual_Table NOTE: Desired accumulated power would use the desired catalyst light off spark and desired engine speed and the actual accumulated power would use the final commanded spark and actual engine speed. Refer to the Supporting Tables for details</p>	<p>< -32.00 KJ/s (high RPM failure mode)</p> <p>> 7.00 KJ/s (low RPM failure mode)</p>	<p>To enable the diagnostic, the Cold Start Emission Reduction Strategy must be Active per the following:</p> <p>Catalyst Temperature AND Engine Coolant AND Engine Coolant AND Barometric Pressure</p> <p>The Cold Start Emission Reduction strategy must not be exiting. The strategy will exit per the following:</p> <p>Catalyst Temperature AND Engine Run Time</p> <p>OR</p> <p>Engine Run Time</p> <p>OR</p> <p>Barometric Pressure</p>	<p>< 500.00 degC</p> <p>> -12.00 degC</p> <p><= 66.00 degC</p> <p>>= 72.00 KPa</p> <p>>= 1,000.00 degC</p> <p>>= 17.50 seconds</p> <p>></p> <p>P1400_CatalystLightOffExtendedEngineRunTimeExit</p> <p>This Extended Engine run time exit is a function of percent ethanol and Catmons NormRatioEWMA. Refer to "Supporting Tables" for details.</p> <p>< 72.00 KPa</p>	<p>Runs once per trip when the cold start emission reduction strategy is active</p> <p>Frequency: 100ms Loop</p> <p>Test completes after 8 seconds of accumulated qualified data.</p>	EWMA Based - Type A, 1 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
					<p>Other Enable Criteria:</p> <p>OBD Manufacturer Enable Counter</p> <p>Vehicle Speed</p> <p>Allow diagnostic to calculate residual in an off-idle state. If the value of the OffIdleEnable is equal to 1 then the "DriverOffAccelPedal" will not be checked. However, if the value of OffIdleEnable is 0 then driver must be off the accel pedal</p> <p>A change in throttle position (tip-in/tip-out) will initiate a delay in the calculation of the average qualified residual value. Therefore when the:</p> <p>Pedal Close Delay Timer</p> <p>the diagnostic will continue the calculation.</p> <p>A change in gear will initiate a delay in the calculation of the average qualified residual value to</p>	<p>0</p> <p>< 1.86 MPH</p> <p>0</p> <p>(A value of 1 allows diagnostic to run and calculate the residual while off idle. A value of 0 requires calculation of the residual at idle)</p> <p>> 2.00 seconds</p>		

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
					<p>allow me or eac ua engine speed and actual final commanded spark to achieve their desired values. There ore, hen the:</p> <p>Gear Shift Delay Timer</p> <p>the diagnostic will continue the calculation</p> <p>For Manual Transmission vehicles:</p> <p>Clutch Pedal Position</p> <p>Clutch Pedal Position</p> <p>The diagnostic will delay calculation of the residual value and potentially weight the residual ca cu at on erent y based on engine run time. s s to ensure t e diagnostic is operating in idle speed control as well as during the pea catalyst light off period.</p> <p>The time weighting factor must be :</p>	<p>> 2.00 seconds</p> <p>> 90.00 %</p> <p>< 75.00 %</p> <p>> 0 These are scalar values that are a unction o engine run time. Refer to</p>		

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
					<p>General Enable:</p> <p>DTC's Not Set:</p>	<p>P1400_ColdStartDiagnosticDelayBasedOnEngineRunTime and the cal axis, P1400_ColdStartDiagnosticDelayBasedOnEngineRunTimeCalAxis in the "Supporting Tables" for details.</p> <p>AcceleratorPedalFailure ECT_Sensor_FA IAT_SensorCircuitFA MnfdTempSensorCktFP CrankSensor_FA FuelInjectorCircuit_FA MAF_SensorFA MAP_SensorFA EngineMisfireDetected_FA ClutchPstnSnsr FA IAC_SystemRPM_FA IgnitionOutputDriver_FA TPS_FA VehicleSpeedSensor_FA 5VoltReferenceMAP_OOR_Flt TransmissionEngagedState_FA EngineTorqueEstInaccurate</p>		

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Transmission Engine Speed Request Circuit	P150C	This DTC monitors for an error in communication with the Transmission Engine Speed Request signal in \$19D	Communication of the Alive Rolling Count or Protection Value in the Transmission Engine Speed signal over CAN bus is incorrect for out of total samples	 >= 8 counts >= 10 counts	Message frame All the following conditions are met for Power Mode Powertrain Relay Voltage Run/Crank Ignition Voltage	= Is available >= 3,000.00 milliseconds = Run >= 11.00 Volts >= 11.00 Volts	Executes in 25ms loop.	Type B, 2 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Throttle Position Steady State Actuation Fault	P1516	Detect an inability to maintain a steady state throttle position.	The absolute difference between desired and indicated throttle position is >	2.00 percent	Run/Crank voltage TPS minimum learn is not active AND Throttle is being Controlled Throttle is considered in a steady state condition when the desired throttle position over a 12.5 ms period is For a settling time period Ignition voltage failure is false	> 6.41 Volts < 0.25 percent > 4.00 seconds P1682	0.49 ms	Type B, 2 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Communication Error with Active Grill Air Shutter Module "A"	P151E	This DTC monitors for an internal error or error in communication with the Active Grill Air Shutter Module A	Communication of the Alive Rolling Count from the Shutter Module A over LIN bus is incorrect or the Shutter Module A signals has an internal error for out of total samples	 >= 8.00 counts >= 10.00 counts	Message frame All the following conditions are met for Power Mode Powertrain Relay Voltage Run/Crank Ignition Voltage	= Is available >= 3,000.00 milliseconds = Run >= 11.00 Volts >= 11.00 Volts	LIN bus communication executes in 500ms loop	Type B, 2 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Cruise Control Switch State Undertermin ed	P155A	<p>Detects when cruise switch state cannot be determined, such as low voltage conditions</p> <p>"Emissions Neutral Default Action : When the BCM tells the ECM that the cruise switch "Data Invalid" (latched on/off switch architectures) or "Indeterminate" (momentary on/off switch architectures) is detected for too long, ECM sets the code and cruise control will be disabled and disengaged for the remainder of the key cycle regardless of current pass/fail condition once it fails."</p>	cruise switch state is received as "undetermined" for greater than a calibratable time	fail continuously for greater than 0.5 seconds			fail continuously for greater than 0.5 seconds	Type C, No SVS , "Emissions Neutral Diagnostics – special type C"

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Cruise Control Resume/ Acceleration Signal 2 Circuit	P155C	<p>Detects a failure of the cruise resume 2 switch in a continuously applied state</p> <p>"Emissions Neutral Default Action : When the BCM tells the ECM that the secondary cruise control switch circuit voltage is stuck in Increase High state for too long, ECM sets the code and cruise control will be disabled and disengaged for the remainder of the key cycle regardless of current pass/fail condition once it fails." Only applicable for applications with the secondary cruise switch circuit.</p>	Cruise Control Resume 2 switch remains applied for greater than a calibratable period of time.	fail continuously in the applied state for greater than 89.000 seconds	<p>Diagnostic is Enabled.</p> <p>CAN cruise switch diagnostic enable in ECM</p>	1.00	fail continuously for greater than 89.000 seconds	<p>MIL: Type C, No SVS , "Emissions Neutral Diagnostics – special type C"</p>

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Cruise Control Calibration Incorrect	P158A	Type of cruise in Body Control Module does not match that in the Engine Control Module for 2.5 seconds "Emissions Neutral Default Action : This diagnostic compares the BCM and the ECM configuration calibrations of whether No Cruise, Conventional Cruise Control, or ACC is available on the vehicle. If the calibration for the cruise system type in the ECM does not match the value in \$4E9 signal Vehicle Speed Control System Type, a P158A DTC is set and cruise control is disabled."	Type of cruise system in GMLAN \$4E9 does not match with that in the Engine Control Module for a fix time.	2.5 seconds	Diagnostic is Enabled. DID \$40 from BCM says cruise system is present (ECM receives programmable information from Body Control Module) OR ECM will not receive Programmable information for Cruise from Body Control Module	True	fail continuously for greater than 2.5 seconds.	Type C, No SVS "Emissions Neutral Diagnostics – Special Type C"

210BDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Internal Control Module SIDI High Pressure Pump current monitor	P163A	This DTC Diagnoses the current from the control area and compares it with calibrated thresholds to set current high and low flags	SIDI fuel pump High Current Test Current SIDI fuel pump Low Current Test Current	>= 11.00 Amps <= 0.10 Amps	Battery Voltage Low Side Fuel Pressure Additional Enable Conditions: All must be true (High Pressure Pump is enabled and High Fuel pressure sensor ckt is Not (FA,FP or TFTKO) and High Pressure fuel pump ckt is Not (FA,FP or TFTKO) and Cam or Crank Sensor Not FA and IAT,IAT2,ECT Not FA and Low side Fuel Pump Relay ckt Not FA and Estimate fuel rail pressure is valid and Green Engine (In assembly plant) is not enabled and Not if low fuel condition and Low side Fuel Pump is on and Injector Flow Test is not active and Device control commanded pressure is false and Device control pump ckt enabled on is false and Engine movement detected is true and Manufacturers enable counter is 0) Flex Fuel Sensor Not FA	>= 11 Volts > 0.250 MPa Enabled when a code clear is not active or not exiting device control Engine is not cranking	Current High/Low 10 seconds failures out of 12.50 seconds sample	Type B, 2 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
					Ignition voltage out of correlation error(P1682) not active and Barometric Pressure Inlet Air Temp Fuel Temp	>= 70.0 KPA >= -20.0 degC -12 <= Temp degC <= 126		

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Ignition Voltage Correlation	P1682	Detect a continuous or intermittent out of correlation between the Run/Crank Ignition Voltage and the Powertrain Relay Ignition Voltage. The diagnostic monitors the difference in voltage between Run/Crank Voltage and the Powertrain Relay Ignition Voltage and fails the diagnostic when the voltage difference is too high. This diagnostic only runs when the powertrain is commanded on and the Run/Crank Voltage is greater than a threshold based on IAT or the powertrain ignition voltage is high enough the Run/Crank voltage is high enough.	Run/Crank – PT Relay Ignition >	3.00 Volts	Powertrain commanded on AND (Run/Crank voltage > Table, f(IAT). See supporting tables: P1682_PT Relay Pull-in Run/Crank Voltage f(IAT) OR PT Relay Ignition voltage) AND Run/Crank voltage	> 5.50 Volts <div> <div>> 5.50 Volts</div> </div>	240 / 480 counts; or 0.175 sec continuous; 12.5 ms/count in main processor	Type A, 1 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Ignition Voltage Correlation #2	P16A7	Detect a continuous or intermittent out of correlation between the Run/Crank Ignition Voltage and the Powertrain Relay Ignition Voltage #2. The diagnostic monitors the difference in voltage between Run/Crank Voltage and the Powertrain Relay Ignition Voltage and fails the diagnostic when the voltage difference is too high. This diagnostic only runs when the powertrain is commanded on and the Run/Crank Voltage is greater than a threshold based on IAT or the powertrain ignition voltage is high enough the Run/Crank voltage is high enough. Detect a continuous or intermittent out of correlation between the Run/Crank Ignition Voltage & the Powertrain Relay Ignition Voltage #2.	Run/Crank – PT Relay Ignition >	3.00 Volts		Powertrain commanded on AND (Run/Crank voltage > Table, f(IAT). See supporting tables: P1682_PT Relay Pull-in Run/Crank Voltage f(IAT) OR PT Relay Ignition voltage > 5.50 Volts) AND Run/Crank voltage > 5.50 Volts	240 / 480 counts; or 0.175 sec continuous; 12.5 ms/count in main processor	Type A, 1 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Engine Controls Ignition Relay Feedback Circuit 2 High Voltage - (GEN III Controllers ONLY)	P16B3	Detects high voltage in the engine controls ignition relay feedback circuit 2. This diagnostic reports the DTC when high voltage is present. Monitoring occurs when the relay state is inactive.	Engine controls ignition relay feedback circuit 2 high voltage	Relay voltage >= 4.00	Powertrain relay high diag enable Powertrain relay state	= 1.00 = INACTIVE	50 failures out of 63 samples 100 ms / sample	Type B, 2 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
SENT Fuel Rail Pressure & Temperature Sensor Communicati on Circuit 3 Low Voltage	P16E4	This DTC determines if the SENT signal shorted low, this is determined by monitoring the number pulses on the SENT signal line received at the ECU and the SENT Signal Line State always indicating low.	The number pulses on the SENT signal line SENT Signal Line State	<= 35 = Low	SENT Sensor Communication Circuit Diagnostic Enabled SENT power up delay	True >= 0.00 seconds Enabled when a code clear is not active or not exiting device control	400 failures out of 500 samples 6.25 ms per sample Continuous	Type A, 1 Trips

210BDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
SENT Fuel Rail Pressure & Temperature Sensor Communicati on Circuit 3 High Voltage	P16E5	This DTC determines if the SENT signal shorted low, this is determined by monitoring the number pulses on the SENT signal line received at the ECU and the SENT Signal Line State always indicating high.	The number pulses on the SENT signal line SENT Signal Line State	<= 35 = High	SENT Sensor Communication Circuit Diagnostic Enabled SENT power up delay	True >= 0.00 seconds Enabled when a code clear is not active or not exiting device control	400 failures out of 500 samples 6.25 ms per sample Continuous	Type A, 1 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Control Module Serial Peripheral Interface Bus 1	P16F0	This DTC detects intermittent and continuous invalid SPI messages. This is based on the detection of missing or invalid receive message within the main processor before receiving a valid message.	This function detects a serial communications fault based upon the detection of missing or invalid (receive) message within the main processor before receiving a valid message.		Run/Crank voltage	> 6.41 Volts	39 / 399 counts continuous; 12.5 ms /count in the ECM main processor	Type A, 1 Trips
			This function detects a serial communications fault based upon the detection of missing or invalid (receive) message within the main processor after receiving a valid message.		Run/Crank voltage	> 6.41 Volts	159 / 399 counts continuous; 12.5 ms /count in the ECM main processor	

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Internal Control Module Redundant Memory Performance (Gasoline applications ONLY)	P16F3	Detect Processor Calculation faults due to RAM corruptions, ALU failures and ROM failures For all of the following cases: If the individual diagnostic threshold is equal to 2048 ms, this individual case is not applicable. If any of the following cases are X out of Y diagnostics and the fail (x) is greater than the sample (Y), this individual case is also not applicable.	Equivance Ratio torque compensation exceeds threshold	-62.24 Nm	Ignition State	Accessory, run or crank	Up/down timer 475 ms continuous, 0.5 down time multiplier	Type A, 1 Trips
			Absolute difference between Equivance Ratio torque compensation and its dual store out of bounds given by threshold	62.24 Nm	Ignition State	Accessory, run or crank	Up/down timer 175 ms continuous, 0.5 down time multiplier	
			Absolute difference of Accessory torque and its redundant calculation is out of bounds given by threshold range	62.24 Nm	Ignition State	Accessory, run or crank	Up/down timer 175 ms continuous, 0.5 down time multiplier	

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
			Absolute difference of Filtered Air-per-cylinder and its redundant calculation is out of bounds given by threshold range	65.43 mg	Ignition State	Accessory, run or crank	Up/down timer 175 ms continuous, 0.5 down time multiplier	
			Absolute difference between the previous Final Advance and the current Final Advance not Adjusted for Equivalence Ratio is out of bounds given by threshold range	15.00 degrees		Engine speed >0rpm	Up/down timer 425 ms continuous, 0.5 down time multiplier	
			Torque Learn offset is out of bounds given by threshold range	High Threshold 0.00 Nm Low Threshold 0.00	Ignition State	Accessory, run or crank	Up/down timer 175 ms continuous, 0.5 down time multiplier	

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
				Nm				
			One step ahead calculation of air-per-cylinder and two step ahead is greater than threshold	80.00 mg		Engine speed > 750 rpm	Up/down timer 448 ms continuous, 0.5 down time multiplier	
			Difference between Unmanaged Spark and PACS Spark is greater than threshold	15.00 degrees	Ignition State	Accessory, run or crank	Up/down timer 475 ms continuous, 0.5 down time multiplier	
			Commanded Predicted Engine Torque and its dual store do not match	N/A	Ignition State	Accessory, run or crank	Up/down timer 2,048 ms continuous, 0.5 down time multiplier	

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
			Zero pedal axle torque is out of bounds given by threshold range	High Threshold 1,313.18 Nm Low Threshold -65,535.00 Nm	Ignition State	Accessory, run or crank	Up/down timer 175 ms continuous, 0.5 down time multiplier	
			Creep Coast Axle Torque is out of bounds given by threshold range	High Threshold 1,313.18 Nm Low Threshold -65,535.00 Nm	Ignition State	Accessory, run or crank	Up/down timer 2,048 ms continuous, 0.5 down time multiplier	
			Absolute difference of Friction torque and its redundant calculation is out of bounds given by threshold range	62.24 Nm	Ignition State	Accessory, run or crank	Up/down timer 175 ms continuous, 0.5 down time multiplier	

210BDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
			Arbitrated Air-Per-Cylinder filter coefficient is out of bounds given by threshold range	High Threshold 1.000 Low Threshold 0.074	Ignition State	Accessory, run or crank	Up/down timer 475 ms continuous, 0.5 down time multiplier	
			Launch spark is active but the launch spark redundant path indicates it should not be active	N/A		Engine speed < 7,000.00 or 7,200.00 rpm (hysteresis pair)	Up/down timer 148 ms continuous, 0.5 down time multiplier	
			Rate limited vehicle speed and its dual store do not equal	N/A		Time since first CAN message with vehicle speed >= 0.500 sec	10 / 40 counts; 25.0msec/count	

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
			Commanded engine torque due to fast actuators and its dual store do not equal	N/A	Ignition State	Accessory, run or crank	Up/down timer 475 ms continuous, 0.5 down time multiplier	
			Commanded engine torque due to slow actuators and its dual store do not equal	N/A	Ignition State	Accessory, run or crank	Up/down timer 475 ms continuous, 0.5 down time multiplier	
			TOS to wheel speed conversion factor is out of bounds given by threshold range	High Threshold: 1.10 T/C Range Hi 0.10 T/C Range Lo Low Threshold: 1.10 T/C Range Hi 0.10 T/C Range Lo	Ignition State	Accessory, run or crank	5 / 15 counts; 25.0msec/count	

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
			Cylinders active greater than commanded	2 cylinders		Engine run flag = TRUE > 2.00 s Number of cylinder events since engine run > 24 No fuel injector faults active	Up/down timer 448 ms continuous, 0.5 down time multiplier	
			Transfer case neutral request from four wheel drive logic does not match with operating conditions	N/A	Ignition State	Accessory, run or crank Transfer case range valid and not over-ridden FWD Apps only	7.00 / 10.00 counts; 25.0msec/count	
			Driver progression mode and its dual store do not equal	N/A	Ignition State	Accessory, run or crank	Up/down timer 475 ms continuous, 0.5 down time	

210BDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
							multiplier	
			Predicted torque for uncorrected zero pedal determination is greater than calculated limit.	Table, f(Engine, Oil Temp). P16F3_Speed Control External Load f(Oil Temp, RPM) + 62.24 Nm	Ignition State	Accessory, run or crank	Up/down timer 2,048 ms continuous, 0.5 down time multiplier	
			Engine Predicted Request Without Motor is greater than its redundant calculation plus threshold	61.24 Nm	Ignition State	Accessory, run or crank	Up/down timer 175 ms continuous, 0.5 down time multiplier	
			Engine Immediate Request Without Motor is greater than its redundant calculation plus threshold	61.24 Nm	Ignition State	Accessory, run or crank	Up/down timer 175 ms continuous, 0.5	

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
							down time multiplier	
			Positive Torque Offset is greater than its redundant calculation plus threshold OR Positive Torque Offset is less than its redundant calculation minus threshold	62.24 Nm	Ignition State	Accessory, run or crank	Up/down timer 175 ms continuous, 0.5 down time multiplier	
			Commanded Predicted Engine Request is greater than its redundant calculation plus threshold	62.24 Nm	Ignition State	Accessory, run or crank	Up/down timer 475 ms continuous, down time	

210BDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
							multiplier 0.5	
			Commanded Hybrid Predicted Crankshaft Request is greater than its redundant calculation plus threshold	4,096.00 Nm	Ignition State	Accessory, run or crank	Up/down timer 2,048 ms continuous, 0.5 down time multiplier	
			Commanded Hybrid Immediate Crankshaft Request is less than its redundant calculation minus threshold	4,096.00 Nm	Ignition State	Accessory, run or crank	Up/down timer 2,048 ms continuous, 0.5 down time multiplier	

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
			Regeneration Brake Assist is not within a specified range	Brake Regen Assist < 0 Nm or Brake Regen Assist > 0.00 Nm	Ignition State	Accessory, run or crank	Up/down timer 2,048 ms continuous, 0.5 down time multiplier	
			Cylinder Spark Delta Correction exceeds the absolute difference as compared to Unadjusted Cylinder Spark Delta	15.00 degrees	Ignition State	Accessory, run or crank	Up/down timer 175 ms continuous, 0.5 down time multiplier	
			1. Cylinder Torque Offset exceeds step size threshold OR	1. 62.24 Nm	Ignition State	Accessory, run or crank	Up/down timer 175 ms continuous, 0.5 down time multiplier	

210BDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
			2. Sum of Cylinder Torque Offset exceeds sum threshold	2. 62.24 Nm				
			Engine Capacity Minimum Immediate Without Motor is greater than its dual store plus threshold	62.24 Nm	Ignition State	Accessory, run or crank	Up/down timer 175 ms continuous, 0.5 down time multiplier	
			Engine Capacity Minimum Engine Off is greater than threshold	0 Nm	Ignition State	Accessory, run or crank	Up/down timer 475 ms continuous, 0.5 down time multiplier	

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
			Engine Capacity Minimum Engine Immediate Without Motor is greater than threshold	0 Nm	Ignition State	Accessory, run or crank	Up/down timer 2,048 ms continuous, 0.5 down time multiplier	
			Commanded Immediate Engine Request is greater than its redundant calculation plus threshold	62.24 Nm	Ignition State	Accessory, run or crank	Up/down timer 2,048 ms continuous, 0.5 down time multiplier	
			Engine Speed Loes Intake Firing (event based) calculation does not equal its redundant calculation	N/A		Engine speed greater than 0rpm	Up/down timer 148 ms continuous, 0.5 down time multiplier	

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
			Engine Speed Lores Intake Firing timing (event based) calculation does not equal its redundant calculation	N/A		Engine speed greater than 0rpm	Up/down timer 148 ms continuous, 0.5 down time multiplier	
			Idle speed control calculated predicted minimum torque request exceeds calculated torque limit	Table, f(Oil Temp, RPM). See supporting tables: P16F3_Speed Control External Load f(Oil Temp, RPM) + 62.24 Nm	Ignition State	Accessory, run or crank	Up/down timer 2,048 ms continuous, 0.5 down time multiplier	
			Idle speed control calculated predicted minimum torque without reserves exceeds calculated torque limit	Table, f(Oil Temp, RPM). See supporting tables: P16F3_Speed Control External Load f(Oil Temp, RPM) +	Ignition State	Accessory, run or crank	Up/down timer 2,048 ms continuous, 0.5 down time multiplier	

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
				62.24 Nm				
			Difference between Driver Requested Immediate Torque primary path and its secondary exceeds threshold	1,313.18 Nm	Ignition State	Accessory, run or crank	Up/down timer 2,048 ms continuous, 0.5 down time multiplier	
			Driver Immediate Request is less than its redundant calculation minus threshold	1,313.18 Nm	Ignition State	Accessory, run or crank	Up/down timer 475 ms continuous, 0.5 down time multiplier	
			Commanded Immediate Request is greater than its redundant calculation plus threshold	1,313.18 Nm	Ignition State	Accessory, run or crank	Up/down timer 2,048 ms continuous, 0.5 down time	

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
			OR Commanded Immediate Request is less than its redundant calculation minus threshold				mu per	
			Commanded Immediate response type s set to Inactive	N/A	Ignition State	Accessory, run or crank	Up/down timer 2,048 ms continuous, 0.5 down time multiplier	
			Difference between Cruise Axle Torque Arbitrated Request and Cruise Torque Request exceeds threshold	49.2 Nm		Cruise has been engaged for more than 4.00 seconds	Up/down timer 2,048 ms continuous, 0.5 down time multiplier	

210BDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
			Desired engine torque request greater than redundant calculation plus threshold	61.24 Nm	Ignition State	Accessory, run or crank	Up/down timer 475 ms continuous, 0.5 down time multiplier	
			Engine min capacity above threshold	62.24 Nm	Ignition State	Accessory, run or crank	Up/down timer 108 ms continuous, 0.5 down time multiplier	
			No fast unmanaged retarded spark above the applied spark plus the threshold	15.00 Degree		Engine speed greater than 0rpm	Up/down timer 425 ms continuous, 0.5 down time multiplier	
			Absolute difference of adjustment factor based on temperature and its dual store above threshold	2.76 m/s	Ignition State	Accessory, run or crank	Up/down timer 148 ms continuous, 0.5 down time multiplier	

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
			1. Absolute difference of redundant calculated engine speed above threshold	500 RPM		Engine speed greater than 0 RPM	Up/down timer 148 ms continuous, 0.5 down time multiplier	
			After throttle blade pressure and its dual store do not match	N/A	Ignition State	Accessory, run or crank	Up/down timer 175 ms continuous, 0.5 down time multiplier	
			Speed Control's Predicted Torque Request and its dual store do not match	N/A	Ignition State	Accessory, run or crank	Up/down timer 2,048 ms continuous, 0.5 down time multiplier	

210BDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
			Engine oil temperature and its dual store do not match	N/A	Ignition State	Accessory, run or crank	Up/down timer 348 ms continuous, 0.5 down time multiplier	
			Desired throttle position greater than redundant calculation plus threshold	9.03 percent	Ignition State	Accessory, run or crank	Up/down timer 175 ms continuous, 0.5 down time multiplier	
			Absolute difference of the rate limited pre-throttle pressure and its redundant calculation greater than threshold	0.06 kpa	Ignition State	Accessory, run or crank	Up/down timer 175 ms continuous, 0.5 down time multiplier	
			Throttle desired torque above desired torque plus threshold	62.24 Nm	Ignition State	Accessory, run or crank	Up/down timer 475 ms continuous, 0.5 down time multiplier	

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
			Desired filtered throttle torque exceeds the threshold plus the higher of desired throttle torque or modeled throttle torque	62.24 Nm	Ignition State	Accessory, run or crank	Up/down timer 475 ms continuous, 0.5 down time multiplier	
			Torque feedback proportional term is out of allowable range or its dual store copy does not match	High Threshold 31.12 Nm Low Threshold -31.12 Nm	Ignition State	Accessory, run or crank	Up/down timer 475 ms continuous, 0.5 down time multiplier	
			Torque feedback integral term magnitude or rate of change is out of allowable range or its dual store	High Threshold 58.35 Nm	Ignition State	Accessory, run or crank	Up/down timer 475 ms continuous, 0.5	

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
			copy do not match	<p>Low Threshold</p> <p>-62.24 Nm</p> <p>Rate of change threshold</p> <p>3.89 Nm/loop</p>			down time multiplier	
			Difference of Final Torque feedback proportional plus integral term and its redundant calculation is out of bounds given by threshold range	<p>High Threshold</p> <p>62.24 Nm</p> <p>Low Threshold</p> <p>- 62.24 Nm</p>			Accessory, run or crank	
			Difference of torque desired throttle area and	High Threshold	Ignition State	Accessory, run or crank	Up/down timer 475	

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
			its redundant calculation is out of bounds given by threshold range	0.50 % Low Threshold - 0.50 %			ms continuous, 0.5 down time multiplier	
			Difference of torque model coefficients and its redundant calculation is out of bounds given by threshold range	High Threshold 0.0001135 Low Threshold - 0.0001135			Up/down timer 175 ms continuous, 0.5 down time multiplier	
			Difference of base friction torque and its redundant calculation is out of bounds given by threshold range	High Threshold 62.24 Nm Low Threshold - 62.24 Nm			Up/down timer 475 ms continuous, 0.5 down time multiplier	

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
			Accessory drive friction torque is out of bounds given by threshold range	High Threshold 62.24 Nm Low Threshold 0.00 Nm	Ignition State	Accessory, run or crank	Up/down timer 475 ms continuous, 0.5 down time multiplier	
			AC friction torque is greater than commanded by AC control software or less than threshold limit	High Threshold 35.00 Nm Low Threshold 0.00 Nm	Ignition State	Accessory, run or crank	Up/down timer 475 ms continuous, 0.5 down time multiplier	
			Difference of Oil temperature delta friction torque and its redundant calculation is out of bounds given by threshold range	High Threshold 62.24 Nm	Ignition State	Accessory, run or crank	Up/down timer 2,048 ms continuous, 0.5 down time multiplier	

210BDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
				Low Threshold - 62.24 Nm				
			Generator friction torque is out of bounds given by threshold range	High Threshold 62.24 Nm Low Threshold 0.00 Nm	Ignition State	Accessory, run or crank	Up/down timer 475 ms continuous, 0.5 down time multiplier	
			Absolute difference between the Supercharger friction torque and its redundant calculation greater than threshold	62.24 Nm	Ignition State	Accessory, run or crank	Up/down timer 475 ms continuous, 0.5 down time multiplier	
			Filtered Torque error magnitude or its increase rate of change is out of	High Threshold 62.24		Engine speed >0rpm MAF, MAP and Baro DTCs are false	Up/down timer 475 ms continuous,	

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
			allowable range or its dual store copy do not match	Nm Low Threshold -62.24 Nm Rate of change threshold 3.89 Nm/loop			0.5 down time multiplier	
			Torque error compensation is out of bounds given by threshold range	High Threshold 62.24 Nm Low Threshold 0.00 Nm			Up/down timer 475 ms continuous, 0.5 down time multiplier	
			Delta Torque Baro compensation is out of bounds given by threshold	High Threshold 6.45			Up/down timer 175 ms continuous,	

210BDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
			range	Nm			0.5 down time multiplier	
			Low Threshold					
			-6.12 Nm					
			1. Difference of reserve torque value and its redundant calculation exceed threshold	1. 61.24 Nm		1. & 2.: Torque reserve (condition when spark control greater than optimum to allow fast transitions for torque disturbances) > 62.24 Nm	Up/down timer 475 ms continuous, 0.5 down time multiplier	
			OR	2. N/A				
			2. Reserve request does not agree with operating conditions or Difference of final predicted torque and its redundant calculation exceed threshold	3. 61.24 Nm				
			OR	4. 61.24 Nm				
			3. Rate of change of reserve torque exceeds threshold, increasing direction only		3. & 4.: Ignition State	3. & 4.: Accessory, run or crank		
			OR					
			4. Reserve engine torque above allowable capacity threshold					

210BDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
			Engine Vacuum and its dual store do not match	N/A	Ignition State	Accessory, run or crank	Up/down timer 175 ms continuous, 0.5 down time multiplier	
			Absolute difference of the calculated Intake Manifold Pressure during engine event versus during time event is greater than threshold	Table, f(Desired Engine Torque). See supporting tables: P16F3_Delta MAP Threshold f(Desired Engine Torque)		Engine speed >0rpm	Up/down timer 148 ms continuous, 0.5 down time multiplier	
			Min. Axle Torque Capacity is greater than threshold	0.00 Nm	Ignition State	Accessory, run or crank	Up/down timer 175 ms continuous, 0.5 down time multiplier	
			Driver Predicted Request is greater than its redundant calculation plus threshold OR	1,313.18 Nm	Ignition State	Accessory, run or crank	Up/down timer 475 ms continuous, 0.5 down time multiplier	

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
			Driver Predicted Request is less than its redundant calculation minus threshold					
			Cold Delta Friction Torque and its dual store do not match	N/A	Ignition State	Accessory, run or crank	Up/down timer 175 ms continuous, 0.5 down time multiplier	
			Predicted torque for zero pedal determination is greater than calculated limit.	Table, f(Oil Temp, RPM). See supporting tables: Speed Control External Load f(Oil Temp, RPM) + 62.24 Nm	Ignition State	Accessory, run or crank	Up/down timer 2,048 ms continuous, 0.5 down time multiplier	
			Commanded Predicted	1 Nm	Ignition State	Accessory, run or crank	Up/down timer	

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
			Axle Torque and its dual store do not match				475 ms continuous, 0.5 down time multiplier	
			Steady State Estimated Engine Torque and its dual store are not equal	N/A		AFM not changing from Active to Inactive and preload torque not changing and one loop after React command Engine speed >0rpm	Up/down timer 2,048 ms continuous, 0.5 down time multiplier	
			Difference of Weighting factor for number of cylinders fueled and its redundant calculation is above threshold	0.26		Engine run flag = TRUE > 10.00 s	Up/down timer 175 ms continuous, 0.5 down time multiplier	
			Difference of minimum spark advance limit and its redundant calculation is out of bounds given by threshold range	15.00 degrees	Ignition State	Accessory, run or crank	Up/down timer 148 ms continuous, 0.5 down time multiplier	

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
			Difference of commanded spark advance and adjusted delivered is out of bounds given by threshold range	15.00 degrees		Engine speed >0rpm	Up/down timer 425 ms continuous, 0.5 down time multiplier	
			Absolute difference between Estimated Engine Torque and its dual store are above a threshold	62.24 Nm		Engine speed >0rpm	Up/down timer 475 ms continuous, 0.5 down time multiplier	
			Absolute difference between Estimated Engine Torque without reductions due to torque control and its dual store are above a threshold	62.24 Nm		Engine speed >0rpm	Up/down timer 475 ms continuous, 0.5 down time multiplier	

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
			Difference of desired spark advance for managed torque and its redundant calculation is out of bounds given by threshold range	15.00 degrees		Torque reserve (condition when spark control greater than optimum to allow fast transitions for torque disturbances) > 62.24 Nm	Up/down timer 448 ms continuous, 0.5 down time multiplier	
			Absolute difference of Engine Capacity Minimum Running Immediate Brake Torque Excluding Cylinder Sensitivity and its redundant calculation is out of bounds given by threshold range	62 Nm		Engine speed >0rpm	Up/down timer 175 ms continuous, 0.5 down time multiplier	
			One step ahead calculation of air-per-cylinder greater than two step ahead calculation by threshold for time	Threshold: Dynamically calculated based on current engine conditions Fault Pending Threshold: 100		Engine speed > 750 rpm	Up/down timer 448 ms continuous, 0.5 down time multiplier	

210BDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
				ms				
			Rate limited cruise axle torque request and its dual store do not match within a threshold	49.24 Nm	Ignition State	Accessory, run or crank	Up/down timer 163 ms continuous, 0.5 down time multiplier	
			<p>1. Absolute difference of Calculated accelerator pedal position compensated for carpet learn and error conditions and its redundant calculation is out of bounds given by threshold range</p> <p>OR</p> <p>2. Absolute difference of Calculated accelerator pedal position compensated for carpet learn and error conditions and its dual store do not equal</p> <p>OR</p>	<p>1. 5.00 %</p> <p>2. N/A</p> <p>3. N/A</p>	Ignition State	Accessory, run or crank	Up/down timer 475 ms continuous, 0.5 down time multiplier	

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
			3. Absolute difference of Calculated accelerator pedal position and its dual store do not equal					
			Commanded axle torque is greater than its redundant calculation by threshold	1,313.18 Nm	Ignition State	Accessory, run or crank	Up/down timer 475 ms continuous, 0.5 down time multiplier	
			Commanded axle torque is less than its redundant calculation by threshold	1,969.77 Nm	Ignition State	Accessory, run or crank	Up/down timer 475 ms continuous, 0.5 down time multiplier	
			Preload timer and its redundant calculation do not equal	N/A	Ignition State	Accessory, run or crank AFM apps only	Up/down timer 2,048 ms continuous, 0.5 down time multiplier	

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
			AC friction torque is greater than commanded by AC control software	35.00 Nm	Ignition State	Accessory, run or crank	Up/down timer 2,048 ms continuous, 0.5 down time multiplier	
			Engine Speed Lores Intake Firing (time based) calculation does not equal its redundant calculation	N/A		Engine speed >0rpm	Up/down timer 175 ms continuous, 0.5 down time multiplier	
			Absolute difference of the calculated spark offset for equivalence ratio and its redundant calculation is greater than a threshold	15.00 degrees		Engine speed >0rpm	Up/down timer 148 ms continuous, 0.5 down time multiplier	
			Transmission Torque Request calculations do not equal their dual stores	N/A		Run or Crank = TRUE > 0.50 s	16 / 32 counts; 25.0msec/count	

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
			Absolute difference of the predicted motor torque ACS and its redundant calculation is greater than a threshold	0.01 Nm			Up/down timer 2,048 ms continuous, 0.5 down time multiplier	
			Absolute difference of maximum throttle area and its redundant calculation is greater than a threshold	15 mm ²			Up/down timer 148 ms continuous, 0.5 down time multiplier	
			Absolute difference of Desired TIAP and its redundant calculation is greater than a threshold	5.00 kPa			Up/down timer 475 ms continuous, 0.5 down time multiplier	
			Pedal learns and their redundant calculation do not equal		Ignition State	Accessory, run or crank	Up/down timer 475 ms continuous, 0.5 down time multiplier	
			Throttle learns and their redundant calculation do not equal		Ignition State	Accessory, run or crank	Up/down timer 475 ms continuous, 0.5 down time multiplier	

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
			Desired Throttle Position an s re un an ca cu a on o no equa		Ignition State	Accessory, run or crank	Up/down timer ms con nuous, own me multiplier	

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Transfer Case Control Module Transfer Case Command State Rationality - 4WD high or 4WD low command not 4wd high or 4WD low ratio	P17D4	The diagnostic monitor compares measured transfer case ratio to the transfer case control module commanded transfer case state. When the measured transfer case gear ratio is 4WD neutral ratio, while, the transfer case control module command state is 4WD high ratio or 4WD low ratio, the DTC is set. The 4WD neutral ratio regions are considered ratios outside the nominal 4WD high and nominal 4WD low ratios. The 4WD ratio is calculated as transmission output shaft speed divided by the transfer case output shaft speed, both speed are measured values based on speed sensors.	transfer case control module transfer case command state AND measured transfer case ratio is NOT in 4WD low ratio window AND measured transfer case ratio is NOT in 4WD high window AND measured transfer case ratio is NOT in 4WD low ratio window AND measured transfer case ratio is NOT in 4WD high window OR vehicle is stopped: transfer case output shaft speed transmission output shaft speed vehicle stopped secondary parameter thresholds met (measured transfer case ratio = transmission output speed / transfer case output speed)	≠ 4WD neutral 4WD low ratio window ≤ 3.00 ≥ 2.40 4WD high ratio window ≤ 1.30 ≥ 0.70 ≥ 2.90 ≤ 2.50 ≥ 1.20 ≤ 0.80 ≤ 10.0 RPM ≥ 500.0 RPM	vehicle stopped: transmission output shaft speed engine torque engine speed accelerator pedal position accelerator pedal position brake pedal position transmission gear is forward gear: transmission output shaft speed engine torque engine speed accelerator pedal position accelerator pedal position brake pedal position transmission gear is reverse gear: transmission output shaft speed engine torque engine speed accelerator pedal position accelerator pedal position brake pedal position vehicle speed diagnostic monitor enable PTO active engine power limited DTCs not fault active	≥ 500.0 RPM ≥ 100.0 Nm ≥ 300.0 RPM ≥ 5.0 % hysteresis high NOT ≤ 3.0 % hysteresis low ≤ 100.0 % ≥ 500.0 RPM ≥ -20.0 Nm ≥ 0.0 RPM ≥ 5.0 % hysteresis high NOT ≤ 5.0 % hysteresis low ≤ 100.0 % ≥ 500.0 RPM ≥ 90.0 Nm ≥ 300.0 RPM ≥ 6.0 % hysteresis high NOT ≤ 3.0 % hysteresis low ≤ 100.0 % ≥ 3.00 = 1 Boolean = FALSE = FALSE CrankSensor_FA VehicleSpeedSensor_FA	fail time ≥ 10.50 seconds out of sample time ≥ 15.00 seconds update rate 12.5 milliseconds	Type A, 1 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
			up a e r a e . milliseconds			ng ne orque s naccura te P057B, P057 , P057D, P057E, P279A, P279B, P279C, P0502, P0503, P0722, P0723, P2160, P2161		

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Park Assistance System Performance	P18CB	Determines if Park assist active bit from EBCM is valid	Speed Error - APA active (\$1C6/\$1C7) above a vehicle speed threshold OR Initialization Error - APA active (\$1C6/\$1C7) without an active torque request OR Exit Error - APA transitions to inactive during active torque request above a vehicle speed threshold	> 10.00 APA active boolean transitions from False to True with Torque Intervention = No request APA active boolean transitions from True to False with Torque Intervention <> No request when vehicle speed is > 1.00	Power Mode Engine Running Status of traction in GMLAN message (\$4E9) Ignition Voltage Run/Crank Activ	= Run = True = Traction Present > 6.41 volts > 0.50 seconds	>= 4 failures out of 10 Performed every 12.5ms >= 4 failures out of 10 Performed every 12.5ms When transition occurs, no number of samples Performed every 12.5ms	Type C, No SVS Emissions Neutral Diagnostic - Type C

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Intake Camshaft Actuator Solenoid Circuit Low– Bank 1	P2088	Controller specific output driver circuit diagnoses the CAM phaser oil control valve solenoid high sided driver for a short to ground failure when the output is powered on by comparing a voltage measurement to controller specific voltage thresholds.	<p>Voltage measurement outside of controller specific acceptable range during driver on state indicates short to ground failure.</p> <p>Controller specific output driver circuit voltage thresholds are set to meet the following controller specification for a short to ground.</p>	$\leq 0.5 \Omega$ impedance between signal and controller ground	<p>Diagnostic is Enabled</p> <p>System supply voltage</p> <p>Output driver is commanded on</p> <p>Ignition switch is in crank or run position</p>	> 11.00 Volts	<p>20 failures out of 25 samples</p> <p>250 ms /sample, continuous</p>	Type B, 2 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Intake Camshaft Actuator Solenoid Circuit High – Bank 1	P2089	Controller specific output driver circuit diagnoses the CAM phaser oil control valve solenoid high sided driver for a short to power failure when the output is powered off by comparing a voltage measurement to controller specific voltage thresholds.	<p>Voltage measurement outside of controller specific acceptable range during driver off state indicates short to power failure.</p> <p>Controller specific output driver circuit voltage thresholds are set to meet the following controller specification for a short to power.</p>	$\leq 0.5 \Omega$ impedance between signal and controller power	<p>Diagnostic is Enabled</p> <p>System supply voltage</p> <p>Output driver is commanded on</p> <p>Ignition switch is in crank or run position</p>	> 11.00 Volts	<p>20 failures out of 25 samples</p> <p>250 ms /sample, continuous</p>	Type B, 2 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Exhaust Camshaft Actuator Solenoid Circuit Low – Bank 1	P2090	Controller specific output driver circuit diagnoses the CAM phaser oil control valve solenoid high sided driver for a short to ground failure when the output is powered on by comparing a voltage measurement to controller specific voltage thresholds.	<p>Voltage measurement outside of controller specific acceptable range during driver on state indicates short to ground failure.</p> <p>Controller specific output driver circuit voltage thresholds are set to meet the following controller specification for a short to ground.</p>	$\leq 0.5 \Omega$ impedance between signal and controller ground	<p>Diagnostic is Enabled</p> <p>System supply voltage</p> <p>Output driver is commanded on</p> <p>Ignition switch is in crank or run position</p>	> 11.00 Volts	<p>20 failures out of 25 samples</p> <p>250 ms /sample, continuous</p>	Type B, 2 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Exhaust Camshaft Actuator Solenoid Circuit High – Bank 1	P2091	Controller specific output driver circuit diagnoses the CAM phaser oil control valve solenoid high sided driver for a short to power failure when the output is powered off by comparing a voltage measurement to controller specific voltage thresholds.	<p>Voltage measurement outside of controller specific acceptable range during driver off state indicates short to power failure.</p> <p>Controller specific output driver circuit voltage thresholds are set to meet the following controller specification for a short to power.</p>	$\leq 0.5 \Omega$ impedance between signal and controller power	<p>Diagnostic is Enabled</p> <p>System supply voltage</p> <p>Output driver</p> <p>Ignition switch</p>	<p>> 11.00 Volts</p> <p>On</p> <p>Crank or Run</p>	<p>20 failures out of 25 samples</p> <p>250 ms /sample, continuous</p>	Type B, 2 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Post Catalyst Fuel Trim System Too Lean Bank 1	P2096	<p>Determines if the post catalyst O2 sensor based fuel control system is indicating a lean exhaust gas condition. If the lean condition is such that the control system utilizes all or most of its available high limit authority (high limit = 100% authority), then P2096 will set.</p> <p>The monitor can be calibrated to fail based on the Average Integral Offset % Authority, the Average Total Offset % Authority or both combined. The Average Total Offset metric consists of the average of the Integral Offset+ Proportional Offset.</p> <p>Note: When the post catalyst O2 voltage is too lean, the post catalyst O2 integral and proportional offset control is increased (positive % authority). This applies a rich bias to fuel control in an attempt to counteract the lean condition. A perfectly balanced control system (no rich or lean bias required) is represented by integral</p>	<p>The Average Integral Offset % Authority</p> <p>AND</p> <p>The Average Total Offset % Authority</p> <p>(Note: any value greater than or equal to +100% effectively nullifies the Average Total Offset % Authority criteria)</p> <p>High Vapor Feature: The diagnostic is at risk of reporting a false fail when excessively High Vapor (HV) conditions are present. This HV condition is indicated when the purge valve is open AND percent vapor is $\geq 28\%$ for ≥ 5.0 seconds AND the % Authority metric is approaching the failure threshold.</p> <p>Diagnosis resumes if the purge valve is closed OR the percent vapor is $\leq 24\%$ for ≥ 5.0 seconds. This was done to minimize disabling the diagnostic for longer than necessary.</p>	<p>$\geq 98.0\%$</p> <p>$\geq 60.0\%$</p> <p>If the P2096 is actively failing then the Average Integral Offset must be $< 65.0\%$ and the Average Total Offset must be $< 54.3\%$ for the diagnostic to report a pass.</p>	<p>The post cat fuel trim diagnostic is enabled</p> <p>The diagnostic is enabled during:</p> <p>Deceleration Idle Cruise Light Acceleration Heavy Acceleration</p> <p>Ambient Air Pressure Engine AirFlow Intake Manifold Pressure Induction Air Temperature Start-up Coolant Temp.</p> <p>PTO Intrusive diag. fuel control Ethanol Estimation in Progress</p> <p>O2 Heater Learned Resistance</p> <p>Long Term Secondary Fuel Trim Enabled for (see "Long Term Secondary Fuel Trim Enable Criteria" in Supporting Tables)</p> <p>High Vapor Conditions</p> <p>Green Cat System</p>	<p>No No Yes No No</p> <p>≥ 70 kPa ≥ 0.0 g/s $\leq 10,000.0$ ≥ 0 kPa ≤ 256 ≥ -20 deg. C ≤ 200 ≥ -20 deg. C (or OBD Coolant Enable Criteria = TRUE)</p> <p>Not Active Not Active Not Active</p> <p>= Valid (the heater resistance has learned since NVM reset, see enable conditions for "HO2S Heater Resistance DTC's")</p> <p>≥ 0.1 seconds</p> <p>Not Present</p> <p>= Not Valid,</p>	<p>Frequency: Continuous Monitoring in 100ms loop.</p> <p>The Integral and Total Offset % Authority metrics are sampled every 100ms and an average is calculated every 37.5 seconds (375 samples) before comparing to their respective failure thresholds.</p>	Type B, 2 Trips

210BDG03C ECM Summary Tables

[illegible]

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
					Port e ce s ent e as enabled i.e. those containing a "Yes" at the beginning of the Enable conditions column , the minimum accumulated samples require e ore the uel control metric is cons ere usa e or t a cell (1 sample = 100ms); Deceleration 0 e Cruise 0 Light Acceleration 0 Heavy Acceleration 0 (Note: A value in any of the above operating "cells" that is an order o magn tu e or more higher than other cells is an indication that the agnost c s not capa e of diagnosing in that cell).	m a ance an O2S_Bank_1_Sensor_1 2 _Bank_1_ ensor_2 F		

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Post Catalyst Fuel Trim System Too Rich Bank 1	P2097	<p>Determines if the post catalyst O2 sensor based fuel control system is indicating a rich exhaust gas condition. If the rich condition is such that the control system utilizes all or most of its available low limit authority (low limit = -100% authority), then P2097 will set.</p> <p>The monitor can be calibrated to fail based on the Average Integral Offset % Authority, the Average Total Offset % Authority or both combined. The Average Total Offset metric consists of the average of the Integral Offset+ Proportional Offset.</p> <p>Note: When the post catalyst O2 voltage is too rich, the post catalyst O2 integral and proportional offset control is decreased (negative % authority). This applies a lean bias to fuel control in an attempt to counteract the rich condition. A perfectly balanced control system (no rich or lean bias required) is represented by integral</p>	<p>The Average Integral Offset % Authority</p> <p>AND</p> <p>The Average Total Offset % Authority</p> <p>(Note: any value less than or equal to -100% effectively nullifies the Average Total Offset % Authority criteria)</p> <p>High Vapor Feature: The diagnostic is at risk of reporting a false fail when excessively High Vapor (HV) conditions are present. This HV condition is indicated when the purge valve is open AND percent vapor is >= 28 % for >= 5.0 seconds.</p> <p>Diagnosis resumes if the purge valve is closed OR the percent vapor is <= 24 % for >= 5.0 seconds. This was done to minimize disabling the diagnostic for longer than necessary.</p>	<p><= -98.0%</p> <p><= -48.0%</p> <p>If the P2097 is actively failing then the Average Integral Offset must be > -69.7 % and the Average Total Offset must be > -37.7 % for the diagnostic to report a pass.</p>	Same as P2096	Same as P2096	<p>Frequency: Continuous Monitoring in 100ms loop.</p> <p>The Integral and Total Offset % Authority metrics are sampled every 100ms and an average is calculated every 37.5 seconds (375 samples) before comparing to their respective failure thresholds.</p>	Type B, 2 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
		and proportional offset values of "0" (i.e. 0% authority) and a post catalyst O2 sensor that is within its optimal operating range (neither rich nor lean).						

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Control Module Throttle Actuator Position Performance	P2101	1) Detect a throttle positioning error. This is determined if the difference between measured throttle position and modeled throttle position is greater than a threshold or less than a threshold. This diagnostic only runs when the engine is running and the ignition voltage is high enough and there is not an ignition votage failure and the throttle position minimum learn is not active and the throttle is being controlled 2) Throttle control is driving the throttle in the incorrect direction. This is determined if the throttle position is greater than a threshold percent and the powertrain relay voltage is high enough and the throttle position minimum learn is active 3) Throttle control exceeds the reduced power limit. This is determined if the throttle position is greater and a threshold and the powertrain relay voltage is high enough and reduced power is active.	Difference between measured throttle position and modeled throttle position > OR Difference between modeled throttle position and measured throttle position >	9.03 percent 9.03 percent	Run/Crank voltage TPS minimum learn is not active and Throttle is being Controlled AND (Engine Running or Ignition Voltage) OR Ignition Voltage Ignition voltage failure is false (P1682)	> 6.41 Volts > 5.50 Volts > 8.41 Volts	15 counts; 12.5 ms/count in the primary processor	Type A, 1 Trips
			Throttle Position >	36.00 percent	Powertrain Relay voltage TPS minimum learn active	> 6.41 Volts = TRUE	11 counts; 12.5 ms/count in the primary processor	

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Accelerator Pedal Position (APP) Sensor 1 Lo	P2122	Detects a continuous or intermittent short low or open in the APP sensor #1 by monitoring the APP1 sensor percent Vref and failing the diagnostic when the APP1 percent Vref is too low. This diagnostic only runs when battery voltage is high enough. Detects a continuous or intermittent short low or open in the APP sensor #1 on the Main processor.	APP1 percent Vref	< 0.4625 % Vref	Run/Crank voltage No 5V reference error or fault for # 4 5V reference circuit	> 6.41 Volts P06A3	19 / 39 counts; or 14 counts continuous; 12.5 ms/count in the main processor	Type A, 1 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Accelerator Pedal Position (APP) Sensor 1 Hi	P2123	Detects a continuous or intermittent short high in the APP sensor #1 by monitoring the APP1 sensor percent Vref and failing the diagnostic when the APP1 percent Vref is too high. This diagnostic only runs when battery voltage is high enough. Detect a continuous or intermittent short high in the APP sensor #1 on the Main processor.	APP1 percent Vref >	4.7500 % Vref	Run/Crank voltage No 5V reference error or fault for # 4 5V reference circuit	> 6.41 Volts P06A3	19 / 39 counts; or 14 counts continuous; 12.5 ms/count in the main processor	Type A, 1 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Accelerator Pedal Position (APP) Sensor 2 Lo	P2127	Detects a continuous or intermittent short low or open in the APP sensor #2 by monitoring the APP2 sensor percent Vref and failing the diagnostic when the APP2 percent Vref is too low. This diagnostic only runs when battery voltage is high enough. Detects a continuous or intermittent short low or open in the APP sensor #2 on the Main processor.	APP2 percent Vref <	0.3250 % Vref	Run/Crank voltage No 5V reference error or fault for # 4 5V reference circuit	> 6.41 Volts P0697	19 / 39 counts; or 14 counts continuous; 12.5 ms/count in the main processor	Type A, 1 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Accelerator Pedal Position (APP) Sensor 2 Hi	P2128	Detects a continuous or intermittent short high in the APP sensor #2 by monitoring the APP2 sensor percent Vref and failing the diagnostic when the APP2 percent Vref is too high. This diagnostic only runs when battery voltage is high enough. Detect a continuous or intermittent short high in the APP sensor #2 on the Main processor.	APP2 percent Vref >	2.6000 % Vref	Run/Crank voltage No 5V reference error or fault for # 4 5V reference circuit	> 6.41 Volts P0697	19 / 39 counts; or 14 counts continuous; 12.5 ms/count in the main processor	Type A, 1 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Throttle Position (TP) Sensor 1-2 Correlation	P2135	Detect a continuous or intermittent correlation fault between TPS sensors #1 and #2 on Main processor. 1.) The diagnostic monitors the difference in position between TPS1 and the TPS2 and fails the diagnostic when the difference is too high. This diagnostic only runs when the battery voltage is high enough. 2.) The diagnostic monitors the difference in reference voltage between normalized min TPS1 and the normalized min TPS2 and fails the diagnostic when the difference is too high. This diagnostic only runs when the battery voltage is high enough. Detects a continuous or intermittent correlation fault between TPS sensors #1 and #2 on Main processor	Difference between TPS1 displaced and TPS2 displaced >	6.797 % offset at min. throttle position with a linear threshold to 9.720 % at max. throttle position	Run/Crank voltage No TPS sensor faults No 5V reference error or fault for # 4 5V reference circuit	> 6.41 Volts (P0122, P0123, P0222, P0223) P06A3	79 / 159 counts; or 58 counts continuous; 3.125 ms/count in the main processor	Type A, 1 Trips
			Difference between (normalized min TPS1) and (normalized min TPS2) >	5.000 % Vref	Run/Crank voltage No TPS sensor faults No 5V reference error or fault for # 4 5V reference circuit	> 6.41 Volts (P0122, P0123, P0222, P0223) P06A3	79 / 159 counts; or 58 counts continuous; 3.125 ms/count in the main processor	

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Accelerator Pedal Position (APP) Sensor 1-2 Correlation	P2138	Detect a continuous or intermittent correlation fault between APP sensors #1 and #2 on Main processor. 1.) The diagnostic monitors the difference in position between APP1 and the APP2 and fails the diagnostic when the difference is too high. This diagnostic only runs when the battery voltage is high enough. 2.) The diagnostic also monitors the difference in reference voltage between normalized min APP1 and the normalized min APP2 and fails the diagnostic when the difference is too high. This diagnostic only runs when the battery voltage is high enough. Detects a continuous or intermittent correlation fault between APP sensors #1 and #2 on Main processor	Difference between APP1 displaced and APP2 displaced >	5.000 % offset at min. pedal position with a linear threshold to 10.001 % at max. pedal position	Run/Crank voltage No APP sensor faults No 5V reference errors or faultst for # 3 & # 4 5V reference circuits	> 6.41 Volts (P2122, P2123,P2127, P2128) (P06A3, P0697)	19 / 39 counts intermittent; or 15 counts continuous, 12.5 ms/count in the main processor	Type A, 1 Trips
			Difference between (normalized min APP1) and (normalized min APP2) >	5.000 % Vref	Run/Crank voltage No APP sensor faults No 5V reference errors or faultst for # 3 & # 4 5V reference circuits	> 6.41 Volts (P2122, P2123,P2127, P2128) (P06A3, P0697)	19 / 39 counts intermittent; or 15 counts continuous, 12.5 ms/count in the main processor	

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Injector 1 high side circuit shorted to ground	P2147	Controller specific output driver circuit diagnoses Injector 1 high sided driver for a short to ground failure when the output is powered on by comparing a voltage measurement to controller specific voltage thresholds	Voltage measurement outside of controller specific acceptable range during driver on state indicates short to ground failure. Controller specific output driver circuit voltage thresholds are set to meet the following controller specification for a short to ground.	25 amp >= through High Side Driver	Battery Voltage Engine Run Time	>= 11 Volts >= 5 Seconds P062B not FA or TFTK	10.00 failures out of 20.00 samples 100 ms /sample Continuous	Type A, 1 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Injector 1 high side circuit shorted to power	P2148	Controller specific output driver circuit diagnoses Injector 1 high sided driver for a short to power failure when the output is powered off by comparing a voltage measurement to controller specific voltage thresholds.	Voltage measurement outside of controller specific acceptable range during driver off state indicates short to power failure. Controller specific output driver circuit voltage thresholds are set to meet the following controller specification for a short to power.	<= 1 volt between signal and controller power	Battery Voltage Engine Run Time	>= 11 Volts >= 5 Seconds P062B not FA or TFTK	10.00 failures out of 20.00 samples 100 ms /sample Continuous	Type A, 1 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Injector 2 high side circuit shorted to ground	P2150	Controller specific output driver circuit diagnoses Injector 2 high sided driver for a short to ground failure when the output is powered on by comparing a voltage measurement to controller specific voltage thresholds	Voltage measurement outside of controller specific acceptable range during driver on state indicates short to ground failure. Controller specific output driver circuit voltage thresholds are set to meet the following controller specification for a short to ground.	25 amp >= through High Side Driver	Battery Voltage Engine Run Time	>= 11 Volts >= 5 Seconds P062B not FA or TFTK	10.00 failures out of 20.00 samples 100 ms /sample Continuous	Type A, 1 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Injector 2 high side circuit shorted to power	P2151	Controller specific output driver circuit diagnoses Injector 2 high sided driver for a short to power failure when the output is powered off by comparing a voltage measurement to controller specific voltage thresholds.	Voltage measurement outside of controller specific acceptable range during driver off state indicates short to power failure. Controller specific output driver circuit voltage thresholds are set to meet the following controller specification for a short to power.	 ≤ 1 volt between signal and controller power	Battery Voltage Engine Run Time	≥ 11 Volts ≥ 5 Seconds P062B not FA or TFTK	10.00 failures out of 20.00 samples 100 ms /sample Continuous	Type A, 1 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Injector 3 high side circuit shorted to ground	P2153	Controller specific output driver circuit diagnoses Injector 3 high sided driver for a short to ground failure when the output is powered on by comparing a voltage measurement to controller specific voltage thresholds	Voltage measurement outside of controller specific acceptable range during driver on state indicates short to ground failure. Controller specific output driver circuit voltage thresholds are set to meet the following controller specification for a short to ground.	25 amp >= through High Side Driver	Battery Voltage Engine Run Time	>= 11 Volts >= 5 Seconds P062B not FA or TFTK	10.00 failures out of 20.00 samples 100 ms /sample Continuous	Type A, 1 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Injector 3 high side circuit shorted to power	P2154	Controller specific output driver circuit diagnoses Injector 3 high sided driver for a short to power failure when the output is powered off by comparing a voltage measurement to controller specific voltage thresholds.	Voltage measurement outside of controller specific acceptable range during driver off state indicates short to power failure. Controller specific output driver circuit voltage thresholds are set to meet the following controller specification for a short to power.	<= 1 volt between signal and controller power	Battery Voltage Engine Run Time	>= 11 Volts >= 5 Seconds P062B not FA or TFTK	10.00 failures out of 20.00 samples 100 ms /sample Continuous	Type A, 1 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Injector 4 high side circuit shorted to ground	P2156	Controller specific output driver circuit diagnoses Injector 4 high sided driver for a short to ground failure when the output is powered on by comparing a voltage measurement to controller specific voltage thresholds	Voltage measurement outside of controller specific acceptable range during driver on state indicates short to ground failure. Controller specific output driver circuit voltage thresholds are set to meet the following controller specification for a short to ground.	25 amp >= through High Side Driver	Battery Voltage Engine Run Time	>= 11 Volts >= 5 Seconds P062B not FA or TFTK	10.00 failures out of 20.00 samples 100 ms /sample Continuous	Type A, 1 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Injector 4 high side circuit shorted to power	P2157	Controller specific output driver circuit diagnoses Injector 4 high sided driver for a short to power failure when the output is powered off by comparing a voltage measurement to controller specific voltage thresholds.	Voltage measurement outside of controller specific acceptable range during driver off state indicates short to power failure. Controller specific output driver circuit voltage thresholds are set to meet the following controller specification for a short to power.	<= 1 volt between signal and controller power	Battery Voltage Engine Run Time	>= 11 Volts >= 5 Seconds P062B not FA or TFTK	10.00 failures out of 20.00 samples 100 ms /sample Continuous	Type A, 1 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Transfer Case Speed Sensor Output (TCSS)	P2160	The diagnostic monitor detects no activity in the TCSS circuit due to an electrical fault, wiring fault or sensor fault. The TCSS signal is rationalized against operating conditions of the vehicle. If the vehicle is in motion, accelerator pedal, engine torque, transmission in gear, and no vehicle braking, and the TCSS signal registers below a threshold, the DTC will set.	transfer case output shaft speed sensor raw speed	≤ 25.0 RPM	<p>diagnostic monitor enable calibration</p> <p>transmission gear selector position AND engine torque AND engine torque NOT AND accelerator pedal position AND accelerator pedal position NOT</p> <p>transmission gear selector position AND engine torque AND engine torque NOT AND accelerator pedal position AND accelerator pedal position NOT</p> <p>run/crank voltage run/crank voltage engine power limited PTO active engine speed transmission output shaft speed</p> <p>update range change delay time when condition A or condition B or condition C (25 millisecond update rate):</p>	<p>= 1 Boolean</p> <p>= PARK OR NEUTRAL</p> <p>≥ 8,191.75 Nm</p> <p>≤ 8,191.75 Nm</p> <p>≥ 100.00 %</p> <p>≤ 8.00 %</p> <p>≠ PARK AND ≠ NEUTRAL</p> <p>≥ 80.00 Nm</p> <p>≤ 35.00</p> <p>≥ 5.00 %</p> <p>≤ 3.00 %</p> <p>≥ 5.0 volts for 25 milliseconds</p> <p>≥ 11.0 volts</p> <p>= FALSE Boolean</p> <p>= FALSE Boolean</p> <p>≥ 300.0 RPM</p> <p>≥ 181.0 RPM</p>	<p>fail time ≥ 4.50 seconds</p> <p>25 millisecond update rate</p> <p>range change delay time ≥</p>	Type B, 2 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
					condition A: transmission range state transmission range state previous loop (25 millisecond) condition B: test when transmission range state is reverse enable calibration AND transmission range state transmission range state previous loop (25 millisecond) condition C: test when transmission range state is neutral enable calibration AND transmission range state transmission range state previous loop (25 millisecond) P2161 test fail this key on P2160 test fail this key on P2160 fault active DTCs not fault active	= drive8 or less = drive8 or less = 0 Boolean = REVERSE = REVERSE = 0 Boolean = NEUTRAL = NEUTRAL = FALSE Boolean = FALSE Boolean = FALSE Boolean Transmission Output Shaft Angular Velocity Validity CrankSensor_FA EngineTorqueEstInaccu te	P2160 range change delay time seconds Refer to "Transmission Supporting Tables" for details	

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Transfer Case Speed Sensor Output (TCSS)	P2161	The diagnostic monitor detects an unrealistic drop in the TCSS signal due to a sudden electrical fault, wiring fault or sensor fault. The TCSS signal is rationalized against operating conditions of the vehicle. If the vehicle is in motion, accelerator pedal, engine torque, transmission in gear, and no vehicle braking, and the TCSS signal drops above a delta threshold, a fail timer is enabled. When a TCSS drop occurs it is possible to enable the P2160 fail time as well as the PP2161 fail time. With both P2160 and P2161 fail timers active it is a race condition to either DTC.	transfer case speed sesnor raw speed delta, 25 millisecond update rate	≥ 650.0 RPM	<p>diagnostic monitor enable calibration</p> <p>update range change delay time when condition A or condition B or condition C (25 millisecond update rate): condition A: transmission range state transmission range state previous loop (25 millisecond) condition B: test when transmission range state is reverse enable calibration AND transmission range state transmission range state previous loop (25 millisecond) condition C: test when transmission range state is neutral enable calibration AND transmission range state transmission range state previous loop (25 millisecond)</p>	<p>= 1 Boolean</p> <p>= drive8 or less = drive8 or less</p> <p>= 0 Boolean</p> <p>= REVERSE = REVERSE</p> <p>= 0 Boolean</p> <p>= NEUTRAL = NEUTRAL</p>	<p>fail time ≥ 3.00 seconds, 25 millisecond update rate, increment fail count</p> <p>fail count ≥ 5 counts, 25 millisecond update rate</p> <p>range change delay time ≥ P2161 range change delay time seconds Refer to "Transmission Supporting Tables" for details</p>	Type B, 2 Trips

210BDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
					run/crank voltage run/crank voltage PTO active transfer case mode engine speed transmission output shaft speed loop to loop delta (25 millisecond) AND transmission output shaft speed update stability time stability time transfer case raw output speed AND transfer case raw output speed last loop (25 millisecond) update stability time stability time P2160 test fail this key on P2160 fault active DTCs not fault active	≥ 5.0 volts for 25 milliseconds ≥ 11.0 volts = FALSE Boolean ≠ transfer case mode previos loop (25 millisecond) update 4WD range change time 4WD range change time ≥ 500.0 RPM ≤ 4,095.0 RPM ≥ 350.0 RPM ≥ 0.00 seconds > 150.0 RPM > 150.0 RPM ≥ 6.00 seconds = FALSE = FALSE CrankSensor_FA TransmissionEngagedStat e_FA Transmission Output Shaft Angular Velocity Validity	≥ 5.00 seconds	

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Minimum Throttle Position Not Learned	P2176	Detect when the throttle position minimum learn on the main processor is not learned. This diagnostic detects this by monitoring if the throttle position is greater than a threshold and the number of learn attempts is greater than a threshold. This diagnostic only runs when the battery voltage is high enough and the throttle position minimum learn is active. Throttle position sensors were not in the minimum learn window after multiple attempts to learn the minimum.	During TPS min learn on the Main processor, TPS percent Vref > AND Number of learn attempts >	0.5740 % Vref 10 counts	Run/Crank voltage TPS minimum learn is active No previous TPS min learn values stored in long term memory	> 6.41 Volts = TRUE	2.0 secs	Type A, 1 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Intake Air Temperature Sensor 1 / 2 Correlation	P2199	<p>Detects when the Intake Air Temperature (IAT) sensor and IAT2 sensor values do not correlate with each other. These two temperature sensors are both in the induction system, although they do have different sensor time constants and different positional relationships with components that produce heat. If these two temperature values differ by a large enough amount, the Intake Air Temperature 1 / 2 Correlation Diagnostic will fail.</p> <p>This diagnostic is enabled if the Powertrain Relay voltage is high enough.</p>	ABS (IAT - IAT2)	> 55.0 deg C	<p>Powertrain Relay Voltage for a time</p> <p>No Active DTCs:</p>	<p>>= 11.0 Volts >= 0.9 seconds</p> <p>PowertrainRelayFault</p>	<p>40 failures out of 50 samples</p> <p>1 sample every 100 msec</p>	Type B, 2 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.	
Bank 1 Air- Fuel Ratio Imbalance	P219A	<p>This monitor determines if there is an Air Fuel Imbalance in the fueling system for a cylinder on a Bank 1. Detection is based on a the pre catalyst oxygen sensor voltage. The pre catalyst O2 voltage is used to generate a variance metric that represents the statistical variation of the O2 sensor voltage over a given engine cycle. This metric is proportional to the air-fuel ratio imbalance (variance is higher with an imbalance than without).</p> <p>The observed Variance is dependent on engine speed and load and is normalized by comparing it to a known "good system" result for that speed and load, and generating a Ratio metric.</p> <p>The Ratio metric is calculated by selecting the appropriate threshold calibration from a 17x17 table (see Supporting Table</p>	<p>Filtered Ratio ></p> <p>The EWMA calculation uses the weighting coefficient from the following supporting table: P219A EWMA Coefficient</p> <p>The Ratio metric is calculated by selecting the appropriate threshold calibration from a 17x17 table (see Supporting Table P219A Variance Threshold Bank1 Table) and subtracting it from the measured Variance. The result is then divided by a normalizer calibration from another 17 x 17 table (see Supporting Table P219A Normalizer Bank1 Table). This quotient is then multiplied by a quality factor calibration from a 17 x 17 table (see Supporting Table P219A Quality Factor Bank1 Table). This result is referred to as the Ratio. Note that the quality factor ranges between 0 and 1 and represents robustness to false diagnosis in the current operating region. Regions with low quality factors are not used.</p>	0.39	<p>If the diagnostic has reported a failure on the prior trip, the Filtered Ratio must fall below 0.14 in order to report a pass. This feature prevents the diagnostic from toggling between failing and passing when the Filtered Ratio remains near the initial failure threshold of 0.39 .</p>	<p>The A/F imbalance diagnostic is enabled</p> <p>System Voltage</p> <p>Fuel Level</p> <p>Engine Coolant Temperature</p> <p>Cumulative engine run time</p> <p>Diagnostic enabled at Idle (regardless of other operating conditions)</p> <p>Engine speed range</p> <p>Engine speed delta during a short term sample period</p> <p>Mass Airflow (MAF) range</p> <p>Cumulative delta MAF during a short term sample period</p> <p>Filtered MAF delta between samples Note: first order lag filter coefficient applied to MAF = 0.050</p>	<p>no lower than 11.0 Volts for more than 0.2 seconds</p> <p>> 10.0 % The diagnostic will disregard the fuel level criteria if the fuel sender is faulty.</p> <p>> -20 deg. C (or OBD Coolant Enable Criteria = TRUE)</p> <p>> 0.0 seconds</p> <p>No</p> <p>1,200 to 3,750 RPM</p> <p>< 150 RPM</p> <p>0 to 200 g/s</p> <p>< 3 g/s</p> <p>< 0.40 g/s</p>	<p>Minimum of 1 test per trip, up to 6 tests per trip during RSR or FIR.</p> <p>The front O2 sensor voltage is sampled once per cylinder event. Therefore, the time required to complete a single test (when all enable conditions are met) decreases as engine speed increases. For example, 4.50 seconds of data is required at 1000 rpm while double this time is required at 500 rpm and half this time is required at 2000 rpm. This data is collected only when enable conditions are met, and as such significantly more operating time is required than is indicated above. Generally, a report will be</p>	Type A, 1 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
		<p>P219A Variance Threshold Bank1 Table) and subtracting it from the measured Variance. The result is then divided by a normalizer calibration from another 17 x 17 table (see Supporting Table P219A Normalizer Bank1 Table). This quotient is then multiplied by a quality factor calibration from a 17 x 17 table (see Supporting Table P219A Quality Factor Bank1 Table). This result is referred to as the Ratio. Note that the quality factor ranges between 0 and 1 and represents robustness to false diagnosis in the current operating region. Regions with low quality factors are not used.</p> <p>Finally, a EWMA filter is applied to the Ratio metric to generate the Filtered Ratio malfunction criteria metric. Generally, a normal system will result in a negative Filtered Ratio while a failing system will result in a positive Filtered</p>			<p>Air Per Cylinder (APC)</p> <p>APC delta during short term sample period</p> <p>Filtered APC delta between samples Note: first order lag filter coefficient applied to APC = 0.100</p> <p>Spark Advance</p> <p>Throttle Area (percent of max)</p> <p>Intake Cam Phaser Angle</p> <p>Exhaust Cam Phaser Angle</p> <p>Quality Factor (QF) QF calibrations are located in a 17x17 lookup table versus engine speed and load (see Supporting Table P219A Quality Factor Bank1 Table). QF values less than "1" indicate that we don't have 4sigma/2sigma robustness in that region. The quality of the data is determined via statistical analysis of Variance data.</p> <p>Fuel Control Status Closed Loop and Long Term FT Enabled for:</p>	<p>100 to 600 mg/cylinder</p> <p>< 60 mg/cylinder</p> <p>< 3.00 percent</p> <p>5 to 55 degrees</p> <p>4 to 200 percent</p> <p>0 to 35 degrees</p> <p>0 to 35 degrees</p> <p>>= 0.99</p> <p>>= 1.2 seconds (Please see "Closed Loop Enable")</p>	<p>made within 5 minutes of operation.</p> <p>For RSR or FIR, 12 tests must complete before the diagnostic can report.</p>	

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
		<p>Ratio.</p> <p>The range of the Filtered Ratio metric is application specific since both the emissions sensitivity and relationship between imbalance and the Variance metric are application specific.</p> <p>Some applications may need to command a unique cam phaser value before performing the above calculations since cam phasing has been shown to have an impact on overall signal quality. This application Does Not Use this feature.</p>			<p>Device Control</p> <p>AIR pump</p> <p>CASE learn</p> <p>EGR</p> <p>EVAP</p> <p>Engine Over Speed Protection</p> <p>Idle speed control</p> <p>PTO</p> <p>Injector base pulse width</p> <p>O2 learned htr resistance</p> <p>Rapid Step Response (RSR):</p> <p>RSR will trigger if the Ratio result from the last test is</p> <p>AND it exceeds the last Filtered ratio by</p> <p>Once triggered, the filtered ratio is reset to:</p> <p>Fast Initial Response (FIR):</p> <p>FIR will trigger when an NVM reset or code clear occurs.</p> <p>Once triggered, the filtered ratio is reset to:</p> <p>No Fault Active for:</p>	<p>Clarification" and "Long Term FT Enable Criteria" in Supporting Tables)</p> <p>Not active</p> <p>Not on</p> <p>Not active</p> <p>Not intrusive</p> <p>Not intrusive</p> <p>Not Active</p> <p>Normal</p> <p>Not Active</p> <p>Above min pulse limit</p> <p>= Valid (the O2 heater resistance has learned since NVM reset)</p> <p>>= 0.25</p> <p>>= 0.31</p> <p>0.00</p> <p>0.00</p>		

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
						EngineMisfireDetected_FA MAP_SensorFA MAF_SensorFA ECT_Sensor_FA TPS_ThrottleAuthorityDef aulted FuelInjectorCircuit_FA AIR System FA EvapExcessPurgePsbl_F A CamSensorAnyLocationF A FuelTrimSystemB1_FA O2S_Bank_1_Sensor_1_ FA O2S_Bank_1_Sensor_2_ FA WRAF_Bank_1_FA		

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Barometric Pressure (BARO) Sensor Performance (naturally aspirated)	P2227	<p>Detects a performance failure in the Barometric Pressure (BARO) sensor, such as when a BARO value is stuck in range.</p> <p>If the engine has been off for a sufficient amount of time, the pressure values in the induction system will have equalized. The BARO sensor value is checked to see if it is within the normal expected atmospheric pressure range. If it is not, then the BARO performance diagnostic will fail.</p> <p>When the engine is running, there is an estimate of barometric pressure that is determined with the Manifold Pressure (MAP) sensor, throttle position, engine air flow and engine speed. If the BARO value from the sensor is not similar to this barometric pressure estimate, then the BARO performance diagnostic will fail.</p>	<u>Engine Running:</u> Difference between Baro Pressure reading and Estimated Baro when distance since last Estimated Baro update OR Difference between Baro Pressure reading and Estimated Baro when distance since last Estimated Baro update	> 15.0 kPa <= 1.24 miles > 20.0 kPa > 1.24 miles	No Active DTCs:	AmbPresSnsrCktFA IAT_SensorFA MAF_SensorFA AfterThrottlePressureFA TPS_FA TPS_Performance_FA VehicleSpeedSensor_FA	320 failures out of 400 samples 1 sample every 12.5 msec	Type B, 2 Trips
			<u>Engine Not Rotating:</u> Barometric Pressure OR Barometric Pressure	< 50.0 kPa > 115.0 kPa	Time between current ignition cycle and the last time the engine was running Engine is not rotating No Active DTCs: No Pending DTCs:	> 5.0 seconds EngineModeNotRunTimer Error MAP_SensorCircuitFA AAP_SnsrCktFA MAP_SensorCircuitFP AAP_SnsrCktFP	4 failures out of 5 samples 1 sample every 12.5 msec	

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Barometric Pressure (BARO) Sensor Circuit Low (non-boosted applications, Gen III)	P2228	Detects a continuous short to ground in the Barometric Pressure (BARO) signal circuit by monitoring the BARO sensor output voltage and failing the diagnostic when the BARO voltage is too low. The BARO sensor is a pressure transducer which outputs a voltage proportional to the absolute pressure.	BARO Voltage	< 40.0 % of 5 Volt Range (This is equal to 50.9 kPa)			320 failures out of 400 samples 1 sample every 12.5 msec	Type B, 2 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Barometric Pressure (BARO) Sensor Circuit High (non- boosted applications, Gen III)	P2229	Detects a continuous short to power or open circuit in the Barometric Pressure (BARO) signal circuit by monitoring the BARO sensor output voltage and failing the diagnostic when the BARO voltage is too high. The BARO sensor is a pressure transducer which outputs a voltage proportional to the absolute pressure.	BARO Voltage	> 90.0 % of 5 Volt Range (This is equal to 115.0 kPa)			320 failures out of 400 samples 1 sample every 12.5 msec	Type B, 2 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Barometric Pressure (BARO) Sensor Circuit Intermittent	P2230	<p>Detects a noisy or erratic signal in the barometric pressure (BARO) circuit by monitoring the BARO sensor and failing the diagnostic when the BARO signal has a noisier output than is expected.</p> <p>When the value of BARO in kilopascals (kPa) is determined, a delta is calculated between the current reading and the previous reading. The absolute value of these deltas is summed over a number of BARO readings. The result of this summation is called a "string length".</p> <p>Since the BARO signal is anticipated to be relatively smooth, a string length of a particular magnitude indicates a noisy or erratic BARO signal. The diagnostic will fail if the string length is too high.</p>	<p>String Length</p> <p>Where: "String Length" = sum of "Diff" calculated over</p> <p>And where: "Diff" = ABS(current BARO reading - BARO reading from 12.5 milliseconds previous)</p>	<p>> 150 kPa</p> <p>80 consecutive BARO readings</p>			<p>4 failures out of 5 samples</p> <p>Each sample takes 1.0 seconds</p>	Type B, 2 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
O2 Sensor Signal Stuck Lean Bank 1 Sensor 2	P2270	<p>The P2270 diagnostic is the first in a sequence of six intrusive secondary O2 monitors which include DTCs P2270, P013E, P013A, P2271, P013F, & P013B. This DTC determines if the secondary O2 sensor is stuck in a normal lean voltage range and thereby can no longer be used for secondary O2 sensor fuel control or for catalyst monitoring. This diagnostic increases the delivered fuel while monitoring the sensor signal and the accumulated mass air flow.</p> <p>This fault is set if the secondary O2 sensor does not achieve the required rich voltage before the accumulated mass air flow threshold is reached.</p>	<p>Post O2 sensor signal</p> <p>AND</p> <p>The Accumulated mass air flow monitored during the Stuck Lean Voltage Test</p>	<p>< 825 mvolts</p> <p>> 56 grams</p>	<p>No Active DTC's</p> <p>B1S2 DTC's Not active this key cycle</p> <p>System Voltage Learned heater resistance</p> <p>Green O2S Condition</p>	<p>TPS_ThrottleAuthorityDefaulted ECT_Sensor_FA IAT_SensorFA MAF_SensorFA MAP_SensorFA AIR_System_FA FuelInjectorCircuit_FA FuelTrimSystemB1_FA FuelTrimSystemB2_FA EngineMisfireDetected_FA Ethanol Composition Sensor FA O2S_Bank_1_TFTKO O2S_Bank_2_TFTKO</p> <p>P013A, P013B, P013E, P013F, P2270 or P2271</p> <p>> 10.0 Volts = Valid (the heater resistance has learned since NVM reset, see enable conditions for "HO2S Heater Resistance DTC's")</p> <p>= Not Valid, Green O2S condition is considered valid until the accumulated air flow is greater than Multiple DTC Use_Green Sensor Delay Criteria - Limit for the following locations: B1S2, B2S2 (if applicable) in Supporting Tables tab. Airflow accumulation is only enabled when airflow</p>	<p>Frequency: Once per trip Note: if NaPOPD_b_ResetFastRespFunc = FALSE for the given Fuel Bank OR NaPOPD_b_RapidResponseActive = TRUE, multiple tests per trip are allowed.</p>	Type B, 2 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
					<p>Low Fuel Condition Only when FuelLevelDataFault</p> <p>Pedal position</p> <p>Engine Airflow</p> <p>Closed loop integral Closed Loop Active</p> <p>Decel Fuel Cut Off</p> <p>Evap</p> <p>Ethanol Estimation in Progress</p> <p>Post fuel cell</p> <p>Crankshaft Torque</p> <p>EGR Intrusive diagnostic All post sensor heater delays O2S Heater (post sensor) on Time</p> <p>Transmission Temp</p>	<p>is above 22.0 grams/sec.</p> <p>= False</p> <p>= False</p> <p>≤ 4.0 %</p> <p>2.5 ≤ gps ≤ 11.0</p> <p>0.85 ≤ C/L Int ≤ 1.07 = TRUE (Please see “Closed Loop Enable Clarification” in Supporting Tables).</p> <p>not inhibited</p> <p>not in control of purge</p> <p>= Not Active (Please see “Ethanol Estimation in Progress” in Supporting Tables).</p> <p>= Enabled, refer to Multiple DTC Use - Block learn cells to enable Post oxygen sensor tests for additional info.</p> <p>< 100.0 Nm</p> <p>= not active</p> <p>= not active</p> <p>≥ 60.0 sec</p> <p>≥ -40.0 °C</p>		

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
					<p>re ce a ays emp Fuel State</p> <p>=====</p> <p>All of the above met for a least 0.0 seconds, and then check the following</p> <p>Engine Speed to initially enable tes ng ne pee range to keep test enabled a ter initially enabled)</p> <p>Vehicle Speed to initially enable test e ce pee range to keep test enabled after n t a y ena e</p> <p>=====</p> <p>All of the above met for a east . secon s, an then the Force Cat Rich intrusive stage is requeste .</p> <p>=====</p> <p>During tuck Lean tes t e o ow ng must stay TRUE or the test will abort: Commanded Fuel Crankshaft Torque</p>	<p>$\leq \leq$ = DFCO possible</p> <p>=====</p> <p>$1,250 \leq \text{RPM} \leq 2,000$</p> <p>$1,100 \leq \text{RPM} \leq 2,750$</p> <p>$34.2 \leq \text{MPH} \leq 74.6$</p> <p>$.7 \leq \leq .$</p> <p>$0.96 \leq \text{EQR} \leq 1.01$ < 110.0 Nm</p>		

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
O2 Sensor Signal Stuck Rich Bank 1 Sensor 2	P2271	<p>The P2271 diagnostic is the fourth in a sequence of six intrusive secondary O2 monitors which include DTCs P2270, P013E, P013A, P2271, P013F, & P013B. This DTC determines if the secondary O2 sensor is stuck in a normal rich voltage range and thereby can no longer be used for secondary O2 sensor fuel control or for catalyst monitoring. This diagnostic commands fuel cut off while monitoring the sensor signal and the accumulated mass air flow.</p> <p>This fault is set if the secondary O2 sensor does not achieve the required lean voltage before the accumulated mass air flow threshold is reached.</p>	<p>Post O2 sensor signal</p> <p>AND</p> <p>The Accumulated mass air flow monitored during the Stuck Rich Voltage Test</p>	<p>> 100 mvolts</p> <p>> 25.0 grams</p>	<p>No Active DTC's</p> <p>B1S2 DTC's Not Active this key cycle</p> <p>System Voltage Learned heater resistance</p> <p>Green O2S Condition</p>	<p>TPS_ThrottleAuthorityDefaulted ECT_Sensor_FA IAT_SensorFA MAF_SensorFA MAP_SensorFA AIR_System_FA FuelInjectorCircuit_FA FuelTrimSystemB1_FA FuelTrimSystemB2_FA EngineMisfireDetected_FA Ethanol Composition Sensor FA O2S_Bank_1_TFTKO O2S_Bank_2_TFTKO</p> <p>P013A, P013B, P013E, P013F or P2270</p> <p>> 10.0 Volts = Valid (the heater resistance has learned since NVM reset, see enable conditions for "HO2S Heater Resistance DTC's")</p> <p>= Not Valid, Green O2S condition is considered valid until the accumulated air flow is greater than Multiple DTC Use_Green Sensor Delay Criteria - Limit for the following locations: B1S2, B2S2 (if applicable) in Supporting Tables tab. Airflow accumulation is only enabled when airflow</p>	<p>Frequency: Once per trip Note: if NaPOPD_b_ResetFastRespFunc = FALSE for the given Fuel Bank OR NaPOPD_b_RapidResponseActive = TRUE, multiple tests per trip are allowed.</p>	Type B, 2 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
					Low Fuel Condition Only when FuelLevelDataFault Fuel State DTC's Passed =====	is above 22.0 grams/sec. = False = False = DFCO possible = P2270 = P013E = P013A =====		
					After above conditions are met: DFCO mode is continued (w/o driver initiated pedal input).			

210BDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
SIDI High Pressure Pump Performance	P228C	This DTC determines if the high pressure pump is not able to maintain target pressure. The fault is set if the measured fuel rail pressure is lower than desired fuel pressure by a value that can impact emission and drivability for a number of pump events.	Fuel Pressure Error (Desired Pressure - Measure Pressure)	>= P228C P2C1F - High Pressure Pump Control (HPC) fail threshold of pressure too low Mpa (see supporting tables)	High Pressure Pump Performance Diagnostic Enable Battery Voltage Low Side Fuel Pressure Additional Enable Conditions: All must be true (High Pressure Pump is enabled and High Fuel pressure sensor ckt is Not (FA,FP or TFTKO) and High Pressure fuel pump ckt is Not (FA,FP or TFTKO) and Cam or Crank Sensor Not FA and IAT,IAT2,ECT Not FA and Low side Fuel Pump Relay ckt Not FA and Estimate fuel rail pressure is valid and Green Engine (In assembly plant) is not enabled and Not if low fuel condition and Low side Fuel Pump is on and Injector Flow Test is not active and Device control commanded pressure is false and Device control pump ckt enabled on is false and	True >= 11 Volts > 0,250 MPa Enabled when a code clear is not active or not exiting device control Engine is not cranking	Positive Pressure Error - 10.00 second failures out of 12.50 second samples	Type A, 1 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
					Engine movement detected is true and Manufacturers enable counter is 0) Flex Fuel Sensor Not FA Ignition voltage out of correlation error(P1682) not active Barometric Pressure Inlet Air Temp Fuel Temp	>= 70.0 KPA >= -20.0 degC -12 <=Temp degC <= 126		

210BDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
SIDI High Pressure Pump Performance	P228D	This DTC determines if the high pressure pump is delivering high pressure that desired pressure. The fault is set if the measured fuel rail pressure is higher than desired fuel pressure by a value that can impact emission and drivability for a number of pump events.	Fuel Pressure Error (Desired Pressure - Measure Pressure)	<= P228D P2C20 - High Pressure Pump Control (HPC) fail threshold for pressure too high Mpa (see supporting tables)	High Pressure Pump Performance Diagnostic Enable Battery Voltage Low Side Fuel Pressure Additional Enable Conditions: All must be true (High Pressure Pump is enabled and High Fuel pressure sensor ckt is Not (FA,FP or TFTKO) and High Pressure fuel pump ckt is Not (FA,FP or TFTKO) and Cam or Crank Sensor Not FA and IAT,IAT2,ECT Not FA and Low side Fuel Pump Relay ckt Not FA and Estimate fuel rail pressure is valid and Green Engine (In assembly plant) is not enabled and Not if low fuel condition and Low side Fuel Pump is on and Injector Flow Test is not active and Device control commanded pressure is false and Device control pump ckt enabled on is false and Engine movement	True ≥ 11 Volts > 0.250 MPa Enabled when a code clear is not active or not exiting device control Engine is not cranking	Negative Pressure Error - 10.00 second failures out of 12.50 second samples	Type A, 1 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
					detected is true andManufacturers enable counter is 0) Flex Fuel Sensor Not FA Ignition voltage out of correlation error(P1682) not active Barometric Pressure Inlet Air Temp Fuel Temp	>= 70.0 KPA >= -20.0 DegC -12 <= Temp degC <= 126		

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
IGNITION CONTROL #1 CIRCUIT LOW	P2300	Diagnoses Cylinder #1 Ignition Control (EST) output driver circuit for a Short to Ground fault. Controller specific output driver circuit diagnoses the low sided driver for a short to ground failure when the output is powered off by comparing a voltage measurement to controller specific voltage thresholds.	<p>Voltage measurement outside of controller specific acceptable range during driver on state indicates short to ground failure.</p> <p>Controller specific output driver circuit voltage thresholds are set to meet the following controller specification for a short to ground.</p>	$\leq 100 \Omega$ impedance between signal and controller ground	<p>Engine running</p> <p>Ignition Voltage</p>	> 11.0	<p>50 Failures out of 63 Samples</p> <p>100 msec rate</p>	Type A, 1 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
IGNITION CONTROL #1 CIRCUIT High	P2301	Diagnoses Cylinder #1 Ignition Control (EST) output driver circuit for a Short to Power fault. Controller specific output driver circuit diagnoses the low sided driver for a short to power failure when the output is powered on by comparing a voltage measurement to controller specific voltage thresholds.	<p>Voltage measurement outside of controller specific acceptable range during driver on state indicates short to power failure.</p> <p>Controller specific output driver circuit voltage thresholds are set to meet the following controller specification for a short to power.</p>	$\leq 100 \Omega$ impedance between signal and controller power	<p>Engine running</p> <p>Ignition Voltage</p>	> 11.0 Volts	<p>50 Failures out of 63 Samples</p> <p>100 msec rate</p>	Type A, 1 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
IGNITION CONTROL #2 CIRCUIT Low	P2303	Diagnoses Cylinder #2 Ignition Control (EST) output driver circuit for a Short to Ground fault. Controller specific output driver circuit diagnoses the low sided driver for a short to ground failure when the output is powered off by comparing a voltage measurement to controller specific voltage thresholds.	<p>Voltage measurement outside of controller specific acceptable range during driver on state indicates short to ground failure.</p> <p>Controller specific output driver circuit voltage thresholds are set to meet the following controller specification for a short to ground.</p>	$\leq 100\ \Omega$ impedance between signal and controller ground	<p>Engine running</p> <p>Ignition Voltage</p>	> 11.0 Volts	<p>50 Failures out of 63 Samples</p> <p>100 msec rate</p>	Type A, 1 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
IGNITION CONTROL #2 CIRCUIT High	P2304	Diagnoses Cylinder #2 Ignition Control (EST) output driver circuit for a Short to Power fault	<p>Voltage measurement outside of controller specific acceptable range during driver on state indicates short to power failure.</p> <p>Controller specific output driver circuit voltage thresholds are set to meet the following controller specification for a short to power.</p>	$\leq 100 \Omega$ impedance between signal and controller power	<p>Engine running</p> <p>Ignition Voltage</p>	> 11.0 Volts	<p>50 Failures out of 63 Samples</p> <p>100 msec rate</p>	Type A, 1 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
IGNITION CONTROL #3 CIRCUIT Low	P2306	Diagnoses Cylinder #3 Ignition Control (EST) output driver circuit for a Short to Ground fault. Controller specific output driver circuit diagnoses the low sided driver for a short to ground failure when the output is powered off by comparing a voltage measurement to controller specific voltage thresholds.	<p>Voltage measurement outside of controller specific acceptable range during driver on state indicates short to ground failure.</p> <p>Controller specific output driver circuit voltage thresholds are set to meet the following controller specification for a short to ground.</p>	$\leq 100 \Omega$ impedance between signal and controller ground	<p>Engine running</p> <p>Ignition Voltage</p>	> 11.0 Volts	<p>50 Failures out of 63 Samples</p> <p>100 msec rate</p>	Type A, 1 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
IGNITION CONTROL #3 CIRCUIT High	P2307	Diagnoses Cylinder #3 Ignition Control (EST) output driver circuit for a Short to Power fault	<p>Voltage measurement outside of controller specific acceptable range during driver on state indicates short to power failure.</p> <p>Controller specific output driver circuit voltage thresholds are set to meet the following controller specification for a short to power.</p>	$\leq 100 \Omega$ impedance between signal and controller power	<p>Engine running</p> <p>Ignition Voltage</p>	> 11.0 Volts	<p>50 Failures out of 63 Samples</p> <p>100 msec rate</p>	Type A, 1 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
IGNITION CONTROL #4 CIRCUIT Low	P2309	Diagnoses Cylinder #4 Ignition Control (EST) output driver circuit for a Short to Ground fault. Controller specific output driver circuit diagnoses the low sided driver for a short to ground failure when the output is powered off by comparing a voltage measurement to controller specific voltage thresholds.	<p>Voltage measurement outside of controller specific acceptable range during driver on state indicates short to ground failure.</p> <p>Controller specific output driver circuit voltage thresholds are set to meet the following controller specification for a short to ground.</p>	$\leq 100\ \Omega$ impedance between signal and controller ground	<p>Engine running</p> <p>Ignition Voltage</p>	> 11.0 Volts	<p>50 Failures out of 63 Samples</p> <p>100 msec rate</p>	Type A, 1 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
IGNITION CONTROL #4 CIRCUIT High	P2310	Diagnoses Cylinder #4 Ignition Control (EST) output driver circuit for a Short to Power fault	<p>Voltage measurement outside of controller specific acceptable range during driver on state indicates short to power failure.</p> <p>Controller specific output driver circuit voltage thresholds are set to meet the following controller specification for a short to power.</p>	$\leq 100 \Omega$ impedance between signal and controller power	<p>Engine running</p> <p>Ignition Voltage</p>	> 11.0 Volts	<p>50 Failures out of 63 Samples</p> <p>100 msec rate</p>	Type A, 1 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Transmission Control Torque Request Circuit	P2544	Determines if the torque request from the TCM is valid	Protect error - Serial Communication message 2's complement not equal (\$189/\$199) OR Rolling count error - Serial Communication message (\$189/\$199) rolling count index value OR Range Error - Serial Communication message - (\$189/\$199) TCM Requested Torque Increase OR Multi-transition error - Trans torque intervention type request change	Message <> two's complement of message Message <> previous message rolling count value + one > 350 Nm Requested torque intervention type toggles from not increasing request to increasing request	Diagnostic Status Power Mode Ignition Voltage Engine Running Run/Crank Active No Serial communication loss to TCM (U0101)	Enabled = Run > 6.41 volts = True > 0.50 Sec No loss of communication	>= 10 failures out of 20 samples. Performed on every received message >= 6 Rolling count errors out of 10 samples. Performed on every received message >= 6 range errors out of 10 samples. Performed on every received message >= 3 multi-transitions out of 5 samples. Performed every 200 msec	Type B, 2 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Control Module Power Off Timer Performance	P262B	<p>This DTC determines if the hardware timer does not initialize or count properly. There are two tests to ensure proper functioning of the timer: Count Up Test (CUT) and Range Test (RaTe).</p> <p>Count Up Test (CUT): Verifies that the HWIO timer is counting up with the proper increment.</p> <p>Range Test (RaTe): When the run/crank is not active both the hardware and mirror timers are started. The timers are compared when module shutdown is initiated or run/crank becomes active.</p>	<p>Count Up Test:</p> <p>Time difference between the current read and the previous read of the timer</p> <p>Range Test:</p> <p>The variation of the HWIO timer and mirror timer is</p>	<p>> 1.50 seconds</p> <p>> 0.25 %.</p>			<p>Count Up Test: 4 failures out of 20 samples</p> <p>1 sec / sample</p> <p>Continuous while run/crank is not active and until controller shutdown is initiated.</p> <p>Range Test: Once per trip when controller shutdown is initiated or run/crank becomes active.</p>	Type B, 2 Trips

210BDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Fuel Pump "A" Low Flow / Performance	P2635	This DTC detects degradation in the performance of the electronically regulated fuel system	Filtered fuel rail pressure error	<= Low Threshold [Supporting Table] P2635 Threshold Low OR >= High Threshold [Supporting Table] P2635 Threshold High	a] Fuel Pres Sensor Circuit Low Fault Active (DTC P018C) b] Fuel Pres Sensor Circuit High Fault Active (DTC P018D) c] Fuel Pres Sensor Perf Fault Active (DTC P018B) d] Fuel Pump Circuit Low Fault Active (DTC P0231) e] Fuel Pump Circuit High Fault Active (DTC P0232) f] Fuel Pump Circuit Open Fault Active (DTC P023F) g] Reference Voltage Fault Status (DTC P0641) h] Fuel Pump Driver Control Module Overtemperature Fault Active (DTC P1255) j] Barometric Pressure Signal Valid (PPEI \$4C1) k] Engine run time l] Emissions Fuel Level Low (PPEI \$3FB) m] Fuel Pump Control Enabled	a] <> TRUE b] <> TRUE c] <> TRUE d] <> TRUE e] <> TRUE f] <> TRUE g] <> Active This Key h] <> TRUE j] == TRUE (for absolute fuel pressure sensor) k] >= 30 sec l] <> TRUE m] == TRUE	1 sample / 12.5 millisec	Type B, 2 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
					n] Fuel Pump Control state p] System Voltage q] Fuel flow rate r] Fuel Pressure Control System	n] == Normal p] 11V< System V <32V q1] > 0.047 gram/sec AND q2] <= Max allowed fuel flow rate [SUPPORTING TABLE] P2635 Max Fuel Flow r1] Not responding to overperformance due to pressure buildup during Deceleration Fuel Cut Off OR r2] Not responding to a decreasing desired fuel pres commnad		

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Malfunction Indicator Lamp (MIL) Control Circuit (ODM) Low	P263A	Detects an inoperative malfunction indicator lamp control circuit. This diagnostic reports the DTC when a short to ground is detected.	Voltage low during driver off state (indicates short- to-ground)	Short to ground: $\leq 0.5 \Omega$ impedance between output and controller ground	Run/Crank Voltage Remote Vehicle Start is not active	Voltage ≥ 11.00 volts	1 failures out of 1 samples 50 ms / sample	Type B, No MIL NO MIL Note: In certain controlle rs P0650 may also set (MIL Control Open Circuit)

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Malfunction Indicator Lamp (MIL) Control Circuit (ODM) High	P263B	Detects an inoperative malfunction indicator lamp control circuit. This diagnostic reports the DTC when a short to power is detected.	Voltage high during driver on state (indicates short to power)	Short to power: $\leq 0.5 \Omega$ impedance between output and controller power	Run/Crank Voltage Remote Vehicle Start is not active	Voltage ≥ 11.00 volts	4 failures out of 5 samples 50 ms / sample	Type B, No MIL NO MIL

210BDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Transfer Case Control Module Transfer Case Command State Rationality - 4WD high command not 4WD high ratio	P279A	Monitor measured transfer case gear ratio is 4WD low ratio or neutral while the transfer case control module command state is 4WD high. The 4WD measured transfer case ratio is calculated as transmission output shaft speed divided by the transfer case output shaft speed, both speed are measured values based on speed sensors.	transfer case control module transfer case command state AND measured transfer case ratio is in 4WD low ratio window OR measured transfer case ratio is in neutral window AND measured transfer case ratio is in 4WD low ratio window (measured transfer case ratio = transmission output speed / transfer case output speed) update rate 12.5 milliseconds	= 4WD high 4WD low ratio window ≤ 3.00 ≥ 2.40 neutral ratio window ≥ 1.30 ≤ 0.70 OR ≥ 3.00 ≤ 2.40 4WD low ratio window ≤ 2.90 ≥ 2.50	transmission gear is forward gear: transmission output shaft speed engine torque engine speed accelerator pedal position brake pedal position transmission gear is reverse gear: transmission output shaft speed engine torque engine speed accelerator pedal position brake pedal position vehicle speed diagnostic monitor enable PTO active engine power limited DTCs not fault active	≥ 500.0 RPM ≥ 80.0 Nm ≥ 300.0 RPM ≥ 5.0 % ≤ 100.0 % ≥ 500.0 RPM ≥ 80.0 Nm ≥ 300.0 PRM ≥ 5.0 % ≤ 100.0 % >= 3.00 = 1 Boolean = FALSE = FALSE CrankSensor_FA VehicleSpeedSensor_FA EngineTorqueEstInaccuracy P057B, P057C, P057D, P057E P17D4, P279B, P279C P0502, P0503, P0722, P0723, P2160, P2161	fail time ≥ 7.00 seconds out of sample time ≥ 10.00 seconds update rate 12.5 milliseconds	Type B, 2 Trips

210BDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Transfer Case Control Module Transfer Case Command State Rationality - 4WD low command not 4WD low ratio	P279B	Monitor measures transfer case gear ratio is 4WD high ratio or neutral while the transfer case control module command state is 4WD low. The 4WD measured transfer case ratio is calculated as transmission output shaft speed divided by the transfer case output shaft speed, both speed are measured values based on speed sensors.	transfer case control module transfer case command state AND measured transfer case ratio is in 4WD high ratio window OR measured transfer case ratio is in neutral window measured transfer case ratio is in 4WD high ratio window (measured transfer case ratio = transmission output speed / transfer case output speed) update rate 12.5 milliseconds	= 4WD low 4WD high ratio window ≤ 1.30 ≥ 0.70 neutral ratio window ≥ 1.30 ≤ 0.70 OR ≥ 3.00 ≤ 2.40 4WD high ratio window ≤ 1.20 ≥ 0.80	transmission gear is forward gear: transmission output shaft speed engine torque engine speed accelerator pedal position brake pedal position transmission gear is reverse gear: transmission output shaft speed engine torque engine speed accelerator pedal position brake pedal position vehicle speed diagnostic monitor enable PTO active engine power limited DTCs not fault active	≥ 500.0 RPM ≥ 80.0 Nm ≥ 300.0 RPM ≥ 5.0 % ≤ 100.0 % ≥ 500.0 RPM ≥ 80.0 Nm ≥ 300.0 PRM ≥ 5.0 % ≤ 100.0 % ≥ 3.00 = 1 Boolean = FALSE = FALSE CrankSensor_FA VehicleSpeedSensor_FA EngineTorqueEstInaccuracy P057B, P057C, P057D, P057E P17D4, P279A, P279C P0502, P0503, P0722, P0723, P2160, P2161	fail time ≥ 7.00 seconds out of sample time ≥ 10.00 seconds update rate 12.5 milliseconds	Type B, 2 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Transfer Case Control Module Transfer Case Command State Rationality - 4WD neutral command not 4WD neutral ratio	P279C	Monitor measured transfer case gear ratio is 4WD high ratio or 4WD low ratio while the transfer case control module command state is 4WD neutral. The 4WD measured transfer case ratio is calculated as transmission output shaft speed divided by the transfer case output shaft speed, both speed are measured values based on speed sensors.	transfer case control module transfer case command state AND measured transfer case ratio is in 4WD low ratio window OR measured transfer case ratio is in 4WD high ratio window AND measured transfer case ratio is in 4WD low ratio window or in 4WD high ratio window (measured transfer case ratio = transmission output speed / transfer case output speed) update rate 12.5 milliseconds	= 4WD neutral 4WD low ratio window ≤ 3.00 ≥ 2.40 4WD high ratio window ≥ 1.30 ≤ 0.70 4WD neutral ratio window ≤ 2.90 ≥ 2.50 OR ≤ 1.20 ≥ 0.80	transmission gear is forward gear: transmission output shaft speed engine torque engine speed accelerator pedal position brake pedal position transmission gear is reverse gear: transmission output shaft speed engine torque engine speed accelerator pedal position brake pedal position vehicle speed diagnostic monitor enable PTO active engine power limited DTCs not fault active	≥ 500.0 RPM ≥ -20.0 Nm ≥ 0.0 RPM ≥ 5.0 % ≤ 100.0 % ≥ 500.0 RPM ≥ 80.0 Nm ≥ 300.0 PRM ≥ 5.0 % ≤ 100.0 % >= 3.00 = 1 Boolean = FALSE = FALSE CrankSensor_FA VehicleSpeedSensor_FA EngineTorqueEstInaccuracy P057B, P057C, P057D, P057E P17D4, P279A, P279B P0502, P0503, P0722, P0723, P2160, P2161	fail time ≥ 10.50 seconds out of sample time ≥ 15.00 seconds update rate 12.5 milliseconds	Type B, 2 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Internal Control Module SIDI High Pressure Pump min/ max authority During Catalyst Warm Up	P2C1E	This DTC determines when the high pressure pump control has reached to its max or min authority during Cataylst Warm up	High Pressure Fuel Pump Delivery Angle OR High Pressure Fuel Pump Delivery Angle	>= 100 ° ≤ 0 °	Catalyst Warm Up High Pressure Pump Performance Diagnostic Enable Battery Voltage Low Side Fuel Pressure Barometric Pressure Inlet Air Temp Fuel Temp Catalyst Warm up enabled (See Definition in Supporting Material below) Additional Enable Conditions: All must be true (High Pressure Pump is enabled and High Fuel pressure sensor ckt is Not (FA,FP or TFTKO) and High Pressure fuel pump ckt is Not (FA,FP or TFTKO) and Cam or	True ≥ 11 Volts > 0.250 MPa Enabled when a code clear is not active or not exiting device control Engine is not cranking ≥ 70.0 KPA ≥ -20.0 degC -12 ≤ Temp degC ≤ 126 = True	Windup High/ Low 10.00 seconds failures out of 12.50 Seconds samples	Type B, 2 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
					Crank Sensor Not F and IAT,IAT2,ECT Not FA and Low side Fuel Pump Relay ckt Not FA and Estimate fuel rail pressure is valid and Green Engine (In assembly plant) is not enabled and Not if low fuel condition and Low side Fuel Pump is on and Injector Flow Test is not active and Device control commanded pressure is false and Device control pump ckt enabled on is false and Engine movement detected is true andManufacturers enable counter is 0) Flex Fuel Sensor Not FA Ignition voltage out of correlation error(P1682) not active			

210BDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
SIDI High Pressure Pump Performance During Catalyst Warm Up	P2C1F	This DTC determines if the high pressure pump is not able to maintain target pressure Catalyst Warm Up. The fault is set if the measured fuel rail pressure is lower than desired fuel pressure by a value that can impact emission and drivability for a number of pump events.	Fuel Pressure Error (Desired Pressure - Measure Pressure)	>= P228C P2C1F - High Pressure Pump Control (HPC) fail threshold of pressure too low Mpa (see supporting tables)	Catalyst Warm Up High Pressure Pump Performance Diagnostic Enable Battery Voltage Low Side Fuel Pressure Catalyst Warm up enabled (See Definition in Supporting Material below) Additional Enable Conditions: All must be true (High Pressure Pump is enabled and High Fuel pressure sensor ckt is Not (FA,FP or TFTKO) and High Pressure fuel pump ckt is Not (FA,FP or TFTKO) and Cam or Crank Sensor Not FA and IAT,IAT2,ECT Not FA and Low side Fuel Pump Relay ckt Not FA and Estimate fuel rail pressure is valid and Green Engine (In assembly plant) is not enabled and Not if low fuel condition and Low side Fuel Pump is on and Injector Flow Test is not active and	True >= 11 Volts > 0.250 MPa = True Enabled when a code clear is not active or not exiting device control Engine is not cranking	Positive Pressure Error - 10.00 second failures out of 12.50 second samples	Type A, 1 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
					Device control commanded pressure is false and Device control pump ckt enabled on is false and Engine movement detected is true and Manufacturers enable counter is 0) Flex Fuel Sensor Not FA Ignition voltage out of correlation error(P1682) not active Barometric Pressure Inlet Air Temp Fuel Temp	>= 70.0 KPA >= -20.0 degC -12 <=Temp degC <= 126		

210BDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
SIDI High Pressure Pump Performance During Catalyst Warm Up	P2C20	This DTC determines if the high pressure pump is delivering high pressure that desired pressure Catalyst Warm Up. The fault is set if the measured fuel rail pressure is higher than desired fuel pressure by a value that can impact emission and drivability for a number of pump events.	Fuel Pressure Error (Desired Pressure - Measure Pressure)	<= P228D P2C20 - High Pressure Pump Control (HPC) fail threshold for pressure too high Mpa (see supporting tables)	Catalyst Warm Up High Pressure Pump Performance Diagnostic Enable Battery Voltage Low Side Fuel Pressure Catalyst Warm up enabled (See Definition in Supporting Material below) Additional Enable Conditions: All must be true (High Pressure Pump is enabled and High Fuel pressure sensor ckt is Not (FA,FP or TFTKO) and High Pressure fuel pump ckt is Not (FA,FP or TFTKO) and Cam or Crank Sensor Not FA and IAT,IAT2,ECT Not FA and Low side Fuel Pump Relay ckt Not FA and Estimate fuel rail pressure is valid and Green Engine (In assembly plant) is not enabled and Not if low fuel condition and Low side Fuel Pump is on and Injector Flow Test is not	True >= 11 Volts > 0.250 MPa = True Enabled when a code clear is not active or not exiting device control Engine is not cranking	Negative Pressure Error - 10.00 second failures out of 12.50 second samples	Type A, 1 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
					active and Device control commanded pressure is false and Device control pump ckt enabled on is false and Engine movement detected is true andManufacturers enable counter is 0) Flex Fuel Sensor Not FA Ignition voltage out of correlation error(P1682) not active Barometric Pressure Inlet Air Temp Fuel Temp	>= 70.0 KPA >= -20.0 DegC -12 <= Temp degC <= 126		

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Cooling Fan 1 Out of Range Low [LIN Bus Electric PWM Fans Only - Internal or External controller]	P30EE	The reported actual fan speed in RPM exceeds an lower limit for the fan speed, indicating that there is a failure of the measurement of the fan speed	Measured LIN Fan1 Speed	< = -110.00 rpm	a] Diagnostic Enabled b] Configuration calibration for number of fans c] Diagnostic System Disabled d] Battery Voltage In Range e] LIN Bus based Fan Operation Enabled f] LIN Serial data Lost communication Fault Active g] LIN Serial data Continuous Operation Fault Active	a] == 1.00 [True if 1; False if 0] b] >= 1 unit c] <> True d] > 11.00 volts e] == TRUE f] <> True g] <> True	16.00 failures out of 20.00 samples; 1000 ms / sample	Type B, 2 Trips

210BDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Cooling Fan 1 Out of Range High [LIN Bus Electric PWM Fans Only - Internal or External controller]	P30EF	The reported actual fan speed in RPM exceeds an upper limit for the fan speed, indicating that there is a failure of the measurement of the fan speed	Measured LIN Fan1 Speed	> = 4,000.00 rpm	a] Diagnostic Enabled b] Configuration calibration for number of fans c] Diagnostic System Disabled d] Battery Voltage In Range e] LIN Bus based Fan Operation Enabled f] LIN Bus Lost Communication Fault Active g] LIN Bus serial data Continuous Operation Fault Active	a] == 1.00 [True if 1; False if 0] b] >= 1 unit c] <> True d] > 11.00 volts e] == TRUE f] <> True g] <> True	16.00 failures out of 20.00 samples; 1000 ms / sample	Type B, 2 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Control Module Communicati on Bus A Off	U0073	This DTC monitors for a BUS A off condition	Bus off failures equals or exceeds before the sample time of is reached	5 counts (equivalent to 0.83 seconds) 0.83 seconds	General Enable Criteria: Starter motor engaged for Or Run/Crank ignition voltage All below criteria have been met for Normal CAN transmission on Bus Controller not in programming mode If bus type = Sensor Bus: Sensor bus relay is on Otherwise: If power mode = Run/ Crank: Power Mode If calibratable low voltage disable mode is not Never Disabled Low voltage disable mode: OBDII If OBDII: Run/Crank ignition voltage	> 15.00 milliseconds > 8.41 Volts >= 5.00 milliseconds Enabled = Run >= 11.00 Volts	Diagnostic runs in 12.5 ms loop	Type A, 1 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
					If EOBD: Run/Crank ignition voltage If Secure: Starter motor engaged for Or Run/Crank ignition voltage If Hybrid Secure: Run/Crank ignition voltage If power mode = Accessory Off key cycle diagnostics are enabled Or Controller is an OBD controller Controller shutdown impending Power Mode Battery voltage	>= 9.00 Volts > 15.00 milliseconds > 8.41 Volts >= 6.41 Volts Enabled OBD Controller = False = Not crank >= 11.00 Volts		

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Control Module Communicati on Bus B Off	U0074	This DTC monitors for a BUS B off condition	Bus off failures equals or exceeds before the sample time of is reached	5 counts (equivalent to 0.83 seconds) 0.83 seconds	General Enable Criteria: Starter motor engaged for Or Run/Crank ignition voltage All below criteria have been met for Normal CAN transmission on Bus Controller not in programming mode If bus type = Sensor Bus: Sensor bus relay is on Otherwise: If power mode = Run/ Crank: Power Mode If calibratable low voltage disable mode is not Never Disabled Low voltage disable mode: OBDII If OBDII: Run/Crank ignition voltage	> 15.00 milliseconds > 8.41 Volts >= 5.00 milliseconds Enabled = Run >= 11.00 Volts	Diagnostic runs in 12.5 ms loop	Type B, 2 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
					If EOBD: Run/Crank ignition voltage If Secure: Starter motor engaged for Or Run/Crank ignition voltage If Hybrid Secure: Run/Crank ignition voltage If power mode = Accessory Off key cycle diagnostics are enabled Or Controller is an OBD controller Controller shutdown impending Power Mode Battery voltage	>= 9.00 Volts > 15.00 milliseconds > 8.41 Volts >= 6.41 Volts Enabled OBD Controller = False = Not crank >= 11.00 Volts		

210BDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Lost Communicati on With TCM	U0101	This DTC monitors for a loss of communication with the Transmission Control Module.	<p>Message is not received from controller for</p> <p>Message \$0BD</p> <p>Message \$0C7</p> <p>Message \$0F9</p> <p>Message \$189</p> <p>Message \$199</p> <p>Message \$19D</p> <p>Message \$1AF</p> <p>Message \$1F5</p> <p>Message \$4C9</p>	<p>≥ 10.00 seconds</p> <p>≥ 0.50 seconds</p> <p>≥ 0.50 seconds</p> <p>≥ 0.50 seconds</p> <p>≥ 0.50seconds</p> <p>≥ 0.50seconds</p> <p>≥ 0.50 seconds</p> <p>≥ 0.50 seconds</p> <p>≥ 10.00 seconds</p>	<p>General Enable Criteria:</p> <p>If message is on Bus A: U0073</p> <p>If message is on Bus B: U0074</p> <p>If message is on Bus S: U0076</p> <p>Starter motor engaged for Or Run/Crank ignition voltage</p> <p>Bus is enabled for</p> <p>The following criteria have been enabled for</p> <p>Normal CAN transmission on Bus</p> <p>Transition from accessory mode to off is pending</p> <p>Controller not in programming mode</p> <p>If bus type = Sensor Bus:</p> <p>Battery voltage</p> <p>Sensor Bus Relay</p> <p>Otherwise:</p>	<p>Not Active</p> <p>Not Active</p> <p>Not Active</p> <p>> 15.00 milliseconds</p> <p>> 8.41 Volts</p> <p>>= 0.40 milliseconds</p> <p>>= 5.00 milliseconds</p> <p>Enabled</p> <p>= False</p> <p>> 11.00 Volts</p> <p>= On</p>	Diagnostic runs in 12.5 ms loop	Type A, 1 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
					If power mode = Run/ Crank: Power Mode If calibratable low voltage disable mode is not Never Disabled Low voltage disable mode: OBDII If OBDII: Run/Crank ignition voltage If EOBD: Run/Crank ignition voltage If Secure: Starter motor engaged for Or Run/Crank ignition voltage If Hybrid Secure: Run/Crank ignition voltage If power mode = Accessory Off key cycle diagnostics are enabled Or	= Run >= 11.00 Volts >= 9.00 Volts > 15.00 milliseconds > 8.41 Volts >= 6.41 Volts Enabled		

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
					Controller is an OBD controller Controller shutdown impending Power Mode Battery voltage	OBD Controller = False = Not crank >= 11.00 Volts		

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Lost Communicati on With Transfer Case Control Module	U0102	This DTC monitors for a loss of communication with the transfer case control module	<p>Message is not received from controller for</p> <p>Message \$1CB</p> <p>Message \$1CC</p>	<p>≥ 10.00 seconds</p> <p>≥ 0.50 seconds</p>	<p>General Enable Criteria:</p> <p>If message is on Bus A: U0073</p> <p>If message is on Bus B: U0074</p> <p>If message is on Bus S: U0076</p> <p>Starter motor engaged for Or Run/Crank ignition voltage</p> <p>Bus is enabled for</p> <p>The following criteria have been enabled for</p> <p>Normal CAN transmission on Bus</p> <p>Transition from accessory mode to off is pending</p> <p>Controller not in programming mode</p> <p>If bus type = Sensor Bus:</p> <p>Battery voltage</p> <p>Sensor Bus Relay</p> <p>Otherwise: If power mode = Run/ Crank:</p>	<p>Not Active</p> <p>Not Active</p> <p>Not Active</p> <p>> 15.00 milliseconds</p> <p>> 8.41 Volts</p> <p>>= 0.40 milliseconds</p> <p>>= 5.00 milliseconds</p> <p>Enabled</p> <p>= False</p> <p></p> <p>> 11.00 Volts</p> <p>= On</p>	Diagnostic runs in 12.5 ms loop	Type C, No SVS "Emissio ns Neutral Diagnost ics – Type C"

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
					Power Mode If calibratable low voltage disable mode is not Never Disabled Low voltage disable mode: OBDII If OBDII: Run/Crank ignition voltage If EOBD: Run/Crank ignition voltage If Secure: Starter motor engaged for Or Run/Crank ignition voltage If Hybrid Secure: Run/Crank ignition voltage If power mode = Accessory Off key cycle diagnostics are enabled Or Controller is an OBD controller Controller shutdown impending Power Mode	= Run >= 11.00 Volts >= 9.00 Volts > 15.00 milliseconds > 8.41 Volts >= 6.41 Volts Enabled OBD Controller = False = Not crank		

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
					Battery voltage	>= 11.00 Volts		

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Lost Communication With Anti- Lock Brake System (ABS) Control Module	U0121	This DTC monitors for a loss of communication with the Anti-Lock Brake System (ABS) Control Module (Non-OBD Module ID 243).	<p>Message is not received from controller for</p> <p>Message \$0C1</p> <p>Message \$0C5</p> <p>Message \$1C7</p> <p>Message \$1E9</p> <p>Message \$2F1</p> <p>Message \$2F9</p>	<p>≥ 0.50 seconds</p> <p>≥ 0.50seconds</p> <p>≥ 0.50seconds</p> <p>≥ 0.50 seconds</p> <p>≥ 10.00 seconds</p> <p>≥ 0.50 seconds</p>	<p>General Enable Criteria:</p> <p>If message is on Bus A: U0073</p> <p>If message is on Bus B: U0074</p> <p>If message is on Bus S: U0076</p> <p>Starter motor engaged for Or Run/Crank ignition voltage</p> <p>Bus is enabled for</p> <p>The following criteria have been enabled for</p> <p>Normal CAN transmission on Bus</p> <p>Transition from accessory mode to off is pending</p> <p>Controller not in programming mode</p> <p>If bus type = Sensor Bus:</p> <p>Battery voltage</p> <p>Sensor Bus Relay</p> <p>Otherwise: If power mode = Run/Crank:</p>	<p>Not Active</p> <p>Not Active</p> <p>Not Active</p> <p>> 15.00 milliseconds</p> <p>> 8.41 Volts</p> <p>>= 0.40 milliseconds</p> <p>>= 5.00 milliseconds</p> <p>Enabled</p> <p>= False</p> <p>> 11.00 Volts</p> <p>= On</p>	Diagnostic runs in 12.5 ms loop	Type C, No SVS "Emissions Neutral Diagnostics – Type C"

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
					Power Mode If calibratable low voltage disable mode is not Never Disabled Low voltage disable mode: OBDII If OBDII: Run/Crank ignition voltage If EOBD: Run/Crank ignition voltage If Secure: Starter motor engaged for Or Run/Crank ignition voltage If Hybrid Secure: Run/Crank ignition voltage If power mode = Accessory Off key cycle diagnostics are enabled Or Controller is an OBD controller Controller shutdown impending Power Mode	= Run >= 11.00 Volts >= 9.00 Volts > 15.00 milliseconds > 8.41 Volts >= 6.41 Volts Enabled OBD Controller = False = Not crank		

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
					Battery voltage	>= 11.00 Volts		

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Lost Communicati on With Power Steering Control Module	U0131	This DTC monitors for a loss of communication with the Power Steering Control Module	Message is not received from controller for Message \$1E5	 ≥ 10.00 seconds	General Enable Criteria: If message is on Bus A: U0073 If message is on Bus B: U0074 If message is on Bus S: U0076 Starter motor engaged for Or Run/Crank ignition voltage Bus is enabled for The following criteria have been enabled for Normal CAN transmission on Bus Transition from accessory mode to off is pending Controller not in programming mode If bus type = Sensor Bus: Battery voltage Sensor Bus Relay Otherwise: If power mode = Run/ Crank:	 Not Active Not Active Not Active > 15.00 milliseconds > 8.41 Volts ≥ 0.40 milliseconds ≥ 5.00 milliseconds Enabled = False > 11.00 Volts = On 	Diagnostic runs in 12.5 ms loop	Type C, No SVS "Safety Emissio ns Neutral Diagnost ic"

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
					Power Mode If calibratable low voltage disable mode is not Never Disabled Low voltage disable mode: OBDII If OBDII: Run/Crank ignition voltage If EOBD: Run/Crank ignition voltage If Secure: Starter motor engaged for Or Run/Crank ignition voltage If Hybrid Secure: Run/Crank ignition voltage If power mode = Accessory Off key cycle diagnostics are enabled Or Controller is an OBD controller Controller shutdown impending Power Mode	= Run >= 11.00 Volts >= 9.00 Volts > 15.00 milliseconds > 8.41 Volts >= 6.41 Volts Enabled OBD Controller = False = Not crank		

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
					Battery voltage	>= 11.00 Volts		

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Lost Communicati on With Body Control Module	U0140	This DTC monitors for a loss of communication with the Body Control Module.	<p>Message is not received from controller for</p> <p>Message \$0F1</p> <p>Message \$12A</p> <p>Message \$1E1</p> <p>Message \$1F1</p> <p>Message \$1F3</p> <p>Message \$3C9</p> <p>Message \$3CB</p> <p>Message \$3F1</p> <p>Message \$451</p> <p>Message \$4D7</p> <p>Message \$4E1</p> <p>Message \$4E9</p>	<p>≥ 0.50seconds</p> <p>≥ 1.00seconds</p> <p>≥ 0.50seconds</p> <p>≥ 0.50 seconds</p> <p>≥10.00 seconds</p> <p>≥10.00 seconds</p> <p>≥ 10.00 seconds</p> <p>≥ 10.00 seconds</p> <p>≥ 0.50 seconds</p> <p>≥ 10.00 seconds</p> <p>≥ 10.00 seconds</p> <p>≥ 10.00 seconds</p>	<p>General Enable Criteria:</p> <p>If message is on Bus A: U0073</p> <p>If message is on Bus B: U0074</p> <p>If message is on Bus S: U0076</p> <p>Starter motor engaged for Or Run/Crank ignition voltage</p> <p>Bus is enabled for</p> <p>The following criteria have been enabled for</p> <p>Normal CAN transmission on Bus</p> <p>Transition from accessory mode to off is pending</p> <p>Controller not in programming mode</p> <p>If bus type = Sensor Bus:</p> <p>Battery voltage</p> <p>Sensor Bus Relay</p> <p>Otherwise: If power mode = Run/ Crank:</p>	<p>Not Active</p> <p>Not Active</p> <p>Not Active</p> <p>> 15.00 milliseconds</p> <p>> 8.41 Volts</p> <p>>= 0.40 milliseconds</p> <p>>= 5.00 milliseconds</p> <p>Enabled</p> <p>= False</p> <p>> 11.00 Volts</p> <p>= On</p>	Diagnostic runs in 12.5 ms loop	Type C, No SVS "Emissio ns Neutral Diagnost ics – Type C"

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
					Power Mode If calibratable low voltage disable mode is not Never Disabled Low voltage disable mode: OBDII If OBDII: Run/Crank ignition voltage If EOBD: Run/Crank ignition voltage If Secure: Starter motor engaged for Or Run/Crank ignition voltage If Hybrid Secure: Run/Crank ignition voltage If power mode = Accessory Off key cycle diagnostics are enabled Or Controller is an OBD controller Controller shutdown impending Power Mode	= Run >= 11.00 Volts >= 9.00 Volts > 15.00 milliseconds > 8.41 Volts >= 6.41 Volts Enabled OBD Controller = False = Not crank		

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
					Battery voltage	>= 11.00 Volts		

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Lost Communicati on With Gateway A	U0146	This DTC monitors for a loss of communication with Gateway A.	Message is not received from controller for Message \$3CF	 ≥ 10.00 seconds	General Enable Criteria: If message is on Bus A: U0073 If message is on Bus B: U0074 If message is on Bus S: U0076 Starter motor engaged for Or Run/Crank ignition voltage Bus is enabled for The following criteria have been enabled for Normal CAN transmission on Bus Transition from accessory mode to off is pending Controller not in programming mode If bus type = Sensor Bus: Battery voltage Sensor Bus Relay Otherwise: If power mode = Run/ Crank:	 Not Active Not Active Not Active > 15.00 milliseconds > 8.41 Volts >= 0.40 milliseconds >= 5.00 milliseconds Enabled = False > 11.00 Volts = On 	Diagnostic runs in 12.5 ms loop	Type B, 2 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
					Power Mode If calibratable low voltage disable mode is not Never Disabled Low voltage disable mode: OBDII If OBDII: Run/Crank ignition voltage If EOBD: Run/Crank ignition voltage If Secure: Starter motor engaged for Or Run/Crank ignition voltage If Hybrid Secure: Run/Crank ignition voltage If power mode = Accessory Off key cycle diagnostics are enabled Or Controller is an OBD controller Controller shutdown impending Power Mode	= Run >= 11.00 Volts >= 9.00 Volts > 15.00 milliseconds > 8.41 Volts >= 6.41 Volts Enabled OBD Controller = False = Not crank		

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
					Battery voltage	>= 11.00 Volts		

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Lost Communicati on with Active Grill Air Shutter Module A	U0284	This DTC monitors for a loss of communication on the LIN bus with Shutter Module A	Communication failures equals or exceeds	3.00 counts	General Enable Criteria: U1345 Subnet configuration not used Or Device is calibrated as present The following criteria have been enabled for Normal LIN transmission on Bus Controller not in programming mode If UCAP is present on bus, starter motor is not engaged Power mode And Run/Crank ignition voltage Or Battery voltage And the following criteria have been enabled for LIN bus is awake If controller is an OBD controller: Power mode Or	Not active this key cycle Used >= 5.00 milliseconds Enabled Not Present = Run >= 11.00 Volts >= 11.00 Volts >= 400.00 milliseconds = Not off	LIN bus communication executes in 500ms loop.	Type B, 2 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
					<div>If controller is a non-OBD controller: Power mode Enabled during crank: Controller type: OBD Controller</div>	<div>= Run or accessory or crank if diagnostics are enabled during crank Disabled</div>		

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Lost Communicati on with Throttle Position Sensor 1	U0606	<p>Detects a continuous or intermittent short low or short high or open fault in the TPS SENT Communication Circuit 1 by monitoring the voltage and failing the diagnostic when the voltage for the wave pulse is below or above state threshold as defined by SAE J2716 SENT Protocol.</p> <p>Detects a message fault in the TPS SENT Communication Circuit by monitoring the message pulse time and failing the diagnostic when the time for the pulse is below a low time threshold or above a high time threshold or if the message age limit is greater than a time threshold.</p> <p>This diagnostic only runs when battery voltage is high enough.</p>	<p>Voltage for wave pulse is below state threshold as defined by SAE J2716 SENT Protocol</p> <p>OR</p> <p>Voltage for wave pulse is above state threshold as defined by SAE J2716 SENT Protocol</p> <p>OR</p> <p>Message Pulse < Message Pulse ></p> <p>OR</p> <p>Message Age Limit >=</p> <p>OR</p> <p>Signal CRC fails</p>	<p>0.5 V</p> <p>OR</p> <p>4.1 V</p> <p>OR</p> <p>0.125977 ms 0.209991 ms</p> <p>OR</p> <p>3.125 ms</p>	Run/Crank voltage	> 6.41 Volts	<p>79 /159 counts;</p> <p>57 counts continuous;</p> <p>3.125 ms /count in the ECM main processor</p>	Type A, 1 Trips

210BDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Lost Communicati on with Throttle Position Sensor 2	U0607	<p>Detects a continuous or intermittent short low or short high or open fault in the TPS SENT Communication Circuit 2 by monitoring the voltage and failing the diagnostic when the voltage for the wave pulse is below or above state threshold as defined by SAE J2716 SENT Protocol.</p> <p>Detects a message fault in the TPS SENT Communication Circuit by monitoring the message pulse time and failing the diagnostic when the time for the pulse is below a low time threshold or above a high time threshold or if the message age limit is greater than a time threshold.</p> <p>This diagnostic only runs when battery voltage is high enough.</p>	<p>Voltage for wave pulse is below state threshold as defined by SAE J2716 SENT Protocol</p> <p>OR</p> <p>Voltage for wave pulse is above state threshold as defined by SAE J2716 SENT Protocol</p> <p>OR</p> <p>Message Pulse < Message Pulse ></p> <p>OR</p> <p>Message Age Limit >=</p> <p>OR</p> <p>Signal CRC fails</p>	<p>0.5 V</p> <p>OR</p> <p>4.1 V</p> <p>OR</p> <p>0.125977 ms 0.209991 ms</p> <p>OR</p> <p>3.125 ms</p>	Run/Crank voltage	> 6.41 Volts	<p>79 /159 counts;</p> <p>57 counts continuous;</p> <p>3.125 ms /count in the ECM main processor</p>	Type A, 1 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Cooling Fan 1 LIN Communicati on Failure	U0632	This DTC monitors for a loss of communication on the LIN bus with Cooling Fan 1.	Communication failures equals or exceeds	3.00 counts	General Enable Criteria: U1345 Subnet configuration not used Or Device is calibrated as present The following criteria have been enabled for Normal LIN transmission on Bus Controller not in programming mode If UCAP is present on bus, starter motor is not engaged Power mode And Run/Crank ignition voltage Or Battery voltage And the following criteria have been enabled for LIN bus is awake If controller is an OBD controller: Power mode Or	Not active this key cycle Used >= 5.00 milliseconds Enabled Not Present = Run >= 11.00 Volts >= 11.00 Volts >= 400.00 milliseconds = Not off	LIN bus communication executes in 500ms loop.	Type B, 2 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
					If controller is a non-OBD controller: Power mode Enabled during crank: Controller type: OBD Controller	= Run or accessory or crank if diagnostics are enabled during crank Disabled		

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Engine Control Module LIN Bus 1	U1345	This DTC monitors for a LIN bus off condition on LIN Bus 1	Bus off failures equals or exceeds	3.00 counts	<p>General Enable Criteria:</p> <p>The following criteria have been enabled for</p> <p>Normal LIN transmission on Bus</p> <p>Controller not in programming mode</p> <p>If UCAP is present on bus, starter motor is not engaged</p> <p>Power mode And Run/Crank ignition voltage Or Battery voltage</p> <p>And the following criteria have been enabled for</p> <p>LIN bus is awake</p> <p>If controller is an OBD controller:</p> <p>Power mode</p> <p>Or</p> <p>If controller is a non-OBD controller:</p> <p>Power mode</p>	<p>>= 5.00 milliseconds</p> <p>Enabled</p> <p>Not Present</p> <p>= Run</p> <p>>= 11.00 Volts</p> <p>>= 11.00 Volts</p> <p>>= 400.00 milliseconds</p> <p>= Not off</p> <p>= Run or accessory or crank if diagnostics are enabled during crank</p>	Dependent on bus loading.	Type B, 2 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
					Enabled during crank: Controller type: OBD Controller	Disabled		

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Lost Communicati on With Fuel Pump Driver Control Module on Bus S	U18A2	This DTC monitors for a loss of communication with the Fuel Pump Driver Control Module on Bus S.	Message is not received from controller for Message \$0D5 Message \$0D7	 ≥ 4.00seconds ≥ 4.00seconds	General Enable Criteria: If message is on Bus A: U0073 If message is on Bus B: U0074 If message is on Bus S: U0076 Starter motor engaged for Or Run/Crank ignition voltage Bus is enabled for The following criteria have been enabled for Normal CAN transmission on Bus Transition from accessory mode to off is pending Controller not in programming mode If bus type = Sensor Bus: Battery voltage Sensor Bus Relay Otherwise: If power mode = Run/ Crank:	 Not Active Not Active Not Active > 15.00 milliseconds > 8.41 Volts ≥ 0.40 milliseconds ≥ 5.00 milliseconds Enabled = False > 11.00 Volts = On Otherwise: If power mode = Run/ Crank:	Diagnostic runs in 12.5 ms loop	Type B, 2 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
					Power Mode If calibratable low voltage disable mode is not Never Disabled Low voltage disable mode: OBDII If OBDII: Run/Crank ignition voltage If EOBD: Run/Crank ignition voltage If Secure: Starter motor engaged for Or Run/Crank ignition voltage If Hybrid Secure: Run/Crank ignition voltage If power mode = Accessory Off key cycle diagnostics are enabled Or Controller is an OBD controller Controller shutdown impending Power Mode	= Run >= 11.00 Volts >= 9.00 Volts > 15.00 milliseconds > 8.41 Volts >= 6.41 Volts Enabled OBD Controller = False = Not crank		

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
					Battery voltage	>= 11.00 Volts		

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
CGM Lost Communication with ECM	U18D5	This DTC monitors for a CGM Lost Communication with ECM error as determined by the CGM	The CGM Diagnostic Status Message signal in GMLAN frame \$3CF indicates that the CGM Lost Communication with ECM DTC has set in the CGM.		General Enable Criteria: Message \$3CF Central Gateway Module ECM	 is being received is present on the bus is present on the bus	Diagnostic runs in 12.5 ms loop	Type B, 2 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
CGM Lost Communication with TCM	U18D7	This DTC monitors for a CGM Lost Communication with TCM error as determined by the CGM	The CGM Diagnostic Status Message signal in GMLAN frame \$3CF indicates that the CGM Lost Communication with TCM DTC has set in the CGM.		General Enable Criteria: Message \$3CF Central Gateway Module TCM	 is being received is present on the bus is present on the bus	Diagnostic runs in 12.5 ms loop	Type B, 2 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Central Gateway Module High Speed CAN Bus Off	U2413	This DTC monitors for a Central Gateway Module High Speed CAN Bus Off error as determined by the CGM	The CGM Diagnostic Status Message signal in GMLAN frame \$3CF indicates that the Central Gateway Module High Speed CAN Bus Off DTC has set in the CGM.		General Enable Criteria: Message \$3CF Central Gateway Module	 is being received is present on the bus	Diagnostic runs in 12.5 ms loop	Type B, 2 Trips

21OBDG03C ECM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Fuel Pump Driver Control Module Lost Communicati on with ECM [FPPM applications only]	U2616	To detect lost serial data communication from the power driver controller to the ECM	Timer - Fuel System Control message not received (FPPM Received Data Communication Status)	t > 10 s (Fuel Pmp Power Module device reports Faulted, Not Faulted or Indeterminate)	a) Chassis Fuel Pres Sys Type configuration selection b) Diagnostic Enabled c) Diagnostic System Disabled condition d) FPPM Control Alive Rolling Count Faulted e) FPPM serial data received [\$0CE] f) Run_Crank Input Circuit Voltage g) Run_Crank Ignition Switch Position status h) Sensor Bus Relay On	a) == FCBR ECM FPPM Sys b) == TRUE c) <> True d) <> True e) == TRUE f) > 7.00 volts g) == TRUE h) == TRUE	64.00 failures/ 80.00 samples 1 sample / 12.5 millisec	Type B, 2 Trips

Initial Supporting table - Multiple DTC Use_Green Sensor Delay Criteria - Limit

Description: This Calibration is the accumulated airflow limit above which the Green condition is expired

Used for: P0133, P013A, P013B, P013C, P013D, P013E, P013F, P014A, P014B, P0153, P015A, P015B, P015C, P015D, P1133, P1153, P2270, P2271, P2272 and P2273.

Note: This feature is only enabled when the vehicle is new and cannot be enabled in service.

Value Units: Grams

X Unit: Accumulated Engine Airflow

y/x	CiOXYR_O2_Bank1_Sensor1	CiOXYR_O2_Bank1_Sensor2	CiOXYR_O2_Bank2_Sensor1	CiOXYR_O2_Bank2_Sensor2
1	120,000	120,000	120,000	120,000

Initial Supporting table - P0011_CamPosErrorLimlc1

Description: Maximum Intake Cam 1 phase error as a function of engine speed and engine oil temperature.

Value Units: Maximum Intake Cam 1 phase error (degCAM)

X Unit: Engine Oil Temperature (degC)

Y Units: Engine Speed (rpm)

y/x	-40	-28	-16	-4	8	20	32	44	56	68	80	92	104	116	128	140	152
400	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0
800	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0
1,200	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0
1,600	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0
2,000	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0
2,400	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0
2,800	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0
3,200	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0
3,600	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0
4,000	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0
4,400	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0
4,800	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0
5,200	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0
5,600	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0
6,000	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0
6,400	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0
6,800	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0

21OBDG03C ECM Supporting Tables

Initial Supporting table - P0011_P05CC_StablePositionTimeIc1

Description: Minimum time for Intake Cam 1 phase position to be stable to enable performance diagnostic.

Value Units: Minimum time (sec)

X Unit: Engine Oil Temperature (degC)

Y Units: Engine Speed (rpm)

y/x	-40	-28	-16	-4	8	20	32	44	56	68	80	92	104	116	128	140	152
400	100.0	80.0	20.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0
800	100.0	80.0	20.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0
1,200	100.0	80.0	20.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0
1,600	100.0	80.0	20.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0
2,000	100.0	80.0	20.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0
2,400	100.0	80.0	20.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0
2,800	100.0	80.0	20.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0
3,200	100.0	80.0	20.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0
3,600	100.0	80.0	20.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0
4,000	100.0	80.0	20.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0
4,400	100.0	80.0	20.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0
4,800	100.0	80.0	20.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0
5,200	100.0	80.0	20.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0
5,600	100.0	80.0	20.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0
6,000	100.0	80.0	20.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0
6,400	100.0	80.0	20.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0
6,800	100.0	80.0	20.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0

Initial Supporting table - P0014_CamPosErrorLimEc1

Description: Maximum Exhaust Cam 1 phase error as a function of engine speed and engine oil temperature.

Value Units: Maximum Exhaust Cam 1 phase error (degCAM)

X Unit: Engine Oil Temperature (degC)

Y Units: Engine Speed (rpm)

y/x	-40	-28	-16	-4	8	20	32	44	56	68	80	92	104	116	128	140	152
400	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0
800	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0
1,200	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0
1,600	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0
2,000	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0
2,400	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0
2,800	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0
3,200	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0
3,600	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0
4,000	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0
4,400	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0
4,800	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0
5,200	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0
5,600	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0
6,000	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0
6,400	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0
6,800	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0

Initial Supporting table - P0014_P05CE_StablePositionTimeEc1

Description: Minimum time for Exhaust Cam 1 phase position to be stable to enable performance diagnostic.

Value Units: Minimum time (sec)

X Unit: Engine Oil Temperature (degC)

Y Units: Engine Speed (rpm)

y/x	-40	-28	-16	-4	8	20	32	44	56	68	80	92	104	116	128	140	152
400	100.0	80.0	20.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0
800	100.0	80.0	20.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0
1,200	100.0	80.0	20.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0
1,600	100.0	80.0	20.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0
2,000	100.0	80.0	20.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0
2,400	100.0	80.0	20.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0
2,800	100.0	80.0	20.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0
3,200	100.0	80.0	20.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0
3,600	100.0	80.0	20.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0
4,000	100.0	80.0	20.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0
4,400	100.0	80.0	20.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0
4,800	100.0	80.0	20.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0
5,200	100.0	80.0	20.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0
5,600	100.0	80.0	20.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0
6,000	100.0	80.0	20.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0
6,400	100.0	80.0	20.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0
6,800	100.0	80.0	20.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0

Initial Supporting table - P0016, P0017, P0018, P0019: Cam Correlation Oil Temperature Threshold
Description: P0016, P0017, P0018, P0019: Cam Correlation Oil Temperature Threshold

Value Units: Engine Run Time- Seconds

X Unit: Oil Temperature- C

y/x	-40	-28	-16	-4	8	20	32	44	56	68	80	92	104	116	128	140	152
1	35.0	10.0	7.0	5.0	3.0	1.0	0.5	0.5	0.5	0.5	0.5	0.5	0.5	0.5	0.5	2.0	2.0

Initial Supporting table - P0016-0019 Mid-Park Phaser Delay

Description: P0016-0019 Mid-Park Phaser Park Delay. Total delay is twice the calibration value as both 'hi' side and 'lo' side park check sequences are delayed by the stated calibration values

Value Units: Time - seconds

X Unit: Oil Temperature - degC

y/x	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17
1	40.0	23.8	7.0	6.0	5.0	0.6	0.6	0.6	0.6	0.6	0.6	0.6	0.6	0.6	0.6	0.6	0.6

Initial Supporting table - P0071: OAT Performance Drive Equilibrium Engine Off**Description:** OAT Performance Diagnostic counter increment for determining OAT-IAT equilibrium for engine off (for hybrid applications)**Value Units:** Counter Increment Value (Unitless)**X Unit:** Vehicle Speed (KPH)

y/x	0.0	5.0	10.0	15.0	20.0	25.0	30.0	50.0	80.0
1.0	0.0	1.0	2.0	3.0	4.0	5.0	6.0	7.0	8.0

Initial Supporting table - P0071: OAT Performance Drive Equilibrium Engine Running

Description: OAT Performance Diagnostic counter increment for determining OAT-IAT equilibrium for engine running

Value Units: Counter Increment Value (Unitless)

X Unit: Vehicle Speed (KPH)

Y Units: Engine Air Flow (Grams/Second)

y/x	0.0	5.0	10.0	15.0	20.0	25.0	30.0	50.0	80.0
1.0	1.0	2.0	3.0	4.0	5.0	6.0	7.0	8.0	9.0
5.0	-5.0	-2.0	-1.0	0.0	1.0	2.0	3.0	4.0	5.0
10.0	-4.0	-1.0	0.0	0.0	1.0	2.0	3.0	4.0	5.0
20.0	-2.0	-1.0	0.0	0.0	1.0	2.0	3.0	4.0	5.0
30.0	-1.0	0.0	0.0	1.0	2.0	3.0	4.0	5.0	6.0
40.0	0.0	0.0	0.0	1.0	2.0	3.0	4.0	5.0	6.0
50.0	0.0	0.0	1.0	2.0	3.0	4.0	5.0	6.0	7.0
60.0	0.0	1.0	2.0	3.0	4.0	5.0	6.0	7.0	8.0
70.0	1.0	2.0	3.0	4.0	5.0	6.0	7.0	8.0	9.0

Initial Supporting table - P0101, P0106, P0121, P012B, P0236, P1101: MAP1 Residual Weight Factor based on RPM**Description:** P0101_P0106_P0121_P012B_P0236_P1101 MAP1 Residual Weight Factor based on RPM**Value Units:** Weight Factor (Unitless)**X Unit:** Engine Speed (RPM)

y/x	0	400	800	1,200	1,600	2,000	2,400	2,800	3,200	3,600	4,000	4,400	4,800	5,200	5,600	6,000	6,600
1	1.000	1.000	1.000	1.000	1.000	1.000	1.000	1.000	1.000	1.000	1.000	1.000	1.000	1.000	1.000	1.000	1.000

Initial Supporting table - P0101, P0106, P0121, P012B, P0236, P1101: MAP2 Residual Weight Factor based on RPM**Description:** P0101_P0106_P0121_P012B_P0236_P1101 MAP2 Residual Weight Factor based on RPM**Value Units:** Weight Factor (Unitless)**X Unit:** Engine Speed (RPM)

y/x	0	400	800	1,200	1,600	2,000	2,400	2,800	3,200	3,600	4,000	4,400	4,800	5,200	5,600	6,000	6,600
1	1.000	1.000	1.000	1.000	1.000	1.000	1.000	1.000	1.000	1.000	1.000	1.000	1.000	1.000	1.000	1.000	1.000

Initial Supporting table - P0101, P0106, P0121, P012B, P0236, P1101: TPS Residual Weight Factor based on RPM
Description: P0101_P0106_P0121_P012B_P0236_P1101 TPS Residual Weight Factor based on RPM

Value Units: Weight Factor (Unitless)

X Unit: Engine Speed (RPM)

y/x	0	400	800	1,200	1,600	2,000	2,400	2,800	3,200	3,600	4,000	4,400	4,800	5,200	5,600	6,000	6,600
1	1.000	1.000	1.000	1.000	1.000	1.000	1.000	1.000	1.000	1.000	1.000	1.000	1.000	1.000	1.000	1.000	1.000

Initial Supporting table - P050D_P1400_CatalystLightOffExtendedEngineRunTimeExit

Description: Exit Catalyst Warm-up mode if Engine Run Time is greater than this value. This table is based on percent ethanol (x-axis) and catmon's NormRatio_EWMA value (y-axis). The NormRatio_EWMA value determines the state of the catalyst. Typically, NormRatio_EWMA values below 0.35 (0 is bad and 1 is good) represent catalysts that have degraded. The emission performance of these degraded catalysts can be improved by extending catalyst light off of GetE85R_Pct_FFS_CompAtEngFloat.

y/x	0	25	50	75	100
0.000	18	18	18	18	18
0.125	18	18	18	18	18
0.250	18	18	18	18	18
0.375	18	18	18	18	18
0.500	18	18	18	18	18
0.625	18	18	18	18	18
0.750	18	18	18	18	18
0.875	18	18	18	18	18
1.000	18	18	18	18	18

Initial Supporting table - P1400_CatalystLightOffExtendedEngineRunTimeExit

Description: Exit Catalyst Warm-up mode if Engine Run Time is greater than this value. This table is based on percent ethanol (x-axis) and catmon's NormRatio_EWMA value (y-axis). The NormRatio_EWMA value determines the state of the catalyst. Typically, NormRatio_EWMA values below 0.35 (0 is bad and 1 is good) represent catalysts that have degraded. The emission performance of these degraded catalysts can be improved by extending catalyst light off of GetE85R_Pct_FFS_CompAtEngFloat.

y/x	0	25	50	75	100
0.000	18	18	18	18	18
0.125	18	18	18	18	18
0.250	18	18	18	18	18
0.375	18	18	18	18	18
0.500	18	18	18	18	18
0.625	18	18	18	18	18
0.750	18	18	18	18	18
0.875	18	18	18	18	18
1.000	18	18	18	18	18

Initial Supporting table - P1400_ColdStartDiagnosticDelayBasedOnEngineRunTime

Description: Quality weight-based on engine run time. This allows adjustment of the weighting factors at various engine run times in order to prevent the updating of the cumulative quality timer or to change the value of the average qualified residual energy calculation to prevent false Fails of the diagnostic under circumstances inappropriate to update the calculation of the average qualified residual value.

y/x	0	3	4	4	5	10	15	20	30
1	0	0	0	1	1	1	1	1	1

Initial Supporting table - P1400_ColdStartDiagnosticDelayBasedOnEngineRunTimeCalAxis

Description: This is the x-axis for the KtCSED_K_TimeWght calibration table. Refer to the description for KtCSED_K_TimeWght for details.

y/x	1	2	3	4	5	6	7	8	9
1	0	3	4	4	5	10	15	20	30

Initial Supporting table - P1400_EngineSpeedResidual_Table

Description: This 1x17 table of engine exhaust flow values is used to calculate both the desired and the actual engine exhaust flow based on desired and actual engine speed. The desired engine exhaust flow is gathered from the desired engine speed (VeSPDR_n_EngDsrd). The value used for the actual engine exhaust flow is based on the actual engine RPM value.

y/x	0	300	500	845	875	900	925	1,100	1,160	1,350	1,500	1,600	1,700	1,800	1,900	2,000	2,500
1	0	3	4	4	12	16	16	16	16	16	16	16	16	16	16	16	16

Initial Supporting table - P1400_SparkResidual_Table

Description: Predicted engine-out energy potential based on either the desired cold start spark advance value or the actual spark advance value. ExhEngyPerUnitMass calibration is used to calculate both desired exhaust energy and actual energy. The desired and actual exhaust energy per unit mass values are used in part to calculate the desired exhaust energy per unit time and actual exhaust energy per unit time. Both desired and actual go into the residual exhaust energy per unit time calculation.

y/x	-10	-8	-5	0	5	7	8	10	15
1	1.00	1.00	1.00	1.00	1.00	0.63	0.50	0.50	0.50

Initial Supporting table - P0068_Delta MAF Threshold f(TPS)

Description: Table of delta MAF values as a function of desired throttle position. The output of this table provides a delta MAF that if the measured minus the estimated MAF exceeds, is considered a fail.

y/x	5.00	10.00	15.00	20.00	25.00	30.00	35.00	40.00	100.00
1.00	28.16	20.51	20.41	26.31	29.73	39.24	59.39	255.00	255.00

Initial Supporting table - P0068_Delta MAP Threshold f(TPS)

Description: Table of delta MAP values as a function of desired throttle position. The output of this table provides a delta MAP that if the measured minus the estimated MAP exceeds, is considered a fail.

y/x	5.00	10.00	15.00	20.00	25.00	30.00	35.00	40.00	100.00
1.00	59.89	40.24	30.61	38.05	27.24	28.24	33.48	255.00	255.00

Initial Supporting table - P0068_Maximum MAF f(RPM)

Description: Table of maximum MAF values vs. engine speed. This is the maximum MAF the engine can see under all ambient conditions.

y/x	600.00	1,400.00	2,200.00	3,000.00	3,800.00	4,600.00	5,400.00	6,200.00	7,000.00
1.00	8.00	27.00	41.00	59.00	79.00	105.00	122.00	141.00	149.00

Initial Supporting table - P0068_Maximum MAF f(Volts)**Description:** Table of maximum MAF values vs. system voltage. The output of the air meter is clamped to lower values as system voltage drops off.

y/x	6.00	7.00	8.00	9.00	10.00	11.00	12.00	13.00	14.00
1.00	31.00	72.00	130.00	190.00	238.00	238.00	238.00	238.00	238.00

21OBDG03C ECM Supporting Tables

Initial Supporting table - P0101, P0106, P010B, P0121, P012B, P0236, P1101: MAF1 Residual Weight Factor based on MAF Est

Description: P0101_P0106_P010B_P0121_P012B_P0236_P1101 MAF1 Residual Weight Factor based on MAF Est

Value Units: Weight Factor (Unitless)

X Unit: Estimated Engine Air Flow (Grams/Second)

y/x	0	50	70	73	76	79	82	85	89	95	100	110	120	150	200	280	350
1	1.000	1.000	1.000	1.000	1.000	1.000	1.000	1.000	1.000	1.000	1.000	1.000	1.000	1.000	0.900	0.900	0.900

Initial Supporting table - P0101, P0106, P010B, P0121, P012B, P0236, P1101: MAF1 Residual Weight Factor based on RPM**Description:** P0101_P0106_P010B_P0121_P012B_P0236_P1101 MAF1 Residual Weight Factor based on RPM**Value Units:** Weight Factor (Unitless)**X Unit:** Engine Speed (RPM)

y/x	0	400	800	1,200	1,600	2,000	2,400	2,800	3,200	3,600	4,000	4,400	4,800	5,200	5,600	6,000	6,600
1	1.000	1.000	1.000	1.000	1.000	1.000	1.000	1.000	1.000	1.000	1.000	1.000	1.000	1.000	1.000	1.000	1.000

Initial Supporting table - P0128_Maximum Accumulated Energy for Start-up ECT conditions - Alternate**Description:** KtECTR_E_CTR_WrmUpEnrgyLimTest1**Value Units:** Cooling system energy failure threshold (kJ)**X Unit:** Minimum ECT for the key cycle (°C)

y/x	-40	-7	10	30	76	80	86
1	13,584	10,206	8,466	6,418	1,709	1,200	1,200

Initial Supporting table - P0128_Maximum Accumulated Energy for Start-up ECT conditions - Primary**Description:** KtECTR_E_CTR_WrmUpEnrgyLimTest0**Value Units:** Cooling system energy failure threshold (kJ)**X Unit:** Minimum ECT for the key cycle (°C)

y/x	-40	-7	10	30	76	80	86
1	26,376	21,452	18,916	15,933	9,070	8,328	7,503

Initial Supporting table - P0606_Last Seed Timeout f(Loop Time)

Description: The max time for the Last Seed Timeout as a function of operating loop time sequence.

P0606_Last Seed Timeout f(Loop Time) - Part 1

y/x	CePISR_e_5msSeq	CePISR_e_6p25msSeq	CePISR_e_10msSeq	CePISR_e_12p5msSeq	CePISR_e_20msSeq	CePISR_e_25msSeq	CePISR_e_40msSeq
1	200.000	200.000	200.000	200.000	200.000	200.000	200.000

P0606_Last Seed Timeout f(Loop Time) - Part 2

y/x	CePISR_e_50msSeq	CePISR_e_80msSeq	CePISR_e_100msSeq	CePISR_e_EventA_Seq	CePISR_e_EventB_Seq	CePISR_e_EventC_Seq	
1	500.000	500.000	1,000.000	8,191.875	8,191.875	8,191.875	

Initial Supporting table - P0606_PSW Sequence Fail f(Loop Time)

Description: Fail threshold for PSW per operating loop.

P0606_PSW Sequence Fail f(Loop Time) - Part 1

y/x	CePISR_e_5msSeq	CePISR_e_6p25msSeq	CePISR_e_10msSeq	CePISR_e_12p5msSeq	CePISR_e_20msSeq	CePISR_e_25msSeq	CePISR_e_40msSeq
1	5	3	5	3	5	3	5

P0606_PSW Sequence Fail f(Loop Time) - Part 2

y/x	CePISR_e_50msSeq	CePISR_e_80msSeq	CePISR_e_100msSeq	CePISR_e_EventA_Seq	CePISR_e_EventB_Seq	CePISR_e_EventC_Seq	
1	3	5	5	5	5	5	

Initial Supporting table - P0606_PSW Sequence Sample f(Loop Time)

Description: Sample threshold for PSW per operating loop.

P0606_PSW Sequence Sample f(Loop Time) - Part 1

y/x	CePISR_e_5msSeq	CePISR_e_6p25msSeq	CePISR_e_10msSeq	CePISR_e_12p5msSeq	CePISR_e_20msSeq	CePISR_e_25msSeq	CePISR_e_40msSeq
1	4	4	4	4	4	4	4

P0606_PSW Sequence Sample f(Loop Time) - Part 2

y/x	CePISR_e_50msSeq	CePISR_e_80msSeq	CePISR_e_100msSeq	CePISR_e_EventA_Seq	CePISR_e_EventB_Seq	CePISR_e_EventC_Seq	
1	4	4	4	4	4	4	

Initial Supporting table - P1682_PT Relay Pull-in Run/Crank Voltage f(IAT)

Description: The Run/Crank voltages required to pull in the PT relay as a function of induction air temperature.

Value Units: Run/Crank Voltages required to pull in PT Relay (V)

X Unit: Induction Air Temperature (deg C)

y/x	23.000	85.000	95.000	105.000	125.000
1.000	7.000	8.699	9.000	9.199	10.000

Initial Supporting table - P16F3_Delta MAP Threshold f(Desired Engine Torque)**Description:** Engine Sync based and Time based delta pressure threshold above which Torque Security error is reported.

y/x	0.00	50.00	100.00	150.00	200.00	300.00
1.00	27.24	27.24	27.24	27.24	27.24	27.24

Initial Supporting table - P16F3_Speed Control External Load f(Oil Temp, RPM)

Description: Specifies the external load table for SPDR torque security as a function of engine oil temperature and engine RPM.

y/x	-40.00	-20.00	-10.00	0.00	50.00	90.00
500.00	137.47	116.03	114.61	115.72	95.01	59.26
650.00	137.47	116.03	114.61	115.72	95.01	59.26
750.00	130.38	111.89	111.51	115.65	91.26	57.51
775.00	131.08	111.89	111.52	115.72	92.01	55.76
800.00	137.47	116.03	114.61	115.72	95.01	54.26
900.00	143.21	129.39	123.18	121.05	93.94	54.38
1,000.00	148.76	141.94	132.52	125.63	93.44	48.76
1,100.00	147.26	140.54	134.77	128.97	97.94	36.76
1,300.00	139.91	134.95	132.22	126.95	90.41	42.80
1,600.00	100.56	97.53	99.48	99.22	71.77	37.10
2,000.00	-62.24	-62.24	-62.24	-62.24	-62.24	-62.24
2,500.00	-68.46	-68.46	-68.46	-68.46	-68.46	-68.46
3,000.00	-74.69	-74.69	-74.69	-74.69	-74.69	-74.69
3,500.00	-80.91	-80.91	-80.91	-80.91	-80.91	-80.91
4,500.00	-87.14	-87.14	-87.14	-87.14	-87.14	-87.14
5,500.00	-93.36	-93.36	-93.36	-93.36	-93.36	-93.36
7,200.00	-99.58	-99.58	-99.58	-99.58	-99.58	-99.58

210BDG03C ECM Supporting Tables

Initial Supporting table - 1st_FireAfrMisfr_Acel

Description: Used for P0300 - P0308, Multiplier for establishing the expected acceleration of the cylinder after the misfire

Value Units: multiplier

X Unit: RPM

Y Units: percent load of max indicated torque (%)

y/x	500	700	900	1,100	1,200	1,400	1,600	1,800	2,000	2,200	2,400	2,600	3,000	4,000	5,000	6,000	6,500
2	1.06	1.06	1.06	1.17	1.22	1.33	1.17	1.02	0.86	0.71	0.55	0.56	0.58	0.62	0.66	0.70	0.70
8	1.06	1.06	1.06	1.17	1.22	1.33	1.17	1.02	0.86	0.71	0.55	0.56	0.58	0.62	0.66	0.70	0.70
12	1.30	1.30	1.30	1.16	1.09	0.95	0.87	0.79	0.71	0.64	0.56	0.56	0.58	0.62	0.66	0.70	0.70
16	1.33	1.33	1.33	1.08	0.96	0.70	0.67	0.63	0.60	0.56	0.52	0.54	0.57	0.62	0.67	0.72	0.72
20	1.17	1.17	1.17	0.94	0.82	0.59	0.56	0.53	0.51	0.48	0.45	0.48	0.53	0.63	0.69	0.75	0.75
26	0.88	0.88	0.88	0.65	0.53	0.30	0.34	0.38	0.42	0.46	0.50	0.51	0.53	0.62	0.76	0.90	0.90
30	0.88	0.88	0.88	0.63	0.51	0.26	0.31	0.36	0.41	0.45	0.50	0.51	0.52	0.61	0.75	0.89	0.89
40	0.86	0.86	0.86	0.59	0.45	0.18	0.24	0.31	0.37	0.44	0.50	0.51	0.52	0.60	0.73	0.86	0.86
60	0.83	0.83	0.83	0.50	0.33	0.00	0.10	0.20	0.30	0.40	0.50	0.50	0.50	0.56	0.69	0.81	0.81

Initial Supporting table - 1st_FireAfrMisfr_Jerk

Description: Used for P0300 - P0308, Multiplier for establishing the expected Jerk of the cylinder after the misfire

Value Units: multiplier

X Unit: RPM

Y Units: percent load of max indicated torque (%)

y/x	500	700	900	1,100	1,200	1,400	1,600	1,800	2,000	2,200	2,400	2,600	3,000	4,000	5,000	6,000	6,500
2	1.04	1.04	1.04	1.13	1.17	1.25	1.19	1.13	1.07	1.01	0.95	0.96	0.98	1.00	1.00	1.00	1.00
8	1.04	1.04	1.04	1.13	1.17	1.25	1.19	1.13	1.07	1.01	0.95	0.96	0.98	1.00	1.00	1.00	1.00
12	0.95	0.95	0.95	1.07	1.13	1.25	1.19	1.13	1.07	1.01	0.95	0.94	0.90	0.86	0.85	0.84	0.84
16	0.91	0.91	0.91	1.04	1.10	1.23	1.17	1.11	1.04	0.98	0.92	0.89	0.84	0.78	0.77	0.76	0.76
20	0.92	0.92	0.92	1.03	1.09	1.20	1.13	1.06	0.99	0.92	0.85	0.83	0.80	0.75	0.76	0.76	0.76
26	0.91	0.91	0.91	1.03	1.08	1.20	1.13	1.06	0.99	0.92	0.85	0.83	0.80	0.75	0.76	0.76	0.76
30	0.91	0.91	0.91	1.03	1.08	1.20	1.13	1.06	0.99	0.92	0.84	0.83	0.79	0.75	0.75	0.76	0.76
40	0.92	0.92	0.92	1.03	1.09	1.20	1.13	1.05	0.98	0.90	0.83	0.81	0.77	0.73	0.75	0.76	0.76
60	0.94	0.94	0.94	1.04	1.10	1.20	1.12	1.04	0.96	0.88	0.80	0.78	0.75	0.71	0.73	0.75	0.75

Initial Supporting table - 1stFireAfterMisJerkAFM

Description: Used for P0300 - P0308, Multiplier for establishing the expected jerk of the cylinder after the misfire if Active Fuel Management cylinder deact mode is active

Value Units: multiplier

X Unit: RPM

Y Units: percent load of max indicated torque (%)

y/x	800	1,000	1,200	1,600	2,000	2,400	2,600	3,000	3,500
8	1	1	1	1	1	1	1	1	1
12	1	1	1	1	1	1	1	1	1
16	1	1	1	1	1	1	1	1	1
20	1	1	1	1	1	1	1	1	1
24	1	1	1	1	1	1	1	1	1
30	1	1	1	1	1	1	1	1	1
40	1	1	1	1	1	1	1	1	1
60	1	1	1	1	1	1	1	1	1
100	1	1	1	1	1	1	1	1	1

Initial Supporting table - 1stFireAfrMisAcelAFM

Description: Used for P0300 - P0308, Multiplier for establishing the expected acceleration of the cylinder after the misfire if Active Fuel Management cylinder deact mode is active

Value Units: multiplier

X Unit: RPM

Y Units: percent load of max indicated torque (%)

y/x	800	1,000	1,200	1,600	2,000	2,400	2,600	3,000	3,500
8	1	1	1	1	1	1	1	1	1
12	1	1	1	1	1	1	1	1	1
16	1	1	1	1	1	1	1	1	1
20	1	1	1	1	1	1	1	1	1
24	1	1	1	1	1	1	1	1	1
30	1	1	1	1	1	1	1	1	1
40	1	1	1	1	1	1	1	1	1
60	1	1	1	1	1	1	1	1	1
100	1	1	1	1	1	1	1	1	1

Initial Supporting table - Abnormal Cyl Mode

Description: Used for P0300-P0308. Number of consecutive number of decelerating cylinders after the misfire that would be considered abnormal. (Cylinder Mode Equation)

Value Units: Number of consecutive number of decelerating cylinders (integer)

X Unit: thousands of RPM (rpm/1000)

y/x	0	1	2	3	4	5	6	7	8
1	4	4	4	4	4	4	4	4	4

Initial Supporting table - Abnormal Rev Mode

Description: Used for P0300-P0308. Abnormal Rev Mode Number of consecutive number of decelerating cylinders after the misfire that would be considered abnormal. (Rev Mode Equation)

Value Units: Number of consecutive number of decelerating cylinders (integer)

X Unit: thousands of RPM (rpm/1000)

y/x	0	1	2	3	4	5	6	7	8
1	2.00	2.00	2.00	2.00	2.00	2.00	2.00	2.00	2.00

Initial Supporting table - Abnormal SCD Mode

Description: Used for P0300-P0308. Number of consecutive number of decelerating cylinders after the misfire that would be considered abnormal. (SCD Mode Equation)

Value Units: Number of consecutive number of decelerating cylinders (integer)

X Unit: thousands of RPM (rpm/1000)

y/x	0	1	2	3	4	5	6	7	8
1	4	4	4	4	4	4	4	4	4

Initial Supporting table - Bank_SCD_Decel

Description: Used for P0300 - P0308, Multitplier to SCD decel to account for different pattern of Paired cylinder misfire. Multipliers are a function of engine rpm and % engine Load.

Value Units: multiplier

X Unit: RPM

Y Units: percent load of max indicated torque (%)

y/x	400	550	700	800	900	1,000	1,200	1,400	1,600
5	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00
10	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00
20	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00
30	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00
40	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00
50	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00
60	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00
80	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00
100	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00

Initial Supporting table - Bank_SCD_Jerk

Description: Used for P0300 - P0308, Multitplier to Medres SCD jerk to account for different pattern of Paired cylinder misfire. Multipliers are a function of engine rpm and % engine Load.

Value Units: multiplier

X Unit: RPM

Y Units: percent load of max indicated torque (%)

y/x	400	550	700	800	900	1,000	1,200	1,400	1,600
5	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00
10	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00
20	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00
30	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00
40	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00
50	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00
60	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00
80	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00
100	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00

Initial Supporting table - BankCylModeDecel

Description: Used for P0300 - P0308, Multiplier to Lores Decel to account for different pattern of Paired cylinder misfire. Multipliers are a function of engine rpm and % engine Load.

Value Units: multiplier

X Unit: RPM

Y Units: percent load of max indicated torque (%)

y/x	500	700	900	1,100	1,200	1,400	1,600	1,800	2,000	2,200	2,400	2,600	3,000	4,000	5,000	6,000	6,500
5	8.00	8.00	8.00	8.00	8.00	8.00	8.00	8.00	8.00	8.00	8.00	8.00	8.00	8.00	8.00	8.00	8.00
10	6.00	6.00	8.00	8.00	8.00	8.00	8.00	8.00	8.00	8.00	8.00	8.00	8.00	8.00	8.00	8.00	8.00
20	6.00	6.00	8.00	8.00	8.00	8.00	8.00	8.00	8.00	8.00	8.00	8.00	8.00	8.00	8.00	8.00	8.00
30	6.00	6.00	8.00	8.00	8.00	8.00	8.00	8.00	8.00	8.00	8.00	8.00	8.00	8.00	8.00	8.00	8.00
40	6.00	6.00	8.00	8.00	8.00	8.00	8.00	8.00	8.00	8.00	8.00	8.00	8.00	8.00	8.00	8.00	8.00
50	6.00	6.00	8.00	8.00	8.00	8.00	8.00	8.00	8.00	8.00	8.00	8.00	8.00	8.00	8.00	8.00	8.00
60	6.00	6.00	8.00	8.00	8.00	8.00	8.00	8.00	8.00	8.00	8.00	8.00	8.00	8.00	8.00	8.00	8.00
80	6.00	6.00	8.00	8.00	8.00	8.00	8.00	8.00	8.00	8.00	8.00	8.00	8.00	8.00	8.00	8.00	8.00
100	6.00	6.00	7.00	7.67	8.00	8.00	8.00	8.00	8.00	8.00	8.00	8.00	8.00	8.00	8.00	8.00	8.00

21OBDG03C ECM Supporting Tables

Initial Supporting table - BankCylModeJerk

Description: Used for P0300 - P0308, Multiplier to Lores Jerk to account for different pattern of Paired cylinder misfire. Multipliers are a function of engine rpm and % engine Load.

Value Units: multiplier

X Unit: RPM

Y Units: percent load of max indicated torque (%)

y/x	500	700	900	1,100	1,200	1,400	1,600	1,800	2,000	2,200	2,400	2,600	3,000	4,000	5,000	6,000	6,500
5	4.00	4.00	9.00	9.67	10.00	10.00	10.00	10.00	10.00	10.00	10.00	10.00	10.00	10.00	10.00	10.00	10.00
10	3.50	3.50	9.00	9.67	10.00	10.00	10.00	10.00	10.00	10.00	10.00	10.00	10.00	10.00	10.00	10.00	10.00
20	3.00	3.00	8.00	9.33	10.00	10.00	10.00	10.00	10.00	10.00	10.00	10.00	10.00	10.00	10.00	10.00	10.00
30	3.00	3.00	5.00	8.33	10.00	10.00	10.00	10.00	10.00	10.00	10.00	10.00	10.00	10.00	10.00	10.00	10.00
40	3.00	3.00	4.00	8.00	10.00	10.00	10.00	10.00	10.00	10.00	10.00	10.00	10.00	10.00	10.00	10.00	10.00
50	3.00	3.00	4.00	8.00	10.00	10.00	10.00	10.00	10.00	10.00	10.00	10.00	10.00	10.00	10.00	10.00	10.00
60	3.00	3.00	4.00	5.33	6.00	8.00	10.00	10.00	10.00	10.00	10.00	10.00	10.00	10.00	10.00	10.00	10.00
80	3.00	3.00	4.00	5.33	6.00	8.00	10.00	10.00	10.00	10.00	10.00	10.00	10.00	10.00	10.00	10.00	10.00
100	2.80	2.80	3.60	5.20	6.00	8.00	10.00	10.00	10.00	10.00	10.00	10.00	10.00	10.00	10.00	10.00	10.00

Initial Supporting table - ClyAfterAFM_Decel

Description: Used for P0300 - P0308, Multitplier to Lores decel to account for different pattern of misfire after a deactivated cylinder. Similar to the second cylinder of consecutive cylinder misfire. Multipliers are a function of engine rpm and % engine Load.

Value Units: multiplier

X Unit: RPM

Y Units: percent load of max indicated torque (%)

y/x	800	1,000	1,200	1,600	2,000	2,400	2,600	3,000	3,500
5	8.00	8.00	8.00	8.00	8.00	8.00	8.00	8.00	8.00
10	6.00	8.00	8.00	8.00	8.00	8.00	8.00	8.00	8.00
20	6.00	8.00	8.00	8.00	8.00	8.00	8.00	8.00	8.00
30	6.00	8.00	8.00	8.00	8.00	8.00	8.00	8.00	8.00
40	6.00	8.00	8.00	8.00	8.00	8.00	8.00	8.00	8.00
50	6.00	8.00	8.00	8.00	8.00	8.00	8.00	8.00	8.00
60	6.00	8.00	8.00	8.00	8.00	8.00	8.00	8.00	8.00
80	6.00	8.00	8.00	8.00	8.00	8.00	8.00	8.00	8.00
100	6.00	7.00	8.00	8.00	8.00	8.00	8.00	8.00	8.00

Initial Supporting table - ClyBeforeAFM_Jerk

Description: Used for P0300 - P0308, Multitplier to Lores decel to account for different pattern of misfire before a deactivated cylinder, but after an active cylinder that follows an deactive cylinder on engine that supports cylinder deactivation in non even fire patterns.. Multipliers are a function of engine rpm and % engine Load.

Value Units: multiplier

X Unit: RPM

Y Units: percent load of max indicated torque (%)

y/x	800	1,000	1,200	1,600	2,000	2,400	2,600	3,000	3,500
5	4.00	9.00	10.00	10.00	10.00	10.00	10.00	10.00	10.00
10	3.50	9.00	10.00	10.00	10.00	10.00	10.00	10.00	10.00
20	3.00	8.00	10.00	10.00	10.00	10.00	10.00	10.00	10.00
30	3.00	5.00	10.00	10.00	10.00	10.00	10.00	10.00	10.00
40	3.00	4.00	10.00	10.00	10.00	10.00	10.00	10.00	10.00
50	3.00	4.00	10.00	10.00	10.00	10.00	10.00	10.00	10.00
60	3.00	4.00	6.00	10.00	10.00	10.00	10.00	10.00	10.00
80	3.00	4.00	6.00	10.00	10.00	10.00	10.00	10.00	10.00
100	2.80	3.60	6.00	10.00	10.00	10.00	10.00	10.00	10.00

Initial Supporting table - CombustModelIdleTbl

Description: Used for P0300 - P0308, Only used on Diesel engines. Combustion modes that will force use of Idle table. A value of CeCMBR_i_CombModesMax means not selected.

Value Units: Enumerated value of different combustion modes (enumeration)

X Unit: Current Combustion Mode (enumeration)

CombustModelIdleTbl - Part 1

y/x	0	1	2	3	4	5
1	CeCMBR_i_CombModes Max	CeCMBR_i_CombModes Max	CeCMBR_i_CombModes Max	CeCMBR_i_CombModes Max	CeCMBR_i_CombModes Max	CeCMBR_i_CombModes Max

CombustModelIdleTbl - Part 2

y/x	6	7	8	9	10	11
1	CeCMBR_i_CombModes Max	CeCMBR_i_CombModes Max	CeCMBR_i_CombModes Max	CeCMBR_i_CombModes Max	CeCMBR_i_CombModes Max	CeCMBR_i_CombModes Max

CombustModelIdleTbl - Part 3

y/x	12	13	14	15	16	
1	CeCMBR_i_CombModes Max	CeCMBR_i_CombModes Max	CeCMBR_i_CombModes Max	CeCMBR_i_CombModes Max	CeCMBR_i_CombModes Max	

21OBDG03C ECM Supporting Tables

Initial Supporting table - ConsecCylModDecel

Description: Used for P0300 - P0308, Multitplier to Lores decel to account for different pattern of the second cylinder of consecutive misfire. Multipliers are a function of engine rpm and % engine Load.

Value Units: multiplier

X Unit: RPM

Y Units: percent load of max indicated torque (%)

y/x	500	700	900	1,100	1,200	1,400	1,600	1,800	2,000	2,200	2,400	2,600	3,000	4,000	5,000	6,000	6,500
2	2.00	2.00	2.00	1.33	1.00	1.02	1.05	1.16	1.27	1.42	1.57	1.48	1.40	1.50	1.30	1.10	1.00
8	2.00	2.00	2.00	1.33	1.00	1.02	1.05	1.16	1.27	1.42	1.57	1.48	1.40	1.50	1.30	1.10	1.00
12	1.76	1.76	2.19	1.63	1.35	1.20	1.05	1.16	1.27	1.42	1.57	1.48	1.40	1.50	1.30	1.10	1.00
16	1.67	1.67	2.10	1.61	1.37	1.25	1.12	1.25	1.38	1.48	1.57	1.48	1.42	1.60	1.64	1.68	1.70
20	1.47	1.47	2.00	1.53	1.30	1.25	1.20	1.30	1.40	1.46	1.52	1.44	1.41	1.61	1.65	1.68	1.70
24	1.39	1.39	1.80	1.47	1.30	1.20	1.10	1.05	1.00	1.05	1.10	1.14	1.23	1.50	1.56	1.62	1.65
30	1.38	1.38	1.70	1.50	1.40	1.20	1.00	1.00	1.00	1.00	1.00	1.00	1.05	1.30	1.44	1.58	1.65
60	1.38	1.38	1.70	1.50	1.40	1.20	1.00	1.00	1.00	1.00	1.00	1.00	1.02	1.10	1.26	1.42	1.50
100	1.38	1.38	1.70	1.50	1.40	1.20	1.00	1.00	1.00	1.00	1.00	1.00	1.02	1.10	1.26	1.42	1.50

Initial Supporting table - ConsecCylModeJerk

Description: Used for P0300 - P0308, Multiplier to Lores Jerk to account for different pattern of the second cylinder of consecutive misfire. Multipliers are a function of engine rpm and % engine Load.

Value Units: multiplier

X Unit: RPM

Y Units: percent load of max indicated torque (%)

y/x	500	700	900	1,100	1,200	1,400	1,600	1,800	2,000	2,200	2,400	2,600	3,000	4,000	5,000	6,000	6,500
2	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
8	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
12	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
16	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
20	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
24	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
30	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
60	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
100	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Initial Supporting table - ConsecSCD_Decel

Description: Used for P0300 - P0308, Multiplier to medres decel to account for different pattern of the second cylinder of consecutive misfire. Multipliers are a function of engine rpm and % engine Load.

Value Units: multiplier

X Unit: RPM

Y Units: percent load of max indicated torque (%)

y/x	400	550	700	800	900	1,000	1,200	1,400	1,600
2	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00
8	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00
12	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00
16	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00
20	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00
24	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00
30	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00
60	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00
100	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00

Initial Supporting table - ConsecSCD_Jerk

Description: Used for P0300 - P0308, Multiplier to medres Jerk to account for different pattern of the second cylinder of consecutive misfire. Multipliers are a function of engine rpm and % engine Load.

Value Units: multiplier

X Unit: RPM

Y Units: percent load of max indicated torque (%)

y/x	400	550	700	800	900	1,000	1,200	1,400	1,600
2	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00
8	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00
12	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00
16	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00
20	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00
24	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00
30	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00
60	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00
100	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00

Initial Supporting table - CylAfterAFM_Jerk

Description: Used for P0300 - P0308, Multitplier to Lores Jerk to account for different pattern of misfire after a deactivated cylinder. Similar to the second cylinder of consecutive cylinder misfire. Multipliers are a function of engine rpm and % engine Load.

Value Units: multiplier

X Unit: RPM

Y Units: percent load of max indicated torque (%)

y/x	800	1,000	1,200	1,600	2,000	2,400	2,600	3,000	3,500
5	4	9	10	10	10	10	10	10	10
10	4	9	10	10	10	10	10	10	10
20	3	8	10	10	10	10	10	10	10
30	3	5	10	10	10	10	10	10	10
40	3	4	10	10	10	10	10	10	10
50	3	4	10	10	10	10	10	10	10
60	3	4	6	10	10	10	10	10	10
80	3	4	6	10	10	10	10	10	10
100	3	4	6	10	10	10	10	10	10

Initial Supporting table - CylBeforeAFM_Decel

Description: Used for P0300 - P0308, Multitplier to Lores decel to account for different pattern of misfire before a deactivated cylinder, but after an active cylinder that follows an deactive cylinder on engine that supports cylinder deactivation in non even fire patterns.. Multipliers are a function of engine rpm and % engine Load.

Value Units: multiplier

X Unit: RPM

Y Units: percent load of max indicated torque (%)

y/x	800	1,000	1,200	1,600	2,000	2,400	2,600	3,000	3,500
5	8.00	8.00	8.00	8.00	8.00	8.00	8.00	8.00	8.00
10	6.00	8.00	8.00	8.00	8.00	8.00	8.00	8.00	8.00
20	6.00	8.00	8.00	8.00	8.00	8.00	8.00	8.00	8.00
30	6.00	8.00	8.00	8.00	8.00	8.00	8.00	8.00	8.00
40	6.00	8.00	8.00	8.00	8.00	8.00	8.00	8.00	8.00
50	6.00	8.00	8.00	8.00	8.00	8.00	8.00	8.00	8.00
60	6.00	8.00	8.00	8.00	8.00	8.00	8.00	8.00	8.00
80	6.00	8.00	8.00	8.00	8.00	8.00	8.00	8.00	8.00
100	6.00	7.00	8.00	8.00	8.00	8.00	8.00	8.00	8.00

210BDG03C ECM Supporting Tables

Initial Supporting table - CylModeDecel

Description: Used for P0300-P0308. Crankshaft decel threshold. Thresholds are a function of rpm and % engine Load.

Value Units: Delta time per cylinder (usec)

X Unit: RPM

Y Units: percent load of max indicated torque (%)

CylModeDecel - Part 1

y/x	400	500	600	700	800	900	1,000	1,100	1,200	1,400	1,600	1,800	2,000
3	3,000	2,600	2,300	1,700	950	580	530	490	430	350	175	120	110
6	3,500	3,000	2,400	1,750	1,000	640	530	490	430	350	165	110	100
8	4,000	3,500	2,500	1,800	1,000	640	535	500	436	350	150	100	100
10	4,500	4,000	3,200	1,900	1,050	640	540	510	441	360	159	120	105
12	5,000	4,500	3,400	2,100	1,100	640	550	520	455	370	230	135	110
14	5,000	4,700	3,500	2,250	1,200	650	570	530	467	380	240	155	115
16	5,000	5,000	3,765	2,400	1,300	700	600	540	493	395	250	176	120
18	5,000	5,000	4,235	2,800	1,400	800	700	600	511	405	250	182	135
20	5,000	5,000	4,706	3,000	1,500	950	850	700	543	423	250	203	143
22	5,000	5,000	4,900	3,150	1,700	1,200	1,000	780	571	437	260	223	150
24	5,000	5,000	5,000	3,300	2,000	1,350	1,150	930	590	464	280	240	160
26	5,000	5,000	5,000	3,500	2,100	1,450	1,300	1,040	780	497	300	270	165
30	5,000	5,000	5,000	4,000	2,600	1,900	1,500	1,200	940	600	400	300	200
40	5,000	5,000	5,000	4,200	2,900	2,500	2,000	1,500	1,200	690	550	400	300
60	5,000	5,000	5,000	4,400	3,400	3,000	2,500	2,000	1,500	850	750	600	450
78	5,000	5,000	5,000	4,600	4,000	3,500	3,000	2,500	1,800	1,100	950	800	600
97	5,000	5,000	5,000	5,000	4,400	4,000	3,500	3,000	2,200	1,500	1,200	1,000	750

CylModeDecel - Part 2

y/x	2,200	2,400	2,600	2,800	3,000	3,500	4,000	4,500	5,000	5,500	6,000	6,500	7,000
3	91	60	55	52	50	48	45	43	42	40	38	35	29
6	83	55	50	45	43	40	37	32	30	28	27	25	20
8	83	55	48	35	28	25	24	23	22	21	20	19	15
10	85	60	50	38	26	22	21	20	19	18	17	16	12
12	87	62	52	42	28	20	15	14	13	13	12	11	10
14	88	63	54	43	33	20	15	12	12	10	10	9	9
16	90	65	55	46	35	21	16	12	11	9	9	8	8
18	100	70	56	46	37	22	17	12	11	9	8	8	8
20	110	75	65	50	38	23	18	13	11	9	8	7	7
22	120	85	70	56	39	26	19	14	11	9	6	6	6
24	128	95	76	60	45	28	20	15	11	8	7	7	7

21OBDG03C ECM Supporting Tables

Initial Supporting table - CylModeDecel

26	135	100	80	62	49	32	22	16	11	8	7	7	7
30	150	103	84	76	54	35	24	17	12	9	7	7	7
40	170	159	121	99	80	52	33	21	14	12	9	7	7
60	320	266	200	167	136	84	53	32	27	19	14	11	10
78	441	344	274	221	182	100	74	45	38	28	18	11	10
97	555	433	344	278	228	140	105	60	55	32	20	11	10

210BDG03C ECM Supporting Tables

Initial Supporting table - CylModeJerk

Description: Crankshaft jerk threshold. Thresholds are a function of rpm and % engine Load.

Value Units: Change in Delta time per cylinder from last cylinder (usec)

Y Units: percent load of max indicated torque (%)

CylModeJerk - Part 1

y/x	400	500	600	700	800	900	1,000	1,100	1,200	1,400	1,600	1,800	2,000
3	5,600	5,100	4,700	2,600	1,700	900	640	510	430	160	150	130	125
6	5,600	5,100	4,700	2,800	1,800	1,200	664	520	450	180	150	130	125
8	5,700	5,200	4,800	3,200	2,100	1,400	885	650	450	180	170	130	125
10	6,900	6,400	5,900	3,600	2,500	1,526	1,000	710	460	280	184	130	135
12	8,000	7,500	7,000	4,000	2,700	1,711	1,100	800	480	300	250	175	140
14	8,000	8,000	8,000	4,605	2,800	1,800	1,200	880	500	325	280	200	143
16	8,000	8,000	8,000	5,000	3,100	2,000	1,400	990	560	370	365	210	148
18	8,000	8,000	8,000	5,500	3,500	2,300	1,600	1,100	700	470	443	250	160
20	8,000	8,000	8,000	6,000	4,300	2,600	1,900	1,300	880	570	526	300	170
22	8,000	8,000	8,000	6,500	4,600	3,100	2,200	1,450	1,043	680	579	342	220
24	8,000	8,000	8,000	7,000	5,500	3,700	2,400	1,700	1,300	800	631	400	240
26	8,000	8,000	8,000	7,500	6,300	4,200	2,800	2,000	1,550	950	644	477	270
30	8,000	8,000	8,000	8,000	7,000	4,700	3,200	2,400	1,716	1,100	789	550	330
40	8,000	8,000	8,000	8,000	7,800	5,200	3,900	3,000	2,200	1,400	1,052	600	500
60	8,000	8,000	8,000	8,000	8,000	6,000	4,800	3,800	2,800	1,900	1,350	800	680
78	8,000	8,000	8,000	8,000	8,000	6,800	5,800	4,500	3,500	2,400	1,950	1,421	900
97	8,000	8,000	8,000	8,000	8,000	7,600	6,600	5,200	4,200	3,300	2,563	1,788	1,200

CylModeJerk - Part 2

y/x	2,200	2,400	2,600	2,800	3,000	3,500	4,000	4,500	5,000	5,500	6,000	6,500	7,000
3	100	80	70	65	60	55	51	48	46	44	42	38	38
6	100	75	60	55	50	45	42	40	38	35	33	30	30
8	110	76	60	50	40	35	33	32	30	28	25	23	23
10	114	82	60	50	40	30	28	25	22	20	18	16	16
12	116	89	73	62	45	34	19	18	17	16	15	14	14
14	118	96	75	65	45	34	23	16	15	13	12	11	11
16	120	108	76	66	45	38	26	18	13	10	10	10	10
18	125	110	82	67	46	42	29	20	15	11	10	10	10
20	130	112	84	68	48	45	32	23	16	12	10	10	8
22	172	116	96	85	63	48	35	25	18	14	10	10	9
24	200	152	120	104	71	51	39	26	20	15	11	10	9

21OBDG03C ECM Supporting Tables

Initial Supporting table - CylModeJerk

26	210	174	150	108	90	57	42	28	21	16	12	10	9
30	260	190	170	120	98	65	46	34	24	18	14	11	10
40	300	290	230	165	145	90	62	41	28	24	19	13	11
60	400	350	280	202	190	144	92	56	40	34	24	16	15
78	650	530	460	360	280	186	124	87	63	47	36	28	20
97	900	640	580	460	370	234	156	109	79	59	45	36	30

21OBDG03C ECM Supporting Tables

Initial Supporting table - DeacCylInversionDecel

Description: Used for P0300 - P0308, Negative Torque can cause crank readings to invert (active cylinders appear weak & deactivated cylinders appear "strong" If deactivated cylinders don't decelerate at least this amount then the crank signal is inverting. Function of speed and load.

Value Units: Delta time per cylinder (usec)
X Unit: RPM
Y Units: percent load of max indicated torque (%)

y/x	800	1,000	1,200	1,600	2,000	2,400	2,600	3,000	3,500
5	-16,384	-16,384	-16,384	-16,384	-16,384	-16,384	-16,384	-16,384	-16,384
10	-16,384	-16,384	-16,384	-16,384	-16,384	-16,384	-16,384	-16,384	-16,384
20	-16,384	-16,384	-16,384	-16,384	-16,384	-16,384	-16,384	-16,384	-16,384
30	-16,384	-16,384	-16,384	-16,384	-16,384	-16,384	-16,384	-16,384	-16,384
40	-16,384	-16,384	-16,384	-16,384	-16,384	-16,384	-16,384	-16,384	-16,384
50	-16,384	-16,384	-16,384	-16,384	-16,384	-16,384	-16,384	-16,384	-16,384
60	-16,384	-16,384	-16,384	-16,384	-16,384	-16,384	-16,384	-16,384	-16,384
80	-16,384	-16,384	-16,384	-16,384	-16,384	-16,384	-16,384	-16,384	-16,384
100	-16,384	-16,384	-16,384	-16,384	-16,384	-16,384	-16,384	-16,384	-16,384

Initial Supporting table - DeacCylInversionJerk

Description: Used for P0300 - P0308, Negative Torque can cause crank readings to invert (active cylinders appear weak & deactivated cylinders appear "strong" If deactivated cylinders don't jerk at least this amount then the crank signal is inverting. Function of speed and load.

Value Units: Change in Delta time per cylinder from last cylinder (usec)

X Unit: RPM

Y Units: percent load of max indicated torque (%)

y/x	800	1,000	1,200	1,600	2,000	2,400	2,600	3,000	3,500
5	-16,384	-16,384	-16,384	-16,384	-16,384	-16,384	-16,384	-16,384	-16,384
10	-16,384	-16,384	-16,384	-16,384	-16,384	-16,384	-16,384	-16,384	-16,384
20	-16,384	-16,384	-16,384	-16,384	-16,384	-16,384	-16,384	-16,384	-16,384
30	-16,384	-16,384	-16,384	-16,384	-16,384	-16,384	-16,384	-16,384	-16,384
40	-16,384	-16,384	-16,384	-16,384	-16,384	-16,384	-16,384	-16,384	-16,384
50	-16,384	-16,384	-16,384	-16,384	-16,384	-16,384	-16,384	-16,384	-16,384
60	-16,384	-16,384	-16,384	-16,384	-16,384	-16,384	-16,384	-16,384	-16,384
80	-16,384	-16,384	-16,384	-16,384	-16,384	-16,384	-16,384	-16,384	-16,384
100	-16,384	-16,384	-16,384	-16,384	-16,384	-16,384	-16,384	-16,384	-16,384

Initial Supporting table - EngineOverSpeedLimit

Description: Engine OverSpeed Limit versus gear

Value Units: RPM

X Unit: Enumeration of transmission gear state (enumeration)

EngineOverSpeedLimit - Part 1

y/x	CeTGRR_e_TransGr1	CeTGRR_e_TransGr2	CeTGRR_e_TransGr3	CeTGRR_e_TransGr4	CeTGRR_e_TransGr5	CeTGRR_e_TransGr6	CeTGRR_e_TransGr9
1	6,700	6,700	6,700	6,700	6,700	6,700	6,700

EngineOverSpeedLimit - Part 2

y/x	CeTGRR_e_TransGr10	CeTGRR_e_TransGrNeutral	CeTGRR_e_TransGrReverse	CeTGRR_e_TransGrPark	CeTGRR_e_TransGr7	CeTGRR_e_TransGr8	
1	6,700	4,000	6,700	4,000	6,700	6,700	

Initial Supporting table - InfrequentRegen

Description: Used for P0300-P0308. Only used on Diesel engines. Initiates a misfire delay when the current combustion mode matches a selection in the table. A value of CeCMBR_i_CombModesMax means not selected.

Value Units: Enumerated value of different combustion modes (enumeration)

X Unit: Current Combustion Mode (enumeration)

InfrequentRegen - Part 1

y/x	0	1	2	3	4	5
1	CeCMBR_i_CombModes Max	CeCMBR_i_CombModes Max	CeCMBR_i_CombModes Max	CeCMBR_i_CombModes Max	CeCMBR_i_CombModes Max	CeCMBR_i_CombModes Max

InfrequentRegen - Part 2

y/x	6	7	8	9	10	11
1	CeCMBR_i_CombModes Max	CeCMBR_i_CombModes Max	CeCMBR_i_CombModes Max	CeCMBR_i_CombModes Max	CeCMBR_i_CombModes Max	CeCMBR_i_CombModes Max

InfrequentRegen - Part 3

y/x	12	13	14	15	16	
1	CeCMBR_i_CombModes Max	CeCMBR_i_CombModes Max	CeCMBR_i_CombModes Max	CeCMBR_i_CombModes Max	CeCMBR_i_CombModes Max	

Initial Supporting table - Number of Normals

Description: Used for P0300-P0308. Number of Normals for the Driveline Ring Filter
After a low level misfire, another misfire may not be detectable until driveline ringing ceases. If no ringing seen, stop filter early.

Value Units: Number of Engine cycles after isolated misfire (Engine cycles)
X Unit: thousands of RPM (rpm/1000)

y/x	0	1	2	3	4	5	6	7	8
1	5	5	5	3	3	3	3	3	3

Initial Supporting table - P00C6 - High Pressure Pump Control Mode timeout

Description: High Pressure Pump Control Mode timeout**Value Units:** Time (Seconds)**X Unit:** Coolant Temperature (Deg C)

y/x	-40	-32	-24	-16	-8	0	8	16	20	24	32	40	48	64	80	96	112
1	5.0	5.0	5.0	4.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0

Supporting table - P00C6 - maximum acceptable counts of fuel rail pressure below KtFHPD_p_HPS_PressFallLoThrsh after High Pressure Start

Description: The maximum acceptable counts of fuel rail pressure below KtFHPD_p_HPS_PressFallLoThrsh after High Pressure Start (HPS) is executed but before engine is in run mode.

Value Units: maximum acceptable counts of fuel rail pressure below KtFHPD_p_HPS_PressFallLoThrsh after High Pressure Start (Count)

X Unit: Coolant Temperature (Deg C)

Y Units: Ethanol Precent (%)

y/x	-40	-32	-24	-16	-8	0	8	16	20	24	32	40	48	64	80	96	112
0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0
13	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0
25	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0
38	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0
50	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0
63	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0
75	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0
88	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0
100	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0

Initial Supporting table - P00C6 - Minimum acceptable value of fuel rail pressure after High Pressure Start

Description: The minimum acceptable value of fuel rail pressure after High Pressure Start (HPS) is executed. This ensures the pressure does not fall off drastically after High Pressure Start (HPS) is executed, but before engine is in run mode.

Value Units: Minimum acceptable value of fuel rail pressure after High Pressure Start (Mpa)

X Unit: Coolant Temperature (Deg C)

Y Units: Ethanol Precent (%)

y/x	-40	-32	-24	-16	-8	0	8	16	20	24	32	40	48	64	80	96	112
0	2.0	2.0	2.0	2.0	1.0	0.7	0.5	0.5	0.5	0.5	0.5	0.5	0.5	0.5	0.5	0.5	0.5
13	2.0	2.0	2.0	2.0	1.0	0.7	0.5	0.5	0.5	0.5	0.5	0.5	0.5	0.5	0.5	0.5	0.5
25	2.0	2.0	2.0	2.0	1.0	0.7	0.5	0.5	0.5	0.5	0.5	0.5	0.5	0.5	0.5	0.5	0.5
38	2.0	2.0	2.0	2.0	1.0	0.7	0.5	0.5	0.5	0.5	0.5	0.5	0.5	0.5	0.5	0.5	0.5
50	2.0	2.0	2.0	2.0	1.0	0.7	0.5	0.5	0.5	0.5	0.5	0.5	0.5	0.5	0.5	0.5	0.5
63	2.0	2.0	2.0	2.0	1.0	0.7	0.5	0.5	0.5	0.5	0.5	0.5	0.5	0.5	0.5	0.5	0.5
75	2.0	2.0	2.0	2.0	1.0	0.7	0.5	0.5	0.5	0.5	0.5	0.5	0.5	0.5	0.5	0.5	0.5
88	2.0	2.0	2.0	2.0	1.0	0.7	0.5	0.5	0.5	0.5	0.5	0.5	0.5	0.5	0.5	0.5	0.5
100	2.0	2.0	2.0	2.0	1.0	0.7	0.5	0.5	0.5	0.5	0.5	0.5	0.5	0.5	0.5	0.5	0.5

Initial Supporting table - P00C6 - Minimum pressure in MPa that will exit High Pressure Start mode and allow fuel delivery**Description:** This calibration is the minimum pressure in MPa that will exit High Pressure Start mode and allow fuel delivery**Value Units:** Minimum pressure in MPa that will exit High Pressure Start mode and allow fuel delivery**X Unit:** Coolant Temperature (Deg C)**Y Units:** Ethanol Precent (%)

y/x	-40	-32	-24	-16	-8	0	8	16	20	24	32	40	48	64	80	96	112
0	5.0	12.0	12.0	8.0	5.5	4.0	2.5	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0
13	5.0	12.0	12.0	8.0	5.5	4.0	2.5	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0
25	5.0	12.0	12.0	8.0	5.5	4.0	2.5	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0
38	5.0	12.0	12.0	8.0	5.5	4.0	2.5	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0
50	5.0	12.0	12.0	8.0	5.5	4.0	2.5	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0
63	5.0	12.0	12.0	8.0	5.5	4.0	2.5	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0
75	5.0	12.0	12.0	8.0	5.5	4.0	2.5	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0
88	5.0	12.0	12.0	8.0	5.5	4.0	2.5	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0
100	5.0	12.0	12.0	8.0	5.5	4.0	2.5	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0

Initial Supporting table - P0420_BestFailingOSCTableB1

Description: This table is a 9x17 table of baseline Best Failing (e.g. threshold converter) OSC times for catalyst Bank 1. The axis' for this table include the average airflow and the catalyst temperature. After OSC is measured for a specific temp and airflow, the BestFailing OSC value is found within this table for the measured temp and airflow and is used along with the OSC_TimeRaw (and the WorstPassing value) to calculate the Normalized Ratio for that specific test. The values in this table are based on the measured OSC for the identified BPU converter that is used for MIL illumination across the specific temp and airflow range for a given program.

y/x	2.00	2.40	2.80	3.20	3.60	4.00	4.40	4.80	5.20	5.60	6.00	6.40	6.80	7.20	7.60	8.00	8.40
550.00	0.99	0.95	0.90	0.86	0.82	0.78	0.73	0.67	0.59	0.50	0.44	0.40	0.38	0.36	0.34	0.33	0.32
600.00	1.02	0.98	0.94	0.89	0.86	0.81	0.76	0.70	0.62	0.52	0.46	0.42	0.40	0.39	0.37	0.36	0.35
650.00	1.07	1.03	0.98	0.94	0.89	0.84	0.79	0.73	0.64	0.54	0.48	0.44	0.42	0.41	0.40	0.39	0.38
700.00	1.11	1.07	1.02	0.98	0.93	0.89	0.84	0.77	0.67	0.56	0.50	0.46	0.45	0.43	0.42	0.41	0.40
750.00	1.17	1.12	1.07	1.02	0.97	0.93	0.88	0.81	0.70	0.59	0.52	0.48	0.47	0.46	0.44	0.43	0.42
800.00	1.21	1.16	1.11	1.06	1.01	0.97	0.92	0.84	0.73	0.62	0.55	0.51	0.50	0.48	0.47	0.46	0.45
850.00	1.26	1.21	1.16	1.11	1.06	1.01	0.96	0.88	0.76	0.65	0.58	0.54	0.52	0.51	0.50	0.48	0.47
900.00	1.29	1.24	1.19	1.15	1.10	1.04	0.99	0.91	0.80	0.69	0.61	0.57	0.55	0.53	0.52	0.51	0.49
950.00	1.32	1.27	1.23	1.19	1.14	1.09	1.03	0.95	0.83	0.71	0.65	0.60	0.58	0.56	0.54	0.53	0.52

Initial Supporting table - P0420_WorstPassingOSCTableB1

Description: This table is a 9x17 table of WorstPassing (e.g. 120k) OSC times for catalyst Bank 1. The axis' for this table include the average airflow and the catalyst temperature. After OSC is measured for a specific temp and airflow, the WorstPassing OSC value is found within this table for the measured temp and airflow and is used along with the OSC_TimeRaw (and the BestFailing OSC value) to calculate the Normalized Ratio for that specific test. The values in this table are based on the measured OSC for the WPA part across the temp and airflow range.

y/x	2.00	2.40	2.80	3.20	3.60	4.00	4.40	4.80	5.20	5.60	6.00	6.40	6.80	7.20	7.60	8.00	8.40
550.00	1.49	1.45	1.40	1.36	1.32	1.28	1.23	1.17	1.09	1.00	0.94	0.90	0.88	0.86	0.84	0.83	0.82
600.00	1.52	1.48	1.44	1.39	1.36	1.30	1.26	1.20	1.12	1.02	0.96	0.92	0.90	0.89	0.87	0.86	0.85
650.00	1.57	1.53	1.48	1.44	1.39	1.34	1.29	1.23	1.14	1.04	0.98	0.94	0.92	0.91	0.90	0.89	0.88
700.00	1.61	1.57	1.52	1.48	1.43	1.39	1.34	1.27	1.17	1.07	1.00	0.96	0.95	0.93	0.92	0.91	0.90
750.00	1.67	1.62	1.57	1.52	1.47	1.43	1.38	1.31	1.20	1.09	1.02	0.98	0.97	0.96	0.94	0.93	0.92
800.00	1.71	1.66	1.61	1.56	1.51	1.47	1.42	1.34	1.23	1.12	1.05	1.01	1.00	0.98	0.97	0.96	0.95
850.00	1.76	1.71	1.66	1.61	1.56	1.51	1.46	1.38	1.26	1.15	1.08	1.04	1.02	1.01	1.00	0.98	0.97
900.00	1.79	1.74	1.69	1.65	1.60	1.54	1.49	1.41	1.30	1.19	1.11	1.07	1.05	1.03	1.02	1.01	0.99
950.00	1.82	1.77	1.73	1.69	1.64	1.59	1.53	1.45	1.33	1.21	1.15	1.10	1.08	1.06	1.04	1.03	1.02

Initial Supporting table - Pair_SCD_Decel

Description: Used for P0300 - P0308, Multplier to SCD_Decel to account for different pattern of Paired cylinder misfire. Multipliers are a function of engine rpm and % engine Load.

Value Units: multiplier

X Unit: RPM

Y Units: percent load of max indicated torque (%)

y/x	400	550	700	800	900	1,000	1,200	1,400	1,600
2	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00
8	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00
12	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00
16	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00
20	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00
24	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00
30	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00
60	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00
100	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00

Initial Supporting table - Pair_SCD_Jerk

Description: Used for P0300 - P0308, Multitplier to P0300_SCD_Jerk to account for different pattern of Paired cylinder misfire. Multipliers are a function of engine rpm and % engine Load.

Value Units: multiplier

X Unit: RPM

Y Units: percent load of max indicated torque (%)

y/x	400	550	700	800	900	1,000	1,200	1,400	1,600
2	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00
8	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00
12	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00
16	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00
20	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00
24	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00
30	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00
60	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00
100	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00

210BDG03C ECM Supporting Tables

Initial Supporting table - PairCylModeDecel

Description: Used for P0300 - P0308, Multitplier to Cyl Mode Deceleration to account for different pattern of Paired cylinder misfire. Multipliers are a function of engine rpm and % engine Load.

Value Units: multiplier

X Unit: RPM

Y Units: percent load of max indicated torque (%)

y/x	500	700	900	1,100	1,200	1,400	1,600	1,800	2,000	2,200	2,400	2,600	3,000	4,000	5,000	6,000	6,500
2	1.00	1.00	1.25	1.05	0.95	0.98	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00
8	0.83	0.83	1.25	1.05	0.95	0.88	0.80	0.78	0.76	0.88	1.00	1.00	1.00	1.00	1.00	1.00	1.00
12	0.86	0.86	1.20	0.97	0.85	0.80	0.75	0.75	0.76	0.71	0.65	0.63	0.63	0.78	0.83	0.88	0.90
16	0.85	0.85	1.20	0.97	0.85	0.80	0.75	0.75	0.76	0.71	0.65	0.63	0.63	0.78	0.83	0.88	0.90
20	0.89	0.89	1.20	0.93	0.80	0.75	0.70	0.73	0.75	0.75	0.75	0.75	0.75	0.78	0.83	0.88	0.90
24	0.91	0.91	1.10	0.90	0.80	0.85	0.90	0.80	0.70	0.73	0.76	0.76	0.76	0.75	0.81	0.87	0.90
30	1.00	1.00	1.10	0.90	0.80	0.80	0.80	0.77	0.75	0.77	0.80	0.77	0.75	0.75	0.85	0.95	1.00
60	1.00	1.00	1.10	0.90	0.80	0.75	0.70	0.73	0.75	0.73	0.70	0.73	0.76	0.80	0.88	0.96	1.00
100	1.00	1.00	1.00	0.87	0.80	0.75	0.70	0.73	0.75	0.73	0.70	0.73	0.76	0.80	0.88	0.96	1.00

210BDG03C ECM Supporting Tables

Initial Supporting table - PairCylModeJerk

Description: Used for P0300 - P0308, Multitplier to P0300_CylModeJerk to account for different pattern of Paired cylinder misfire. Multipliers are a function of engine rpm and % engine Load.

Value Units: multiplier

X Unit: RPM

Y Units: percent load of max indicated torque (%)

y/x	500	700	900	1,100	1,200	1,400	1,600	1,800	2,000	2,200	2,400	2,600	3,000	4,000	5,000	6,000	6,500
2	1.00	1.00	0.78	0.93	1.00	1.00	1.00	1.00	1.00	0.90	0.80	0.75	0.73	0.90	0.90	0.90	0.90
8	1.00	1.00	1.08	1.06	1.05	1.02	1.00	1.00	1.00	0.91	0.82	0.81	0.82	0.90	0.90	0.90	0.90
12	0.95	0.95	1.08	1.08	1.08	1.02	0.95	0.98	1.00	0.92	0.85	0.85	0.86	0.90	0.90	0.90	0.90
16	0.86	0.86	1.10	1.10	1.10	1.02	0.95	0.98	1.00	0.94	0.88	0.89	0.91	0.95	0.97	0.99	1.00
20	0.82	0.82	1.00	1.07	1.10	1.02	0.95	0.92	0.90	0.90	0.90	0.90	0.91	0.95	0.97	0.99	1.00
24	0.80	0.80	1.00	1.00	1.00	0.95	0.90	0.90	0.90	0.90	0.90	0.87	0.85	0.90	0.94	0.98	1.00
30	0.80	0.80	0.97	0.92	0.90	0.85	0.80	0.85	0.90	0.90	0.90	0.87	0.82	0.70	0.74	0.78	0.80
60	0.80	0.80	0.97	0.89	0.85	0.77	0.70	0.73	0.75	0.83	0.90	0.87	0.82	0.70	0.80	0.90	0.95
100	0.80	0.80	0.97	0.89	0.85	0.77	0.70	0.73	0.75	0.83	0.90	0.87	0.82	0.70	0.80	0.90	0.95

Initial Supporting table - Random_SCD_Decel

Description: Used for P0300 - P0308, Multplier to SCD_Decel to account for different pattern of light level misfire. Multipliers are a function of engine rpm and % engine Load.

Value Units: multiplier

X Unit: RPM

Y Units: percent load of max indicated torque (%)

y/x	400	550	700	800	900	1,000	1,200	1,400	1,600
2	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00
8	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00
12	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00
16	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00
20	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00
24	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00
30	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00
60	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00
100	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00

Initial Supporting table - Random_SCD_Jerk

Description: Used for P0300 - P0308, Multitplier to Random_SCD_Jerk to account for different pattern of light level misfire. Multipliers are a function of engine rpm and % engine Load.

Value Units: multiplier

X Unit: RPM

Y Units: percent load of max indicated torque (%)

y/x	400	550	700	800	900	1,000	1,200	1,400	1,600
2	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00
8	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00
12	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00
16	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00
20	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00
24	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00
30	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00
60	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00
100	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00

Initial Supporting table - RandomAFM_Decl

Description: Used for P0300 - P0308, Multplier to Cylinder_Decel while in CylnDer Deactivation mode to account for different pattern of light level misfire. Multipliers are a function of engine rpm and % engine Load.

Value Units: multiplier

X Unit: RPM

Y Units: percent load of max indicated torque (%)

y/x	800	1,000	1,200	1,600	2,000	2,400	2,600	3,000	3,500
5	8.00	8.00	8.00	8.00	8.00	8.00	8.00	8.00	8.00
10	6.00	8.00	8.00	8.00	8.00	8.00	8.00	8.00	8.00
20	6.00	8.00	8.00	8.00	8.00	8.00	8.00	8.00	8.00
30	6.00	8.00	8.00	8.00	8.00	8.00	8.00	8.00	8.00
40	6.00	8.00	8.00	8.00	8.00	8.00	8.00	8.00	8.00
50	6.00	8.00	8.00	8.00	8.00	8.00	8.00	8.00	8.00
60	6.00	8.00	8.00	8.00	8.00	8.00	8.00	8.00	8.00
80	6.00	8.00	8.00	8.00	8.00	8.00	8.00	8.00	8.00
100	6.00	7.00	8.00	8.00	8.00	8.00	8.00	8.00	8.00

Initial Supporting table - RandomAFM_Jerk

Description: Used for P0300 - P0308, Multplier to Cylinder_Jerk while in CylnDer Deactivation mode to account for different pattern of light level misfire. Multipliers are a function of engine rpm and % engine Load.

Value Units: multiplier

X Unit: RPM

Y Units: percent load of max indicated torque (%)

y/x	800	1,000	1,200	1,600	2,000	2,400	2,600	3,000	3,500
5	4.00	9.00	10.00	10.00	10.00	10.00	10.00	10.00	10.00
10	3.50	9.00	10.00	10.00	10.00	10.00	10.00	10.00	10.00
20	3.00	8.00	10.00	10.00	10.00	10.00	10.00	10.00	10.00
30	3.00	5.00	10.00	10.00	10.00	10.00	10.00	10.00	10.00
40	3.00	4.00	10.00	10.00	10.00	10.00	10.00	10.00	10.00
50	3.00	4.00	10.00	10.00	10.00	10.00	10.00	10.00	10.00
60	3.00	4.00	6.00	10.00	10.00	10.00	10.00	10.00	10.00
80	3.00	4.00	6.00	10.00	10.00	10.00	10.00	10.00	10.00
100	2.80	3.60	6.00	10.00	10.00	10.00	10.00	10.00	10.00

21OBDG03C ECM Supporting Tables

Initial Supporting table - RandomCylModDecel

Description: Used for P0300 - P0308. Multiplier to CylMode_Decel. account for different pattern of light level misfire. Multipliers are a function of engine rpm and % engine Load.

Value Units: Multiplier

X Unit: RPM

Y Units: percent load of max indicated torque (%)

y/x	500	700	900	1,100	1,200	1,400	1,600	1,800	2,000	2,200	2,400	2,600	3,000	4,000	5,000	6,000	6,500
2	1.50	1.50	1.81	1.54	1.40	1.30	1.20	1.20	1.20	1.23	1.25	1.27	1.33	1.50	1.42	1.34	1.30
8	1.60	1.60	1.80	1.33	1.10	1.11	1.12	1.13	1.15	1.20	1.25	1.27	1.33	1.50	1.42	1.34	1.30
12	1.80	1.80	2.00	1.53	1.30	1.21	1.12	1.16	1.20	1.23	1.25	1.27	1.35	1.60	1.48	1.36	1.30
16	2.00	2.00	2.00	1.57	1.35	1.33	1.30	1.44	1.58	1.56	1.55	1.49	1.48	1.70	1.54	1.38	1.30
20	2.00	2.00	2.00	1.67	1.50	1.45	1.40	1.52	1.64	1.62	1.60	1.58	1.62	1.94	1.68	1.43	1.30
24	2.00	2.00	2.00	1.80	1.70	1.70	1.70	1.67	1.64	1.72	1.79	1.77	1.79	2.00	1.77	1.54	1.43
30	2.00	2.00	2.00	1.80	1.70	1.77	1.85	1.85	1.85	1.92	2.00	1.94	1.91	2.00	1.83	1.66	1.57
60	2.00	2.00	2.00	1.80	1.70	1.77	1.85	1.85	1.85	1.92	2.00	1.94	1.86	1.82	1.89	1.96	2.00
100	2.00	2.00	2.00	1.80	1.70	1.77	1.85	1.85	1.85	1.92	2.00	1.94	1.86	1.82	1.89	1.96	2.00

Initial Supporting table - RandomCylModJerk

Description: Used for P0300 - P0308, Multiplier to CylMode_Jerk to account for different pattern of light level misfire. Multipliers are a function of engine rpm and % engine Load.

Value Units: multiplier

X Unit: RPM

Y Units: percent load of max indicated torque (%)

y/x	500	700	900	1,100	1,200	1,400	1,600	1,800	2,000	2,200	2,400	2,600	3,000	4,000	5,000	6,000	6,500
2	1.00	1.00	1.00	1.07	1.10	1.15	1.20	1.10	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00
8	1.00	1.00	1.00	1.00	1.00	1.10	1.20	1.10	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00
12	1.28	1.28	1.15	1.22	1.25	1.13	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00
16	1.30	1.30	1.25	1.25	1.25	1.13	1.00	1.05	1.10	1.05	1.00	1.00	1.00	1.00	1.00	1.00	1.00
20	1.30	1.30	1.00	1.07	1.10	1.05	1.00	1.15	1.30	1.23	1.16	1.13	1.10	1.08	1.05	1.02	1.00
24	1.30	1.30	1.00	1.00	1.00	1.00	1.00	1.00	1.01	1.03	1.06	1.06	1.07	1.09	1.07	1.06	1.05
30	1.30	1.30	1.20	1.07	1.00	1.00	1.01	1.00	1.00	1.03	1.06	1.03	1.01	1.06	1.08	1.09	1.10
60	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.10	1.18	1.10	1.14	1.19	1.21
100	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.10	1.18	1.10	1.14	1.19	1.21

Initial Supporting table - RandomRevModDecl

Description: Used for P0300 - P0308, Multitplier to RevMode_Decel to account for different pattern of light level misfire. Multipliers are a function of engine rpm and % engine Load.

Value Units: multiplier

X Unit: RPM

Y Units: percent load of max indicated torque (%)

y/x	3,000	3,500	4,000	4,500	5,000	5,500	6,000	7,000	8,000
2	5.00	5.00	5.00	5.00	5.00	5.00	5.00	5.00	5.00
8	5.00	5.00	5.00	5.00	5.00	5.00	5.00	5.00	5.00
12	5.00	5.00	5.00	5.00	5.00	5.00	5.00	5.00	5.00
16	5.00	5.00	5.00	5.00	5.00	5.00	5.00	5.00	5.00
20	5.00	5.00	5.00	5.00	5.00	5.00	5.00	5.00	5.00
24	5.00	5.00	5.00	5.00	5.00	5.00	5.00	5.00	5.00
30	5.00	5.00	5.00	5.00	5.00	5.00	5.00	5.00	5.00
60	5.00	5.00	5.00	5.00	5.00	5.00	5.00	5.00	5.00
100	5.00	5.00	5.00	5.00	5.00	5.00	5.00	5.00	5.00

21OBDG03C ECM Supporting Tables

Initial Supporting table - RepetSnapDecayAdjst

Description: Used for P0300 - P0308, If misfire is present in consecutive engine cycles, this multiplier is applied to the misfire jerk threshold and compared to a crankshaft snap value after the misfire has taken place.. Table lookup as a function of engine rpm.

Value Units: multiplier

X Unit: RPM

y/x	700	900	1,200	1,600	2,000	2,400	2,800	4,000	6,500
1	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00

21OBDG03C ECM Supporting Tables

Initial Supporting table - RevMode_Decel

Description: Used for P0300-P0308. Crankshaft decel threshold. Thresholds are a function of rpm and % engine Load.

Value Units: Delta time between revolutions (usec)

X Unit: RPM

Y Units: percent load of max indicated torque (%)

y/x	1,100	1,200	1,400	1,600	1,800	2,000	2,200	2,400	2,600	2,800	3,000	3,500	4,000	4,500	5,000	5,500	6,000	6,500	7,000
3	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767
6	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767
8	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767
10	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767
12	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767
14	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767
16	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767
18	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767
20	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767
22	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767
24	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767
26	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767
30	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767
40	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767
60	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767
78	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767
97	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767

Initial Supporting table - Ring Filter**Description:** Used for P0300-P0308. Driveline Ring Filter

After a low level misfire, another misfire may not be detectable until driveline ringing ceases. If no ringing seen, stop filter early.

Value Units: Number of Engine cycles after isolated misfire (Engine cycles)**X Unit:** thousands of RPM (rpm/1000)

y/x	0	1	2	3	4	5	6	7	8
1	4	4	4	7	7	7	7	7	7

21OBDG03C ECM Supporting Tables

Initial Supporting table - SCD_Decel

Description: Used for P0300-P0308 Crankshaft decel threshold. SCD mode uses smaller windows near TDC. Thresholds are a function of rpm and % engine Load.

Value Units: Delta time per cylinder (usec)

X Unit: RPM

Y Units: percent load of max indicated torque (%)

y/x	400	500	600	700	800	900	1,000	1,100	1,200	1,400	1,600	1,800	2,000
3	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767
6	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767
8	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767
10	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767
12	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767
14	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767
16	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767
18	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767
20	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767
22	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767
24	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767
26	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767
30	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767
40	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767
60	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767
78	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767
97	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767

21OBDG03C ECM Supporting Tables

Initial Supporting table - SCD_Jerk

Description: Used for P0300-P0308. Crankshaft jerk threshold. SCD mode uses smaller windows near TDC. Thresholds are a function of rpm and % engine Load.

Value Units: Change in Delta time per cylinder from last cylinder (usec)

X Unit: RPM

Y Units: percent load of max indicated torque (%)

y/x	400	500	600	700	800	900	1,000	1,100	1,200	1,400	1,600	1,800	2,000
3	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767
6	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767
8	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767
10	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767
12	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767
14	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767
16	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767
18	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767
20	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767
22	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767
24	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767
26	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767
30	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767
40	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767
60	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767
78	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767
97	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767

Initial Supporting table - SnapDecayAfterMisfire

Description: Used for P0300 - P0308, multiplier times the ddt_jerk value used used to detect misfire at that speed and load to see if size of disturbance has died down as expected of real misfire. Table lookup as a function of engine rpm and trans gear ratio.

Value Units: multiplier

X Unit: RPM

Y Units: gear ratio

y/x	700	900	1,200	1,600	2,000	2,400	2,800	4,000	6,500
0	4.90	4.90	4.90	4.20	4.50	4.00	3.60	5.00	5.00
0	4.90	4.90	4.90	4.50	4.50	4.00	3.60	5.00	5.00
1	3.50	3.50	3.50	3.80	5.50	6.00	4.31	5.20	5.00
1	3.70	3.70	3.70	3.70	3.20	3.20	3.65	3.20	5.00
1	3.70	3.70	3.70	3.15	3.31	3.60	4.00	3.20	5.00
2	4.60	4.70	5.02	4.15	3.80	3.70	4.40	3.50	6.20
2	4.60	4.70	5.02	4.15	3.80	3.70	4.40	3.50	6.20
4	4.60	4.70	5.02	4.15	3.80	3.70	4.40	3.50	6.20
8	4.60	4.70	5.02	4.15	3.80	3.70	4.40	3.50	6.20

210BDG03C ECM Supporting Tables

Initial Supporting table - TOSSRoughRoadThres

Description: Used for P0300-P0308. Only used if Rough Road source = TOSS: dispersion value on Transmission Output Speed Sensor above which rough road is indicated present

Value Units: change in rpm per sec (rpm)

X Unit: Engine Speed (RPM)

Y Units: Transmission Speed (RPM)

y/x	600	800	1,000	1,200	1,400	1,600	1,800	2,000	2,200	2,400	2,600	2,800	3,000	3,500	4,000	4,500	5,000	5,500	6,000
100	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0
200	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0
300	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0
400	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0
500	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0
600	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0
700	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0
800	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0
900	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0
1,000	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0
1,100	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0
1,200	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0
1,300	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0
1,400	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0

Initial Supporting table - WaitToStart

Description: Used for P0300-P0308. Number of engine cycles to delay if diesel engine is cranked before wait to start lamp is extinguished. This lookup table determines the delay length by taking into account the coolant temperature.

Value Units: Number of Engine Cycles (integer)

X Unit: Engine Coolant (deg C)

y/x	-20	-10	0	10	20	30	40	50	60
1	0	0	0	0	0	0	0	0	0

Initial Supporting table - WSSRoughRoadThres

Description: Used for P0300-P0308. Only used if Wheel speed from ABS is used. If difference between wheel speed readings is larger than this limit, rough road is present

Value Units: acceleration

X Unit: Vehicle Speed (KPH)

y/x	0	12	24	36	48	60	72	85	97	109	121	133	145	157	169	181	193
1	1.05005	1.05005	1.05005	1.05005	1.05005	1.05005	1.05005	1.05005	1.05005	1.05005	1.05005	1.05005	1.05005	1.05005	1.05005	1.05005	1.05005

Initial Supporting table - ZeroTorqueAFM

Description: Used for P0300-P0308. Zero torque engine load while in Active Fuel Management. %of Max Brake Torque along the Neutral rev line, as a function of RPM and Baro

Value Units: Percent of Maximum Brake torque (%)

X Unit: RPM

Y Units: Barometric Pressure (kPa)

ZeroTorqueAFM - Part 1

y/x	400	500	600	700	800	900	1,000	1,100	1,200	1,400	1,600	1,800	2,000
65	5.00	5.00	5.00	5.00	5.00	5.00	5.00	5.00	5.00	5.00	5.00	5.00	5.00
75	5.00	5.00	5.00	5.00	5.00	5.00	5.00	5.00	5.00	5.00	5.00	5.00	5.00
85	5.00	5.00	5.00	5.00	5.00	5.00	5.00	5.00	5.00	5.00	5.00	5.00	5.00
95	5.00	5.00	5.00	5.00	5.00	5.00	5.00	5.00	5.00	5.00	5.00	5.00	5.00
105	5.00	5.00	5.00	5.00	5.00	5.00	5.00	5.00	5.00	5.00	5.00	5.00	5.00

ZeroTorqueAFM - Part 2

y/x	2,200	2,400	2,600	2,800	3,000	3,500	4,000	4,500	5,000	5,500	6,000	6,500	7,000
65	5.00	5.00	5.00	5.00	5.00	5.00	5.00	5.00	5.00	6.13	7.56	8.99	10.42
75	5.00	5.00	5.00	5.00	5.00	5.00	5.00	5.00	5.00	6.13	7.56	8.99	10.42
85	5.00	5.00	5.00	5.00	5.00	5.00	5.00	5.00	5.00	6.13	7.56	8.99	10.42
95	5.00	5.00	5.00	5.00	5.00	5.00	5.00	5.00	5.00	6.13	7.56	8.99	10.42
105	5.00	5.00	5.00	5.00	5.00	5.00	5.00	5.00	5.00	6.13	7.56	8.99	10.42

Initial Supporting table - ZeroTorqueEngLoad

Description: Used for P0300-P0308. %of Max Brake Torque that represents Zero Brake torque along the Neutral rev line, as a function of RPM and Baro

Value Units: Percent of Maximum Brake torque (%)

X Unit: RPM

Y Units: Barometric Pressure (kPa)

ZeroTorqueEngLoad - Part 1

y/x	400	500	600	700	800	900	1,000	1,100	1,200	1,400	1,600	1,800	2,000
65	-6.00	-6.00	-6.00	-6.00	-6.00	-6.00	-5.00	-4.00	-4.00	-4.00	-3.00	-2.00	-1.00
75	-6.00	-6.00	-6.00	-6.00	-6.00	-6.00	-5.00	-4.00	-4.00	-4.00	-3.00	-2.00	-1.00
85	-6.00	-6.00	-6.00	-6.00	-6.00	-6.00	-5.00	-4.00	-4.00	-4.00	-3.00	-2.00	-1.00
95	-6.00	-6.00	-6.00	-6.00	-6.00	-6.00	-5.00	-4.00	-4.00	-4.00	-3.00	-2.00	-1.00
105	-6.00	-6.00	-6.00	-6.00	-6.00	-6.00	-5.00	-4.00	-4.00	-4.00	-3.00	-2.00	-1.00

ZeroTorqueEngLoad - Part 2

y/x	2,200	2,400	2,600	2,800	3,000	3,500	4,000	4,500	5,000	5,500	6,000	6,500	7,000
65	0.00	0.00	0.00	0.00	0.00	2.25	4.50	6.75	9.00	11.25	13.50	15.75	18.00
75	0.00	0.00	0.00	0.00	0.00	2.25	4.50	6.75	9.00	11.25	13.50	15.75	18.00
85	0.00	0.00	0.00	0.00	0.00	2.25	4.50	6.75	9.00	11.25	13.50	15.75	18.00
95	0.00	0.00	0.00	0.00	0.00	2.25	4.50	6.75	9.00	11.25	13.50	15.75	18.00
105	0.00	0.00	0.00	0.00	0.00	2.25	4.50	6.75	9.00	11.25	13.50	15.75	18.00

Initial Supporting table - Closed Loop Enable Clarification - KaFCLP_U_SlphrIntglOfst_Thrsh

Description: Integral Offset voltage thresholds (bank and cell specific cals) used with KeFCLP_Pct_CatAccuSlphrPostDsbl to check for sulphur poisoning.

Value Units: millivolts

X Unit: Post Catalyst Number

y/x	CiOXYR_O2_PostCat1	CiOXYR_O2_PostCat2
CiFCLP_Decel	2,048	2,048
CiFCLP_Idle	2,048	2,048
CiFCLP_Cruise	2,048	2,048
CiFCLP_LightAccel	2,048	2,048
CiFCLP_HeavyAccel	2,048	2,048

Initial Supporting table - Closed Loop Enable Clarification - KcFCLP_Cnt_O2RdyCyclesThrsh**Description:** Number of times a post oxygen sensor value must be in range before declaring it ready**Value Units:** Time (events * 12.5 milliseconds)

y/x	1
1	10

Initial Supporting table - Closed Loop Enable Clarification - KcFULC_O2_SensorReadyEvents**Description:** Number of times a pre oxygen sensor value must be in range before declaring it ready**Value Units:** Time (events * 12.5 milliseconds)

y/x	1
1	10

Initial Supporting table - Closed Loop Enable Clarification - KeEOSD_U_RichThrsh**Description:** The oxygen sensor voltage above which a sensor will be considered failing during a Rich Test.**Value Units:** Volts

y/x	1
1	1,050

Initial Supporting table - Closed Loop Enable Clarification - KeFCLP_dm_IntegrationAirflowMax**Description:** Maximum allowed estimated airflow for post O2 integral terms to be updated.**Value Units:** Grams per Second

y/x	1
1	512

Initial Supporting table - Closed Loop Enable Clarification - KeFCLP_Pct_CatAccuSlphrPostDsbl**Description:** Sulphur percent threshold above which post integral learning is disabled if the threshold criteria KaFCLP_U_SlphrIntglOfst_Thrsh is also met.**Value Units:** Percent

y/x	1
1	255

Initial Supporting table - Closed Loop Enable Clarification - KeFCLP_T_IntegrationCatalystMax**Description:** Maximum allowed estimated catalytic converter temperature for post O2 integral terms to be updated.**Value Units:** Celcius

y/x	1
1	930

Initial Supporting table - Closed Loop Enable Clarification - KeFCLP_T_IntegrationCatalystMin

Description: Minimum allowed estimated catalytic converter temperature to begin using post O2 integration correction terms. Converter temperature must remain above this threshold to ramp-in the post O2 integration adjustments. Once the ramp-in has started, a converter temperature below this threshold will freeze the ramp-in multiplier. Post O2 integration will not be allowed below this converter temperature

Value Units: Celcius

y/x	1
1	550

Initial Supporting table - Closed Loop Enable Clarification - KeFULC_T_WRAF_SensorReadyThrsh**Description:** Pumping cell temperature threshold above which the wideband oxygen sensor will be considered ready for use**Value Units:** Degrees Celcius

y/x	1
1	700

Initial Supporting table - Closed Loop Enable Clarification - KeWRSC_T_HtrCntrlCL**Description:** WRAF heater temperature enabling threshold for transition from Open Loop to Closed Loop**Value Units:** Degrees Celcius

y/x	1
1	628

Initial Supporting table - Closed Loop Enable Clarification - KeWRSI_T_PumpCurrentEnable	
Description: WRAF heater temperature threshold for enabling the sensor pump current	
Value Units: Degrees Celcius	
y/x	1
1	628

Initial Supporting table - Closed Loop Enable Clarification - KfFCLL_T_AdaptiveLoCoolant	
Description: LTM learning is inhibited if the engine coolant temperature is below this calibration.	
Value Units: Degrees Celcius	
y/x	1
1	40

Initial Supporting table - Closed Loop Enable Clarification - KfFCLP_U_O2ReadyThrshLo	
Description: Voltage limit checked against when determining if a post converter oxygen sensor is in range	
Value Units: millivolts	
y/x	1
1	1,100

Initial Supporting table - Closed Loop Enable Clarification - KfFULC_U_O2_SensorReadyThrshLo

Description: Voltage limit checked against when determining if a pre converter oxygen sensor is in range

Value Units: millivolts

y/x	1
1	1,250

Initial Supporting table - Closed Loop Enable Clarification - KtFCLL_p_AdaptiveLowMAP_Limit**Description:** Long term fuel learning is disabled below this MAP limit as a function of barometric pressure.**Value Units:** KPa**X Unit:** KPa

y/x	65	70	75	80	85	90	95	100	105
1	14.0	14.0	14.0	14.5	15.0	15.5	16.0	16.0	16.0

Initial Supporting table - Closed Loop Enable Clarification - KtFCLP_t_PostIntglDisableTime**Description:** Disable integral offset after engine start for this amount of time as a function of start up coolant temperature.**Value Units:** Time in seconds**X Unit:** Degrees Celcius

y/x	-40	-29	-18	-6	5	16	28	39	50	61	73	84	95	106	118	129	140
1	400.0	400.0	400.0	275.0	150.0	150.0	150.0	150.0	150.0	100.0	50.0	10.0	10.0	10.0	10.0	10.0	10.0

Initial Supporting table - Closed Loop Enable Clarification - KtFCLP_t_PostIntglRamplnTime

Description: Time required to ramp integral offset to desired value as a function of start up coolant temperature.

Value Units: Time in seconds

X Unit: Degrees Celcius

y/x	-40	-29	-18	-6	5	16	28	39	50	61	73	84	95	106	118	129	140
1	50.0	50.0	50.0	50.0	50.0	50.0	50.0	50.0	40.0	30.0	20.0	10.0	10.0	10.0	10.0	10.0	10.0

Initial Supporting table - Closed Loop Enable Clarification - KtFSTA_t_ClosedLoopAutostart

Description: Engine run time following an autostart, as a function of begin run coolant, which must be exceeded to enable CLOSED LOOP.

Value Units: Time in seconds

X Unit: Degrees Celcius

y/x	-40	-28	-16	-4	8	20	32	44	56	68	80	92	104	116	128	140	152
1	100.0	100.0	100.0	55.0	19.0	18.0	18.0	18.0	18.0	18.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0

Initial Supporting table - Closed Loop Enable Clarification - KtFSTA_t_ClosedLoopTime

Description: Engine run time, as a function of startup coolant temperature, which must be exceeded to enable CLOSED LOOP.

Value Units: Time in seconds

X Unit: Degrees Celcius

y/x	-40	-28	-16	-4	8	20	32	44	56	68	80	92	104	116	128	140	152
1	260.0	260.0	100.0	55.0	21.0	21.0	21.0	21.0	21.0	21.0	0.0	0.0	5.0	10.0	10.0	10.0	10.0

Initial Supporting table - P0442 Volatility Time as a Function of Estimate of Ambient Temperature
Description: EONV volatility time as a function of estimated ambient temperature

Value Units: Volatility time (seconds)

X Unit: Estimated Ambient Temperature (Deg C)

y/x	-10	-4	1	7	13	18	24	29	35	41	46	52	58	63	69	74	80
1	15	15	15	15	30	56	105	300	500	500	500	500	500	500	500	500	500

Initial Supporting table - P0442 Engine Off Time Before Vehicle Off Maximum as a Function of Estimated Ambient Temperature
Description: Maximum engine off time before vehicle off time as a function of estimated ambient temperature (EAT)

Value Units: Maximum Engine Off Time Before Vehicle Off Time (seconds)

X Unit: Estimated Ambient Temperature (Deg C)

y/x	-10	-4	1	7	13	18	24	29	35	41	46	52	58	63	69	74	80
1	44	44	44	44	68	82	105	153	320	480	480	480	480	480	480	480	480

Initial Supporting table - P0442 EONV Pressure Threshold (Pascals)

Description: EONV pressure threshold as a function of fuel level and estimated ambient temperature (EAT)

Value Units: EONV Pressure Threshold (Pascals)

X Unit: Fuel Level (percent) from 0 to 100 with step size 6.25

Y Units: Estimated Ambient Temperature (deg C) from -10 to 80 with step size 5.625

y/x	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17
1	-292.1	-292.1	-292.1	-292.1	-291.7	-288.7	-284.1	-277.3	-266.8	-252.5	-235.2	-216.7	-198.0	-179.8	-162.7	-147.9	-147.9
2	-292.1	-292.1	-292.1	-292.1	-291.7	-288.7	-284.1	-277.3	-266.8	-252.5	-235.2	-216.7	-198.0	-179.8	-162.7	-147.9	-147.9
3	-292.1	-292.1	-292.1	-292.1	-291.7	-288.7	-284.1	-277.3	-266.8	-252.5	-235.2	-216.7	-198.0	-179.8	-162.7	-147.9	-147.9
4	-292.1	-292.1	-292.1	-292.1	-291.7	-288.7	-284.1	-277.3	-266.8	-252.5	-235.2	-216.7	-198.0	-179.8	-162.7	-147.9	-147.9
5	-292.1	-292.1	-292.1	-292.1	-291.7	-288.7	-284.1	-277.3	-266.8	-252.5	-235.2	-216.7	-198.0	-179.8	-162.7	-147.9	-147.9
6	-292.1	-292.1	-292.1	-292.1	-291.7	-288.7	-284.1	-277.3	-266.8	-252.5	-235.2	-216.7	-198.0	-179.8	-162.7	-147.9	-147.9
7	-292.1	-292.1	-292.1	-292.1	-291.7	-288.7	-284.1	-277.3	-266.8	-252.5	-235.2	-216.7	-198.0	-179.8	-162.7	-147.9	-147.9
8	-292.1	-292.1	-292.1	-292.1	-291.7	-288.7	-284.1	-277.3	-266.8	-252.5	-235.2	-216.7	-198.0	-179.8	-162.7	-147.9	-147.9
9	-292.1	-292.1	-292.1	-292.1	-291.7	-288.7	-284.1	-277.3	-266.8	-252.5	-235.2	-216.7	-198.0	-179.8	-162.7	-147.9	-147.9
10	-292.1	-292.1	-292.1	-292.1	-291.7	-288.7	-284.1	-277.3	-266.8	-252.5	-235.2	-216.7	-198.0	-179.8	-162.7	-147.9	-147.9
11	-292.1	-292.1	-292.1	-292.1	-291.7	-288.7	-284.1	-277.3	-266.8	-252.5	-235.2	-216.7	-198.0	-179.8	-162.7	-147.9	-147.9
12	-292.1	-292.1	-292.1	-292.1	-291.7	-288.7	-284.1	-277.3	-266.8	-252.5	-235.2	-216.7	-198.0	-179.8	-162.7	-147.9	-147.9
13	-292.1	-292.1	-292.1	-292.1	-291.7	-288.7	-284.1	-277.3	-266.8	-252.5	-235.2	-216.7	-198.0	-179.8	-162.7	-147.9	-147.9
14	-292.1	-292.1	-292.1	-292.1	-291.7	-288.7	-284.1	-277.3	-266.8	-252.5	-235.2	-216.7	-198.0	-179.8	-162.7	-147.9	-147.9
15	-292.1	-292.1	-292.1	-292.1	-291.7	-288.7	-284.1	-277.3	-266.8	-252.5	-235.2	-216.7	-198.0	-179.8	-162.7	-147.9	-147.9
16	-292.1	-292.1	-292.1	-292.1	-291.7	-288.7	-284.1	-277.3	-266.8	-252.5	-235.2	-216.7	-198.0	-179.8	-162.7	-147.9	-147.9
17	-292.1	-292.1	-292.1	-292.1	-291.7	-288.7	-284.1	-277.3	-266.8	-252.5	-235.2	-216.7	-198.0	-179.8	-162.7	-147.9	-147.9

Initial Supporting table - P0496 Purge Valve Leak Test Engine Vacuum Test Time (Cold Start) as a Function of Fuel Level
Description: Purge valve leak test engine vacuum test time as a function of fuel level

Value Units: Purge Valve Leak Test Engine Vacuum Test Time (seconds)

X Unit: Fuel Level (percent)

y/x	0	6	12	19	25	31	37	44	50	56	62	69	75	81	87	94	100
1	55	53	52	51	49	48	47	46	45	44	43	42	41	40	39	38	37

Initial Supporting table - Cool Down Diagnostic Min Heat to Coolant

Description: KtECTR_P_CDD_HeatToCoolantMin

Value Units: Power (kW)

X Unit: Firing fraction (ratio)

Y Units: Ambient Air Temperature (Deg C)

y/x	0.00	0.25	0.50	0.75	1.00
-9.0	13.0	13.0	13.0	13.0	13.0
0.0	13.0	13.0	13.0	13.0	13.0
10.0	13.0	13.0	13.0	13.0	13.0
20.0	13.0	13.0	13.0	13.0	13.0
50.0	13.0	13.0	13.0	13.0	13.0

Initial Supporting table - P06B7_OpenTestCktMax2

Description: Max threshold table for the 20 KHz for the test circuit diagnostic for sensor 2. The lookup into this table will be filtered to define the max threshold for the filtered intensity. To fail, the filtered intensity needs to fall between this cal and the min cal filters.

y/x	500	1,000	1,500	2,000	2,500	3,000	3,500	4,000	4,500	5,000	5,500	6,000	6,500	7,000	7,500	8,000	8,500
1	0.049	0.100	0.119	0.180	0.299	0.398	0.510	0.520	0.529	0.750	1.100	1.398	1.600	1.799	2.000	2.199	2.398

Initial Supporting table - P06B7_OpenTestCktMin2

Description: Min threshold table for the 20 KHz for the test circuit diagnostic for sensor 2. The lookup into this table will be filtered to define the max threshold for the filtered intensity. To fail, the filtered intensity needs to fall between this cal and the max cal filters.

y/x	500	1,000	1,500	2,000	2,500	3,000	3,500	4,000	4,500	5,000	5,500	6,000	6,500	7,000	7,500	8,000	8,500
1	0.000	0.000	0.000	0.020	0.020	0.049	0.078	0.119	0.129	0.158	0.180	0.199	0.219	0.260	0.299	0.318	0.340

Initial Supporting table - P2635 Max Fuel Flow

Description: P2635 Maximum Fuel Flow Disable Criteria
Maximum allowed fuel flow values above which the diagnostic is disabled

Value Units: grams / sec
X Unit: kPa [desired fuel pressure]
Y Units: Volts [device supply]

y/x	200.0	250.0	300.0	350.0	400.0	450.0	500.0	550.0	600.0
4.5	512.0	512.0	512.0	512.0	512.0	512.0	512.0	512.0	512.0
6.0	512.0	512.0	512.0	512.0	512.0	512.0	512.0	512.0	512.0
7.5	512.0	512.0	512.0	512.0	512.0	512.0	512.0	512.0	512.0
9.0	512.0	512.0	512.0	512.0	512.0	512.0	512.0	512.0	512.0
10.5	512.0	512.0	512.0	512.0	512.0	512.0	512.0	512.0	512.0
12.0	512.0	512.0	512.0	512.0	512.0	512.0	512.0	512.0	512.0
13.5	512.0	512.0	512.0	512.0	512.0	512.0	512.0	512.0	512.0
15.0	512.0	512.0	512.0	512.0	512.0	512.0	512.0	512.0	512.0
16.5	512.0	512.0	512.0	512.0	512.0	512.0	512.0	512.0	512.0
18.0	512.0	512.0	512.0	512.0	512.0	512.0	512.0	512.0	512.0
19.5	512.0	512.0	512.0	512.0	512.0	512.0	512.0	512.0	512.0
21.0	512.0	512.0	512.0	512.0	512.0	512.0	512.0	512.0	512.0
22.5	512.0	512.0	512.0	512.0	512.0	512.0	512.0	512.0	512.0
24.0	512.0	512.0	512.0	512.0	512.0	512.0	512.0	512.0	512.0
25.5	512.0	512.0	512.0	512.0	512.0	512.0	512.0	512.0	512.0
27.0	512.0	512.0	512.0	512.0	512.0	512.0	512.0	512.0	512.0
28.5	512.0	512.0	512.0	512.0	512.0	512.0	512.0	512.0	512.0

21OBDG03C ECM Supporting Tables

Initial Supporting table - P2635 Threshold High

Description: P2635 Filtered Fuel Pressure Error High Threshold [under-performing pump]
Instantaneously calculated filtered fuel pressure error

Value Units: kPa

X Unit: kPa [desired fuel pressure]

Y Units: grams / sec [fuel flow]

y/x	200.0	250.0	300.0	350.0	400.0	450.0	500.0	550.0	600.0
0.0	30.0	37.5	45.0	52.5	60.0	67.5	75.0	82.5	90.0
1.5	30.0	37.5	45.0	52.5	60.0	67.5	75.0	82.5	90.0
3.0	30.0	37.5	45.0	52.5	60.0	67.5	75.0	82.5	90.0
4.5	30.0	37.5	45.0	52.5	60.0	67.5	75.0	82.5	90.0
6.0	30.0	37.5	45.0	52.5	60.0	67.5	75.0	82.5	90.0
7.5	30.0	37.5	45.0	52.5	60.0	67.5	75.0	82.5	90.0
9.0	30.0	37.5	45.0	52.5	60.0	67.5	75.0	82.5	90.0
10.5	30.0	37.5	45.0	52.5	60.0	67.5	75.0	82.5	90.0
12.0	30.0	37.5	45.0	52.5	60.0	67.5	75.0	82.5	90.0
13.5	30.0	37.5	45.0	52.5	60.0	67.5	75.0	82.5	90.0
15.0	30.0	37.5	45.0	52.5	60.0	67.5	75.0	82.5	90.0
16.5	30.0	37.5	45.0	52.5	60.0	67.5	75.0	82.5	90.0
18.0	30.0	37.5	45.0	52.5	60.0	67.5	75.0	82.5	90.0
19.5	30.0	37.5	45.0	52.5	60.0	67.5	75.0	82.5	90.0
21.0	30.0	37.5	45.0	52.5	60.0	67.5	75.0	82.5	90.0
22.5	30.0	37.5	45.0	52.5	60.0	67.5	75.0	82.5	90.0
24.0	30.0	37.5	45.0	52.5	60.0	67.5	75.0	82.5	90.0
25.5	30.0	37.5	45.0	52.5	60.0	67.5	75.0	82.5	90.0
27.0	30.0	37.5	45.0	52.5	60.0	67.5	75.0	82.5	90.0
28.5	30.0	37.5	45.0	52.5	60.0	67.5	75.0	82.5	90.0
30.0	30.0	37.5	45.0	52.5	60.0	67.5	75.0	82.5	90.0
31.5	30.0	37.5	45.0	52.5	60.0	67.5	75.0	82.5	90.0
33.0	30.0	37.5	45.0	52.5	60.0	67.5	75.0	82.5	90.0
34.5	30.0	37.5	45.0	52.5	60.0	67.5	75.0	82.5	90.0
36.0	30.0	37.5	45.0	52.5	60.0	67.5	75.0	82.5	90.0
37.5	30.0	37.5	45.0	52.5	60.0	67.5	75.0	82.5	90.0
39.0	30.0	37.5	45.0	52.5	60.0	67.5	75.0	82.5	90.0
40.5	30.0	37.5	45.0	52.5	60.0	67.5	75.0	82.5	90.0
42.0	30.0	37.5	45.0	52.5	60.0	67.5	75.0	82.5	90.0
43.5	30.0	37.5	45.0	52.5	60.0	67.5	75.0	82.5	90.0
45.0	30.0	37.5	45.0	52.5	60.0	67.5	75.0	82.5	90.0

21OBDG03C ECM Supporting Tables

Initial Supporting table - P2635 Threshold High									
46.5	30.0	37.5	45.0	52.5	60.0	67.5	75.0	82.5	90.0
48.0	30.0	37.5	45.0	52.5	60.0	67.5	75.0	82.5	90.0

210BDG03C ECM Supporting Tables

Initial Supporting table - P2635 Threshold Low

Description: P2635 Filtered Pressure Error Low Threshold [over-performing pump]
Instantaneously calculated filtered fuel pressure error

Value Units: kPa

X Unit: kPa [desired fuel pressure]

Y Units: grams / sec [fuel flow]

y/x	200.0	250.0	300.0	350.0	400.0	450.0	500.0	550.0	600.0
0.0	-260.0	-210.0	-160.0	-110.0	-60.0	-67.5	-75.0	-82.5	-90.0
1.5	-145.0	-125.0	-102.5	-81.3	-60.0	-67.5	-75.0	-82.5	-90.0
3.0	-30.0	-37.5	-45.0	-52.5	-60.0	-67.5	-75.0	-82.5	-90.0
4.5	-30.0	-37.5	-45.0	-52.5	-60.0	-67.5	-75.0	-82.5	-90.0
6.0	-30.0	-37.5	-45.0	-52.5	-60.0	-67.5	-75.0	-82.5	-90.0
7.5	-30.0	-37.5	-45.0	-52.5	-60.0	-67.5	-75.0	-82.5	-90.0
9.0	-30.0	-37.5	-45.0	-52.5	-60.0	-67.5	-75.0	-82.5	-90.0
10.5	-30.0	-37.5	-45.0	-52.5	-60.0	-67.5	-75.0	-82.5	-90.0
12.0	-30.0	-37.5	-45.0	-52.5	-60.0	-67.5	-75.0	-82.5	-90.0
13.5	-30.0	-37.5	-45.0	-52.5	-60.0	-67.5	-75.0	-82.5	-90.0
15.0	-30.0	-37.5	-45.0	-52.5	-60.0	-67.5	-75.0	-82.5	-90.0
16.5	-30.0	-37.5	-45.0	-52.5	-60.0	-67.5	-75.0	-82.5	-90.0
18.0	-30.0	-37.5	-45.0	-52.5	-60.0	-67.5	-75.0	-82.5	-90.0
19.5	-30.0	-37.5	-45.0	-52.5	-60.0	-67.5	-75.0	-82.5	-90.0
21.0	-30.0	-37.5	-45.0	-52.5	-60.0	-67.5	-75.0	-82.5	-90.0
22.5	-30.0	-37.5	-45.0	-52.5	-60.0	-67.5	-75.0	-82.5	-90.0
24.0	-30.0	-37.5	-45.0	-52.5	-60.0	-67.5	-75.0	-82.5	-90.0
25.5	-30.0	-37.5	-45.0	-52.5	-60.0	-67.5	-75.0	-82.5	-90.0
27.0	-30.0	-37.5	-45.0	-52.5	-60.0	-67.5	-75.0	-82.5	-90.0
28.5	-30.0	-37.5	-45.0	-52.5	-60.0	-67.5	-75.0	-82.5	-90.0
30.0	-30.0	-37.5	-45.0	-52.5	-60.0	-67.5	-75.0	-82.5	-90.0
31.5	-30.0	-37.5	-45.0	-52.5	-60.0	-67.5	-75.0	-82.5	-90.0
33.0	-30.0	-37.5	-45.0	-52.5	-60.0	-67.5	-75.0	-82.5	-90.0
34.5	-30.0	-37.5	-45.0	-52.5	-60.0	-67.5	-75.0	-82.5	-90.0
36.0	-30.0	-37.5	-45.0	-52.5	-60.0	-67.5	-75.0	-82.5	-90.0
37.5	-30.0	-37.5	-45.0	-52.5	-60.0	-67.5	-75.0	-82.5	-90.0
39.0	-30.0	-37.5	-45.0	-52.5	-60.0	-67.5	-75.0	-82.5	-90.0
40.5	-30.0	-37.5	-45.0	-52.5	-60.0	-67.5	-75.0	-82.5	-90.0
42.0	-30.0	-37.5	-45.0	-52.5	-60.0	-67.5	-75.0	-82.5	-90.0
43.5	-30.0	-37.5	-45.0	-52.5	-60.0	-67.5	-75.0	-82.5	-90.0
45.0	-30.0	-37.5	-45.0	-52.5	-60.0	-67.5	-75.0	-82.5	-90.0

Initial Supporting table - P2635 Threshold Low									
46.5	-30.0	-37.5	-45.0	-52.5	-60.0	-67.5	-75.0	-82.5	-90.0
48.0	-30.0	-37.5	-45.0	-52.5	-60.0	-67.5	-75.0	-82.5	-90.0

Initial Supporting table - P0191 - High fail limit of fuel control due to high pressure sensor skewed High**Description:** High fail limit of fuel control due to high pressure sensor skewed High error as Function of desired pressure**Value Units:** Ratio**X Unit:** Desired Pressure (Mpa)

y/x	1.50	3.00	7.00	15.00	20.00	25.00	27.50	32.00	36.00
1.00	1.20	1.20	1.20	1.20	1.20	1.20	1.20	1.09	1.05

Initial Supporting table - P0191 - Low fail limit of fuel control due to pressure sensor skewed low**Description:** Low fail limit of fuel control due to pressure sensor skewed low error as Function of desired pressure**Value Units:** Ratio**X Unit:** Desired Pressure (Mpa)

y/x	1.50	3.00	7.00	15.00	20.00	25.00	27.50	32.00	36.00
1.00	0.76	0.81	0.81	0.81	0.81	0.82	0.86	0.92	0.95

Initial Supporting table - P0494_LIN_Threshold

Description: Tabulated LIN Fan1 Speed Low Limits

Value Units: rpm

X Unit: Commanded LIN Fan1 Speed rpm

Y Units: Sensed LIN Fan1 Speed Lower Limit rpm

y/x	200	400	600	800	1,000	1,200	1,400	1,600	1,800	2,000	2,200	2,400	2,600	2,800	3,000	3,200	3,400
1	0	190	390	590	790	990	1,190	1,390	1,590	1,790	1,990	2,190	2,390	2,590	2,790	2,990	3,190

Initial Supporting table - P228C P2C1F - High Pressure Pump Control (HPC) fail threshold of pressure too low

Description: The High Pressure Pump Control (HPC) fail threshold of pressure too low test as a function of desired fuel pressure.

Value Units: Pressure Error - Desired pressure - Actual Pressure (Mpa)

X Unit: Desired Pressure (Mpa)

y/x	2	3	7	15	20	25	28	32	36
1	0	2	3	3	5	5	5	5	5

Initial Supporting table - P228D P2C20 - High Pressure Pump Control (HPC) fail threshold for pressure too high**Description:** The High Pressure Pump Control (HPC) fail threshold for pressure too high test as a function of desired fuel pressure.**Value Units:** Pressure Error - Desired pressure - Actual Pressure (Mpa)**X Unit:** Desired Pressure (Mpa)

y/x	1.50	3.00	7.00	15.00	20.00	25.00	27.50	32.00	36.00
1	-3.00	-3.00	-3.00	-3.00	-4.00	-4.00	-4.00	-4.00	-4.00

P2B00 P2B01 P2B02 P2B03 P2B04 P2B05 P2B06 P2B07 P2B96 P2B08 P2B09 P2B0A P2B0B P2B0C P2B0D P2B0E P2B0F - kaFULO_n_																PM_Multi
Description: Max Engine Speed to allow Multipulse function of injector energy profile																
Value Units: Max Engine Speed to allow Multipulse																
X Unit: Injector Energy Profile																
Y Units: Multipulse Mode (0 = Double Pulse, 1 = Triple Pulse)																
y/x	0			1			2			3						
0	3,600			3,600			3,600			3,600						
1	2,900			2,900			2,900			2,900						

Initial Supporting table - P057B KtBRKI_K_CmpltTestPointWeight

Description:									
y/x	0.000	0.030	0.035	0.042	0.050	0.065	0.100	0.200	1.000
1	0	0	0	1	1	1	1	1	1

Initial Supporting table - P057B KtBRKI_K_FastTestPointWeight

Description:									
y/x	0.000	0.030	0.035	0.042	0.050	0.065	0.100	0.200	1.000
1	0	0	0	1	1	1	1	1	1

Initial Supporting table - DFCO_CoolEnblHi_Temp

Description:			
y/x	-40	0	25
1	45.0	45.0	40.0

Initial Supporting table - DFCO_DelayAfterStart_Time

Description:					
y/x	-30	-10	20	60	90
1	20.0	15.0	10.0	8.0	5.0

Initial Supporting table - DFCO_DsblLo_Vehicle_Speed

Description:		
y/x	CeTCOR_e_NonEcoMode	CeTCOR_e_EcoMode
CeTGRR_e_TransGr1	0	0
CeTGRR_e_TransGr2	0	0
CeTGRR_e_TransGr3	0	0
CeTGRR_e_TransGr4	0	0
CeTGRR_e_TransGr5	0	0
CeTGRR_e_TransGr6	0	0
CeTGRR_e_TransGr9	512	512
CeTGRR_e_TransGr10	512	512
CeTGRR_e_TransGrNeut	0	0
CeTGRR_e_TransGrRvrs	512	512
CeTGRR_e_TransGrPark	0	0
CeTGRR_e_TransGr7	512	512
CeTGRR_e_TransGr8	512	512

Initial Supporting table - DFCO_EnblHi_Vehicle_Speed

Description:		
y/x	CeTCOR_e_NonEcoMode	CeTCOR_e_EcoMode
CeTGRR_e_TransGr1	18.0	18.0
CeTGRR_e_TransGr2	18.0	18.0
CeTGRR_e_TransGr3	25.0	25.0
CeTGRR_e_TransGr4	33.0	33.0
CeTGRR_e_TransGr5	0.0	0.0
CeTGRR_e_TransGr6	0.0	0.0
CeTGRR_e_TransGr9	512.0	512.0
CeTGRR_e_TransGr10	512.0	512.0
CeTGRR_e_TransGrNeut	0.0	0.0
CeTGRR_e_TransGrRvrs	512.0	512.0
CeTGRR_e_TransGrPark	0.0	0.0
CeTGRR_e_TransGr7	512.0	512.0
CeTGRR_e_TransGr8	512.0	512.0

Initial Supporting table - DFCO_EngSpdEnblOfst

Description:									
y/x	-1,750	-1,400	-1,250	-1,000	-700	-500	-300	-100	0
1	500	250	150	0	0	0	0	0	0

210BDG03C ECM Supporting Tables

Initial Supporting table - CalculatedPerfMaxEc1

Description: Maximum desired camshaft position for Exhaust CAM - Bank1

Value Units: Maximum desired camshaft position (degCam)

X Unit: Engine Oil Temperature (degC)

[1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17]

[-40 -28 -16 -4 8 20 32 44 56 68 80 92 104 116 128 140 152]

Y Units: Engine Speed (rpm)

[1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17]

[400 800 1200 1600 2000 2400 2800 3200 3600 4000 4400 4800 5200 5600 6000 6400 6800]

y/x	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17
1	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5
2	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5
3	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5
4	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5
5	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5
6	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5
7	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5
8	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5
9	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5
10	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5
11	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5
12	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5
13	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5
14	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5
15	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5
16	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5
17	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5	27.5

Initial Supporting table - CalculatedPerfMaxlc1

Description: Maximum desired camshaft position for Intake CAM - Bank1

Value Units: Maximum desired camshaft position (degCam)

X Unit: Engine Oil Temperature (degC)

[1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17]

[-40 -28 -16 -4 8 20 32 44 56 68 80 92 104 116 128 140 152]

Y Units: Engine Speed (rpm)

[1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17]

[400 800 1200 1600 2000 2400 2800 3200 3600 4000 4400 4800 5200 5600 6000 6400 6800]

y/x	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17
1	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0
2	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0
3	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0
4	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0
5	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0
6	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0
7	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0
8	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0
9	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0
10	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0
11	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0
12	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0
13	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0
14	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0
15	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0
16	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0
17	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0

Initial Supporting table - P0521_P06DD_P06DE_OP_HiStatePressure

Description: Two Stage Oil Pump Oil Pressure in High State**Value Units:** Nominal high state oil pressure (kPa)**X Unit:** Engine oil temperature (deg C)

y/x	40.0	50.0	60.0	70.0	80.0	90.0	100.0	110.0	120.0
1,000.0	528.5	495.4	459.1	419.7	376.9	330.4	280.3	226.3	168.1
1,500.0	579.8	552.8	522.6	489.4	452.9	413.0	369.4	322.0	270.6
2,000.0	605.4	583.4	558.6	530.6	499.6	465.1	427.1	385.4	339.8
2,500.0	612.1	594.2	573.6	550.1	523.4	493.5	460.2	423.2	382.4
3,000.0	606.6	591.9	574.6	554.5	531.4	505.1	475.4	442.3	405.4
3,500.0	595.8	583.4	568.5	550.8	530.3	506.6	479.8	449.5	415.6
4,000.0	586.4	575.4	561.9	545.8	526.8	504.9	479.9	451.5	419.6
4,500.0	585.4	574.7	561.7	546.1	527.9	506.8	482.6	455.2	424.4
5,000.0	599.3	588.1	574.6	558.7	540.2	518.9	494.6	467.3	436.6

Initial Supporting table - P0521_P06DD_P06DE_OP_LoStatePressure

Description: Two Stage Oil Pump Oil Pressure in Low State

Value Units: Nominal low state oil pressure (kPa)

X Unit: Engine oil temperature (deg C)

y/x	40	50	60	70	80	90	100	110	120
1,000	346	332	317	301	283	264	242	218	192
1,500	370	358	345	331	315	298	279	257	232
2,000	382	372	361	349	335	320	302	283	260
2,500	386	377	368	357	345	332	316	298	277
3,000	384	376	368	359	349	336	322	306	287
3,500	378	372	365	357	348	337	324	309	291
4,000	372	367	361	354	346	336	324	311	294
4,500	368	364	359	353	345	337	326	313	297
5,000	370	366	361	356	349	341	331	319	304

Initial Supporting table - P06DD_P06DE_MaxEnableTorque_OP**Description:** Two Stage Oil Pump Rationality Test Torque Max Enable Threshold**Value Units:** Maximum engine torque (Nm)**X Unit:** Engine speed (RPM)

y/x	1,000.0	1,250.0	1,500.0	1,750.0	2,000.0	2,250.0	2,500.0	2,750.0	3,000.0
1.0	0.0	0.0	140.0	140.0	140.0	140.0	140.0	0.0	0.0

Initial Supporting table - P06DD_P06DE_MinEnableTorque_OP**Description:** Two Stage Oil Pump Rationality Test Torque Min Enable Threshold**Value Units:** Min engine torque (Nm)**X Unit:** Engine speed (RPM)

y/x	1,000.0	1,250.0	1,500.0	1,750.0	2,000.0	2,250.0	2,500.0	2,750.0	3,000.0
1.0	0.0	0.0	20.0	20.0	20.0	20.0	20.0	0.0	0.0

Initial Supporting table - P06DD_P06DE_MinOilPressThresh

Description: Intrusive diagnostic minimum pressure limit that is a function of Engine Speed and Oil Temperature

Value Units: Minimum engine oil pressure threshold (kPa)

X Unit: Engine oil temperature (deg C)

y/x	40	50	60	70	80	90	100	110	120
1,000	160	160	160	160	160	160	160	160	160
1,500	160	160	160	160	160	160	160	160	160
2,000	187	187	187	187	187	187	187	187	187
2,500	200	200	200	200	200	200	200	200	200
3,000	200	200	200	200	200	200	200	200	200
3,500	200	200	200	200	200	200	200	200	200
4,000	200	200	200	200	200	200	200	200	200
4,500	200	200	200	200	200	200	200	200	200
5,000	1,133	1,133	1,133	1,133	1,133	1,133	1,133	1,133	1,133

Initial Supporting table - P06DD_P06DE_OP_StateChangeMin

Description: Minimum allowed pressure change on a Two Stage Oil Pump state change

Value Units: Min pressure change (kPa)

X Unit: Engine oil temperature (deg C)

y/x	40.0	50.0	60.0	70.0	80.0	90.0	100.0	110.0	120.0
1,000.0	73.1	65.5	57.0	47.7	37.6	26.7	15.3	3.2	0.4
1,500.0	84.0	78.1	71.2	63.5	55.1	46.0	36.3	26.0	15.3
2,000.0	89.3	84.6	79.1	72.8	65.8	58.1	49.9	41.1	31.9
2,500.0	90.5	86.9	82.4	77.2	71.3	64.8	57.7	50.1	42.1
3,000.0	89.3	86.4	82.7	78.3	73.2	67.5	61.3	54.6	47.5
3,500.0	87.2	84.8	81.5	77.6	73.0	67.9	62.3	56.1	49.7
4,000.0	85.9	83.6	80.5	76.8	72.4	67.6	62.2	56.4	50.3
4,500.0	86.9	84.4	81.3	77.4	73.0	68.1	62.7	56.9	50.9
5,000.0	91.9	89.0	85.4	81.2	76.4	71.1	65.4	59.4	53.1

Initial Supporting table - P2160 range change delay time

Description: If the transmission range state changes, the transmission range state must be stable for this amount of time as part of the P2160 enable conditions.

X Unit: transmission fluid temperature DegC

Y Units: delay time seconds

y/x	-40.00	0.00	40.00
1	5.000	5.000	5.000

Initial Supporting table - P2161 range change delay time

Description: If the transmission range state changes, the transmission range state must be stable for this amount of time as part of the P2161 enable conditions.

X Unit: transmission fluid temperature DegC

Y Units: delay time seconds

y/x	-40.00	-20.00	40.00
1	5.000	5.000	5.000

Initial Supporting table - Minimum Non-Purge Samples for Purge Vapor Fuel

Description: Number of Fuel Trim Monitor sample counts required to allow the Purge Vapor Fuel value to inhibit the Intrusive Rich test

Value Units: Sample Counts per loop rate of 100ms (divide by 10 to get seconds)

X Unit: Long Term Fuel Trim Cell I.D. (no units) (Only PurgeOff cells are used)

Minimum Non-Purge Samples for Purge Vapor Fuel - Part 1

y/x	CeFADR_e_Cell00_PurgOnAirMode 5	CeFADR_e_Cell01_PurgOnAirMode 4	CeFADR_e_Cell02_PurgOnAirMode 3	CeFADR_e_Cell03_PurgOnAirMode 2
1	65,535	65,535	65,535	65,535

Minimum Non-Purge Samples for Purge Vapor Fuel - Part 2

y/x	CeFADR_e_Cell04_PurgOnAirMode 1	CeFADR_e_Cell05_PurgOnAirMode 0	CeFADR_e_Cell06_PurgOnIdle	CeFADR_e_Cell07_PurgOnDecel
1	65,535	65,535	65,535	65,535

Minimum Non-Purge Samples for Purge Vapor Fuel - Part 3

y/x	CeFADR_e_Cell08_PurgOffAirMode 5	CeFADR_e_Cell09_PurgOffAirMode 4	CeFADR_e_Cell10_PurgOffAirMode 3	CeFADR_e_Cell11_PurgOffAirMode 2
1	65,535	65,535	65,535	65,535

Minimum Non-Purge Samples for Purge Vapor Fuel - Part 4

y/x	CeFADR_e_Cell12_PurgOffAirMode 1	CeFADR_e_Cell13_PurgOffAirMode 0	CeFADR_e_Cell14_PurgOffIdle	CeFADR_e_Cell15_PurgOffDecel
1	65,535	65,535	65,535	65,535

Initial Supporting table - P0171_P0172_P0174_P0175 Long-Term Fuel Trim Cell Usage

Description: Identifies which Long Term Fuel Trim Cell I.D.s are used for diagnosis. Only cells identified as "CeFADD_e_NonSelectedCell" are not used for diagnosis.

P0171_P0172_P0174_P0175 Long-Term Fuel Trim Cell Usage - Part 1

y/x	CeFADR_e_Cell00_PurgOnAirMode 5	CeFADR_e_Cell01_PurgOnAirMode 4	CeFADR_e_Cell02_PurgOnAirMode 3	CeFADR_e_Cell03_PurgOnAirMode 2
1	CeFADD_e_SelectedPurgeCell	CeFADD_e_SelectedPurgeCell	CeFADD_e_SelectedPurgeCell	CeFADD_e_SelectedPurgeCell

P0171_P0172_P0174_P0175 Long-Term Fuel Trim Cell Usage - Part 2

y/x	CeFADR_e_Cell04_PurgOnAirMode 1	CeFADR_e_Cell05_PurgOnAirMode 0	CeFADR_e_Cell06_PurgOnIdle	CeFADR_e_Cell07_PurgOnDecel
1	CeFADD_e_SelectedPurgeCell	CeFADD_e_SelectedPurgeCell	CeFADD_e_SelectedPurgeCell	CeFADD_e_NonSelectedCell

P0171_P0172_P0174_P0175 Long-Term Fuel Trim Cell Usage - Part 3

y/x	CeFADR_e_Cell08_PurgOffAirMode 5	CeFADR_e_Cell09_PurgOffAirMode 4	CeFADR_e_Cell10_PurgOffAirMode 3	CeFADR_e_Cell11_PurgOffAirMode 2
1	CeFADD_e_SelectedNonPurgeCell	CeFADD_e_SelectedNonPurgeCell	CeFADD_e_SelectedNonPurgeCell	CeFADD_e_SelectedNonPurgeCell

P0171_P0172_P0174_P0175 Long-Term Fuel Trim Cell Usage - Part 4

y/x	CeFADR_e_Cell12_PurgOffAirMode 1	CeFADR_e_Cell13_PurgOffAirMode 0	CeFADR_e_Cell14_PurgOffIdle	CeFADR_e_Cell15_PurgOffDecel
1	CeFADD_e_SelectedNonPurgeCell	CeFADD_e_SelectedNonPurgeCell	CeFADD_e_SelectedNonPurgeCell	CeFADD_e_NonSelectedCell

Initial Supporting table - P219A EWMA Coefficient

Description: The bank 1 EWMA coefficient used to filter the AFIM Variance Ratio.

Value Units: Unitless Scalar

X Unit: Unitless Scalar

y/x	-1.00	-0.50	0.00	0.00	1.00
1	0.05	0.05	0.05	0.30	0.30

21OBDG03C ECM Supporting Tables

Initial Supporting table - P219A Normalizer Bank1 Table

Description: Bank 1 Normalizer table used in the calculation of the Ratio for the current sample period.

Value Units: Unitless Scalar

X Unit: Engine Speed (RPM)

Y Units: Air Per Cylinder (APC) (mg/cylinder)

y/x	250	500	750	1,000	1,250	1,500	1,750	2,000	2,250	2,500	2,750	3,000	3,500	4,000	4,500	5,000	6,000
40	9,999.00	9,999.00	9,999.00	9,999.00	9,999.00	9,999.00	9,999.00	9,999.00	9,999.00	9,999.00	9,999.00	9,999.00	9,999.00	9,999.00	9,999.00	9,999.00	9,999.00
80	9,999.00	9,999.00	9,999.00	9,999.00	9,999.00	9,999.00	9,999.00	9,999.00	9,999.00	9,999.00	9,999.00	9,999.00	9,999.00	9,999.00	9,999.00	9,999.00	9,999.00
120	9,999.00	9,999.00	9,999.00	9,999.00	9,999.00	9,999.00	9,999.00	9,999.00	9,999.00	9,999.00	9,999.00	9,999.00	9,999.00	9,999.00	9,999.00	9,999.00	9,999.00
160	9,999.00	9,999.00	9,999.00	127.25	127.25	72.75	37.50	34.00	97.00	51.25	133.00	50.50	50.50	9,999.00	9,999.00	9,999.00	9,999.00
200	9,999.00	9,999.00	9,999.00	127.25	127.25	72.75	37.50	34.00	97.00	51.25	133.00	50.50	63.00	75.75	9,999.00	9,999.00	9,999.00
240	9,999.00	9,999.00	9,999.00	160.00	160.00	84.75	121.00	101.75	23.50	86.00	104.25	94.00	75.75	75.75	9,999.00	9,999.00	9,999.00
280	9,999.00	9,999.00	9,999.00	161.00	161.00	127.00	97.50	38.00	87.75	45.25	101.50	90.50	23.25	23.25	9,999.00	9,999.00	9,999.00
320	9,999.00	9,999.00	9,999.00	139.00	139.00	130.75	136.25	107.75	104.25	112.50	74.25	86.25	22.75	22.75	9,999.00	9,999.00	9,999.00
360	9,999.00	9,999.00	9,999.00	185.50	185.50	119.50	130.25	73.25	110.00	65.25	88.75	94.50	68.00	68.00	9,999.00	9,999.00	9,999.00
400	9,999.00	9,999.00	9,999.00	109.00	109.00	102.25	92.50	40.50	47.00	66.25	149.00	116.75	54.50	54.50	9,999.00	9,999.00	9,999.00
440	9,999.00	9,999.00	9,999.00	109.00	111.25	113.75	102.50	80.00	44.75	63.50	95.75	118.25	73.00	73.00	9,999.00	9,999.00	9,999.00
480	9,999.00	9,999.00	9,999.00	9,999.00	166.25	166.25	82.00	87.75	83.25	59.50	139.50	71.75	82.50	82.50	9,999.00	9,999.00	9,999.00
520	9,999.00	9,999.00	9,999.00	9,999.00	127.50	127.50	59.00	103.00	64.50	56.00	64.25	71.00	76.75	82.50	9,999.00	9,999.00	9,999.00
560	9,999.00	9,999.00	9,999.00	9,999.00	109.50	109.50	103.25	118.75	68.50	52.50	70.00	52.00	52.00	9,999.00	9,999.00	9,999.00	9,999.00
640	9,999.00	9,999.00	9,999.00	9,999.00	109.50	109.50	103.25	118.75	68.50	52.50	70.00	52.00	52.00	9,999.00	9,999.00	9,999.00	9,999.00
720	9,999.00	9,999.00	9,999.00	9,999.00	9,999.00	9,999.00	9,999.00	9,999.00	9,999.00	9,999.00	9,999.00	9,999.00	9,999.00	9,999.00	9,999.00	9,999.00	9,999.00
800	9,999.00	9,999.00	9,999.00	9,999.00	9,999.00	9,999.00	9,999.00	9,999.00	9,999.00	9,999.00	9,999.00	9,999.00	9,999.00	9,999.00	9,999.00	9,999.00	9,999.00

210BDG03C ECM Supporting Tables

Initial Supporting table - P219A Quality Factor Bank1 Table

Description: Bank 1 lookup table of Quality Factors used in the calculation of the Ratio for the current sample period

Value Units: Unitless Scalar

X Unit: Engine Speed (RPM)

Y Units: Air Per Cylinder (APC) (mg/cylinder)

y/x	250	500	750	1,000	1,250	1,500	1,750	2,000	2,250	2,500	2,750	3,000	3,500	4,000	4,500	5,000	6,000
40	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00
80	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00
120	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00
160	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00
200	0.00	0.00	0.00	0.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00	0.00	0.00	0.00	0.00	0.00
240	0.00	0.00	0.00	0.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00	0.00	0.00	0.00	0.00
280	0.00	0.00	0.00	0.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00	0.00	0.00	0.00	0.00
320	0.00	0.00	0.00	0.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00	0.00	0.00	0.00	0.00
360	0.00	0.00	0.00	0.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00	0.00	0.00	0.00	0.00
400	0.00	0.00	0.00	0.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00	0.00	0.00	0.00	0.00
440	0.00	0.00	0.00	0.00	0.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00	0.00	0.00	0.00	0.00
480	0.00	0.00	0.00	0.00	0.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00	0.00	0.00	0.00	0.00
520	0.00	0.00	0.00	0.00	0.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00	0.00	0.00	0.00	0.00	0.00
560	0.00	0.00	0.00	0.00	0.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00	0.00	0.00	0.00	0.00	0.00
640	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00
720	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00
800	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00

210BDG03C ECM Supporting Tables

Initial Supporting table - P219A Variance Threshold Bank1 Table

Description: Bank 1 lookup table of Variance metric used to calculate the Ratio for the current sample period

Value Units: Unitless ratio

X Unit: Engine Speed (RPM)

Y Units: Air Per Cylinder (APC) (mg/cylinder)

y/x	250	500	750	1,000	1,250	1,500	1,750	2,000	2,250	2,500	2,750	3,000	3,500	4,000	4,500	5,000	6,000
40	9,999.00	9,999.00	9,999.00	9,999.00	9,999.00	9,999.00	9,999.00	9,999.00	9,999.00	9,999.00	9,999.00	9,999.00	9,999.00	9,999.00	9,999.00	9,999.00	9,999.00
80	9,999.00	9,999.00	9,999.00	9,999.00	9,999.00	9,999.00	9,999.00	9,999.00	9,999.00	9,999.00	9,999.00	9,999.00	9,999.00	9,999.00	9,999.00	9,999.00	9,999.00
120	9,999.00	9,999.00	9,999.00	9,999.00	9,999.00	9,999.00	9,999.00	9,999.00	9,999.00	9,999.00	9,999.00	9,999.00	9,999.00	9,999.00	9,999.00	9,999.00	9,999.00
160	9,999.00	9,999.00	9,999.00	50.00	50.00	44.25	16.00	26.75	45.75	19.25	24.00	25.00	25.00	9,999.00	9,999.00	9,999.00	9,999.00
200	9,999.00	9,999.00	9,999.00	50.00	50.00	44.25	16.00	26.75	45.75	19.25	24.00	25.00	40.75	56.50	9,999.00	9,999.00	9,999.00
240	9,999.00	9,999.00	9,999.00	48.00	48.00	22.75	27.75	52.75	29.75	24.75	9.75	22.50	56.50	56.50	9,999.00	9,999.00	9,999.00
280	9,999.00	9,999.00	9,999.00	39.25	39.25	60.50	42.00	51.00	49.00	38.00	41.25	36.00	42.50	42.50	9,999.00	9,999.00	9,999.00
320	9,999.00	9,999.00	9,999.00	95.25	95.25	81.75	36.00	45.75	47.25	35.75	35.75	41.50	50.75	50.75	9,999.00	9,999.00	9,999.00
360	9,999.00	9,999.00	9,999.00	70.25	70.25	77.50	52.50	77.50	63.50	41.00	43.75	36.00	46.00	46.00	9,999.00	9,999.00	9,999.00
400	9,999.00	9,999.00	9,999.00	108.50	108.50	73.00	73.75	81.25	82.75	74.00	46.75	52.00	84.00	84.00	9,999.00	9,999.00	9,999.00
440	9,999.00	9,999.00	9,999.00	108.50	96.50	84.50	83.50	83.75	88.75	72.00	37.00	60.75	71.00	71.00	9,999.00	9,999.00	9,999.00
480	9,999.00	9,999.00	9,999.00	9,999.00	91.00	91.00	85.00	77.25	92.75	77.25	65.00	64.00	70.75	70.75	9,999.00	9,999.00	9,999.00
520	9,999.00	9,999.00	9,999.00	9,999.00	123.50	123.50	93.50	86.75	72.50	83.75	50.75	81.75	76.25	70.75	9,999.00	9,999.00	9,999.00
560	9,999.00	9,999.00	9,999.00	9,999.00	136.50	136.50	113.00	123.25	95.00	57.75	78.00	83.50	83.50	9,999.00	9,999.00	9,999.00	9,999.00
640	9,999.00	9,999.00	9,999.00	9,999.00	136.50	136.50	113.00	123.25	95.00	57.75	78.00	83.50	83.50	9,999.00	9,999.00	9,999.00	9,999.00
720	9,999.00	9,999.00	9,999.00	9,999.00	9,999.00	9,999.00	9,999.00	9,999.00	9,999.00	9,999.00	9,999.00	9,999.00	9,999.00	9,999.00	9,999.00	9,999.00	9,999.00
800	9,999.00	9,999.00	9,999.00	9,999.00	9,999.00	9,999.00	9,999.00	9,999.00	9,999.00	9,999.00	9,999.00	9,999.00	9,999.00	9,999.00	9,999.00	9,999.00	9,999.00

Initial Supporting table - P0068_Delta MAF Threshold f(TPS)

Description: Table of delta MAF values as a function of desired throttle position. The output of this table provides a delta MAF that if the measured minus the estimated MAF exceeds, is considered a fail.

Value Units: Delta MAF Values (dm)

X Unit: Desired Throttle Position (Pct)

y/x	5.00	10.00	15.00	20.00	25.00	30.00	35.00	40.00	100.00
1.00	28.16	20.51	20.41	26.31	29.73	39.24	59.39	255.00	255.00

Initial Supporting table - P0068_Delta MAP Threshold f(TPS)

Description: Table of delta MAP values as a function of desired throttle position. The output of this table provides a delta MAP that if the measured minus the estimated MAP exceeds, is considered a fail.

Value Units: Delta MAP Values (kPa)

X Unit: Desired Throttle Position (Pct)

y/x	5.00	10.00	15.00	20.00	25.00	30.00	35.00	40.00	100.00
1.00	59.89	40.24	30.61	38.05	27.24	28.24	33.48	255.00	255.00

Initial Supporting table - P0068_Maximum MAF f(RPM)**Description:** Table of maximum MAF values vs. engine speed. This is the maximum MAF the engine can see under all ambient conditions.**Value Units:** Delta MAF Values (dm)**X Unit:** Engine Speed (RPM)

y/x	600.00	1,400.00	2,200.00	3,000.00	3,800.00	4,600.00	5,400.00	6,200.00	7,000.00
1.00	8.00	27.00	41.00	59.00	79.00	105.00	122.00	141.00	149.00

21OBDG03C ECM Supporting Tables

Initial Supporting table - P0068_Maximum MAF f(Volts)

Description: Table of maximum MAF values vs. system voltage. The output of the air meter is clamped to lower values as system voltage drops off.

Value Units: Delta MAF Values (dm)

X Unit: System Voltage (V)

y/x	6.00	7.00	8.00	9.00	10.00	11.00	12.00	13.00	14.00
1.00	31.00	72.00	130.00	190.00	238.00	238.00	238.00	238.00	238.00

Initial Supporting table - P0326_P0331_AbnormalNoise_Thresh_AFM

Description: Fail threshold for the Knock Performance Abnormal Noise Diagnostic when engine IS in AFM mode

y/x	500	1,000	1,500	2,000	2,500	3,000	3,500	4,000	4,500	5,000	5,500	6,000	6,500	7,000	7,500	8,000	8,500
1	0.162	0.175	0.200	0.216	0.258	0.275	0.318	0.371	0.517	0.693	0.769	0.832	0.901	0.901	0.901	0.901	0.901

Initial Supporting table - P0606_Last Seed Timeout f(Loop Time)

Description: The max time for the Last Seed Timeout as a function of operating loop time sequence.

Value Units: Max Time for Last Seed Timeout (ms)

X Unit: Operating Loop Sequence (enum)

P0606_Last Seed Timeout f(Loop Time) - Part 1

y/x	CePISR_e_5msSeq	CePISR_e_6p25msSeq	CePISR_e_10msSeq	CePISR_e_12p5msSeq	CePISR_e_20msSeq	CePISR_e_25msSeq	CePISR_e_40msSeq
1	200.000	200.000	200.000	200.000	200.000	200.000	200.000

P0606_Last Seed Timeout f(Loop Time) - Part 2

y/x	CePISR_e_50msSeq	CePISR_e_80msSeq	CePISR_e_100msSeq	CePISR_e_EventA_Seq	CePISR_e_EventB_Seq	CePISR_e_EventC_Seq	
1	500.000	500.000	1,000.000	8,191.875	8,191.875	8,191.875	

Initial Supporting table - P0606_PSW Sequence Fail f(Loop Time)

Description: Fail threshold for PSW per operating loop.

Value Units: Fail threshold for PSW (count)

X Unit: Operating Loop (enum)

P0606_PSW Sequence Fail f(Loop Time) - Part 1

y/x	CePISR_e_5msSeq	CePISR_e_6p25msSeq	CePISR_e_10msSeq	CePISR_e_12p5msSeq	CePISR_e_20msSeq	CePISR_e_25msSeq	CePISR_e_40msSeq
1	5	3	5	3	5	3	5

P0606_PSW Sequence Fail f(Loop Time) - Part 2

y/x	CePISR_e_50msSeq	CePISR_e_80msSeq	CePISR_e_100msSeq	CePISR_e_EventA_Seq	CePISR_e_EventB_Seq	CePISR_e_EventC_Seq	
1	3	5	5	5	5	5	

Initial Supporting table - P0606_PSW Sequence Sample f(Loop Time)

Description: Sample threshold for PSW per operating loop.

Value Units: Sample threshold for PSW (count)

X Unit: Operating Loop (enum)

P0606_PSW Sequence Sample f(Loop Time) - Part 1

y/x	CePISR_e_5msSeq	CePISR_e_6p25msSeq	CePISR_e_10msSeq	CePISR_e_12p5msSeq	CePISR_e_20msSeq	CePISR_e_25msSeq	CePISR_e_40msSeq
1	4	4	4	4	4	4	4

P0606_PSW Sequence Sample f(Loop Time) - Part 2

y/x	CePISR_e_50msSeq	CePISR_e_80msSeq	CePISR_e_100msSeq	CePISR_e_EventA_Seq	CePISR_e_EventB_Seq	CePISR_e_EventC_Seq	
1	4	4	4	4	4	4	

Initial Supporting table - P1682_PT Relay Pull-in Run/Crank Voltage f(IAT)

Description: The Run/Crank voltages required to pull in the PT relay as a function of induction air temperature.

Value Units: Run/Crank Voltages required to pull in PT Relay (V)

X Unit: Induction Air Temperature (deg C)

y/x	23.0	85.0	95.0	105.0	125.0
1	7.000	8.699	9.000	9.199	10.000

Initial Supporting table - P1682_PT Relay Pull-in Run/Crank Voltage f(IAT)

Description: The Run/Crank voltages required to pull in the PT relay as a function of induction air temperature.

Value Units: Run/Crank Voltages required to pull in PT Relay (V)

X Unit: Induction Air Temperature (deg C)

y/x	23.0	85.0	95.0	105.0	125.0
1	7.000	8.699	9.000	9.199	10.000

Initial Supporting table - P16F3_Delta MAP Threshold f(Desired Engine Torque)**Description:** Engine Sync based and Time based delta pressure threshold above which Torque Security error is reported.**Value Units:** Torque Security Threshold for Engine Sync and Time Based Delta Pressure (kPa)**X Unit:** Desired Engine Torque (Nm)

y/x	0.00	50.00	100.00	150.00	200.00	300.00
1.00	27.24	27.24	27.24	27.24	27.24	27.24

210BDG03C ECM Supporting Tables

Initial Supporting table - P16F3_Speed Control External Load f(Oil Temp, RPM)

Description: Specifies the external load table for SPDR torque security as a function of engine oil temperature and engine RPM.

Value Units: External Load Table for SPDR (Nm)

X Unit: Engine Oil Temperature (deg C)

Y Units: Engine Speed (RPM)

y/x	-40.00	-20.00	-10.00	0.00	50.00	90.00
500.00	137.47	116.03	114.61	115.72	95.01	59.26
650.00	137.47	116.03	114.61	115.72	95.01	59.26
750.00	130.38	111.89	111.51	115.65	91.26	57.51
775.00	131.08	111.89	111.52	115.72	92.01	55.76
800.00	137.47	116.03	114.61	115.72	95.01	54.26
900.00	143.21	129.39	123.18	121.05	93.94	54.38
1,000.00	148.76	141.94	132.52	125.63	93.44	48.76
1,100.00	147.26	140.54	134.77	128.97	97.94	36.76
1,300.00	139.91	134.95	132.22	126.95	90.41	42.80
1,600.00	100.56	97.53	99.48	99.22	71.77	37.10
2,000.00	-62.24	-62.24	-62.24	-62.24	-62.24	-62.24
2,500.00	-68.46	-68.46	-68.46	-68.46	-68.46	-68.46
3,000.00	-74.69	-74.69	-74.69	-74.69	-74.69	-74.69
3,500.00	-80.91	-80.91	-80.91	-80.91	-80.91	-80.91
4,500.00	-87.14	-87.14	-87.14	-87.14	-87.14	-87.14
5,500.00	-93.36	-93.36	-93.36	-93.36	-93.36	-93.36
7,200.00	-99.58	-99.58	-99.58	-99.58	-99.58	-99.58

Initial Supporting table - P0068_Delta MAF Threshold f(TPS)

Description: Table of delta MAF values as a function of desired throttle position. The output of this table provides a delta MAF that if the measured minus the estimated MAF exceeds, is considered a fail.

Value Units: Delta MAF Values (dm)

X Unit: Desired Throttle Position (Pct)

y/x	5.00	10.00	15.00	20.00	25.00	30.00	35.00	40.00	100.00
1.00	28.16	20.51	20.41	26.31	29.73	39.24	59.39	255.00	255.00

Initial Supporting table - P0068_Delta MAP Threshold f(TPS)

Description: Table of delta MAP values as a function of desired throttle position. The output of this table provides a delta MAP that if the measured minus the estimated MAP exceeds, is considered a fail.

Value Units: Delta MAP Values (kPa)

X Unit: Desired Throttle Position (Pct)

y/x	5.00	10.00	15.00	20.00	25.00	30.00	35.00	40.00	100.00
1.00	59.89	40.24	30.61	38.05	27.24	28.24	33.48	255.00	255.00

Initial Supporting table - P0068_Maximum MAF f(RPM)

Description: Table of maximum MAF values vs. engine speed. This is the maximum MAF the engine can see under all ambient conditions.

Value Units: Delta MAF Values (dm)

X Unit: Engine Speed (RPM)

y/x	600.00	1,400.00	2,200.00	3,000.00	3,800.00	4,600.00	5,400.00	6,200.00	7,000.00
1.00	8.00	27.00	41.00	59.00	79.00	105.00	122.00	141.00	149.00

Initial Supporting table - P0068_Maximum MAF f(Volts)

Description: Table of maximum MAF values vs. system voltage. The output of the air meter is clamped to lower values as system voltage drops off.

Value Units: Delta MAF Values (dm)

X Unit: System Voltage (V)

y/x	6.00	7.00	8.00	9.00	10.00	11.00	12.00	13.00	14.00
1.00	31.00	72.00	130.00	190.00	238.00	238.00	238.00	238.00	238.00

Initial Supporting table - P0606_Last Seed Timeout f(Loop Time)

Description: The max time for the Last Seed Timeout as a function of operating loop time sequence.

Value Units: Max Time for Last Seed Timeout (ms)

X Unit: Operating Loop Sequence (enum)

P0606_Last Seed Timeout f(Loop Time) - Part 1

y/x	CePISR_e_5msSeq	CePISR_e_6p25msSeq	CePISR_e_10msSeq	CePISR_e_12p5msSeq	CePISR_e_20msSeq	CePISR_e_25msSeq	CePISR_e_40msSeq
1	200.000	200.000	200.000	200.000	200.000	200.000	200.000

P0606_Last Seed Timeout f(Loop Time) - Part 2

y/x	CePISR_e_50msSeq	CePISR_e_80msSeq	CePISR_e_100msSeq	CePISR_e_EventA_Seq	CePISR_e_EventB_Seq	CePISR_e_EventC_Seq	
1	500.000	500.000	1,000.000	8,191.875	8,191.875	8,191.875	

Initial Supporting table - P0606_PSW Sequence Fail f(Loop Time)

Description: Fail threshold for PSW per operating loop.

Value Units: Fail threshold for PSW (count)

X Unit: Operating Loop (enum)

P0606_PSW Sequence Fail f(Loop Time) - Part 1

y/x	CePISR_e_5msSeq	CePISR_e_6p25msSeq	CePISR_e_10msSeq	CePISR_e_12p5msSeq	CePISR_e_20msSeq	CePISR_e_25msSeq	CePISR_e_40msSeq
1	5	3	5	3	5	3	5

P0606_PSW Sequence Fail f(Loop Time) - Part 2

y/x	CePISR_e_50msSeq	CePISR_e_80msSeq	CePISR_e_100msSeq	CePISR_e_EventA_Seq	CePISR_e_EventB_Seq	CePISR_e_EventC_Seq	
1	3	5	5	5	5	5	

Initial Supporting table - P0606_PSW Sequence Sample f(Loop Time)

Description: Sample threshold for PSW per operating loop.

Value Units: Sample threshold for PSW (count)

X Unit: Operating Loop (enum)

P0606_PSW Sequence Sample f(Loop Time) - Part 1

y/x	CePISR_e_5msSeq	CePISR_e_6p25msSeq	CePISR_e_10msSeq	CePISR_e_12p5msSeq	CePISR_e_20msSeq	CePISR_e_25msSeq	CePISR_e_40msSeq
1	4	4	4	4	4	4	4

P0606_PSW Sequence Sample f(Loop Time) - Part 2

y/x	CePISR_e_50msSeq	CePISR_e_80msSeq	CePISR_e_100msSeq	CePISR_e_EventA_Seq	CePISR_e_EventB_Seq	CePISR_e_EventC_Seq	
1	4	4	4	4	4	4	

Initial Supporting table - P1682_PT Relay Pull-in Run/Crank Voltage f(IAT)

Description: The Run/Crank voltages required to pull in the PT relay as a function of induction air temperature.

Value Units: Run/Crank Voltages required to pull in PT Relay (V)

X Unit: Induction Air Temperature (deg C)

y/x	23.0	85.0	95.0	105.0	125.0
1	7.000	8.699	9.000	9.199	10.000

Initial Supporting table - P16F3_Delta MAP Threshold f(Desired Engine Torque)**Description:** Engine Sync based and Time based delta pressure threshold above which Torque Security error is reported.**Value Units:** Torque Security Threshold for Engine Sync and Time Based Delta Pressure (kPa)**X Unit:** Desired Engine Torque (Nm)

y/x	0.00	50.00	100.00	150.00	200.00	300.00
1.00	27.24	27.24	27.24	27.24	27.24	27.24

21OBDG03C ECM Supporting Tables

Initial Supporting table - P16F3_Speed Control External Load f(Oil Temp, RPM)

Description: Specifies the external load table for SPDR torque security as a function of engine oil temperature and engine RPM.

Value Units: External Load Table for SPDR (Nm)

X Unit: Engine Oil Temperature (deg C)

Y Units: Engine Speed (RPM)

y/x	-40.00	-20.00	-10.00	0.00	50.00	90.00
500.00	137.47	116.03	114.61	115.72	95.01	59.26
650.00	137.47	116.03	114.61	115.72	95.01	59.26
750.00	130.38	111.89	111.51	115.65	91.26	57.51
775.00	131.08	111.89	111.52	115.72	92.01	55.76
800.00	137.47	116.03	114.61	115.72	95.01	54.26
900.00	143.21	129.39	123.18	121.05	93.94	54.38
1,000.00	148.76	141.94	132.52	125.63	93.44	48.76
1,100.00	147.26	140.54	134.77	128.97	97.94	36.76
1,300.00	139.91	134.95	132.22	126.95	90.41	42.80
1,600.00	100.56	97.53	99.48	99.22	71.77	37.10
2,000.00	-62.24	-62.24	-62.24	-62.24	-62.24	-62.24
2,500.00	-68.46	-68.46	-68.46	-68.46	-68.46	-68.46
3,000.00	-74.69	-74.69	-74.69	-74.69	-74.69	-74.69
3,500.00	-80.91	-80.91	-80.91	-80.91	-80.91	-80.91
4,500.00	-87.14	-87.14	-87.14	-87.14	-87.14	-87.14
5,500.00	-93.36	-93.36	-93.36	-93.36	-93.36	-93.36
7,200.00	-99.58	-99.58	-99.58	-99.58	-99.58	-99.58

21OBDG03C ECM Supporting Tables

Initial Supporting table - P0494_LIN_Threshold

Description: Tabulated LIN Fan1 Speed Low Limits**Value Units:** rpm**X Unit:** Commanded LIN Fan1 Speed rpm**Y Units:** Sensed LIN Fan1 Speed Lower Limit rpm

y/x	200	400	600	800	1,000	1,200	1,400	1,600	1,800	2,000	2,200	2,400	2,600	2,800	3,000	3,200	3,400
1	0	190	390	590	790	990	1,190	1,390	1,590	1,790	1,990	2,190	2,390	2,590	2,790	2,990	3,190

210BDG03C ECM Supporting Tables

Initial Supporting table - RufCyl_Decel

Description: Used for P0300-P0308. Crankshaft decel threshold during Idle or GPF regen. Thresholds are a function of rpm and % engine Load.

Value Units: Delta time per cylinder (usec)

X Unit: rpm

Y Units: percent load of max indicated torque (%)

RufCyl_Decel - Part 1

y/x	400	500	600	700	800	900	1,000	1,100	1,200	1,400	1,600	1,800	2,000
3	3,000	2,600	2,300	1,700	950	580	530	490	430	350	175	120	110
6	3,500	3,000	2,400	1,750	1,000	640	530	490	430	350	165	110	100
8	4,000	3,500	2,500	1,800	1,000	640	535	500	436	350	150	100	100
10	4,500	4,000	3,200	1,900	1,050	640	540	541	441	360	159	120	105
12	5,000	4,500	3,400	2,100	1,100	640	550	615	455	314	230	135	110
14	5,000	4,700	3,500	2,250	1,200	650	570	689	467	380	240	155	115
16	5,000	5,000	3,765	2,400	1,300	700	600	769	493	444	250	176	120
18	5,000	5,000	4,235	2,800	1,400	800	700	810	526	446	250	182	135
20	5,000	5,000	4,706	3,000	1,500	950	850	863	558	423	250	203	143
22	5,000	5,000	4,900	3,150	1,700	1,200	1,000	910	647	437	260	223	150
24	5,000	5,000	5,000	3,300	2,000	1,350	1,150	977	717	464	280	240	160
26	5,000	5,000	5,000	3,500	2,100	1,450	1,300	1,040	780	497	300	270	165
30	5,000	5,000	5,000	4,000	2,600	1,900	1,500	1,200	940	600	400	300	200
40	5,000	5,000	5,000	4,200	2,900	2,500	2,000	1,500	1,200	690	550	400	300
60	5,000	5,000	5,000	4,400	3,400	3,000	2,500	2,000	1,500	850	750	600	450
78	5,000	5,000	5,000	4,600	4,000	3,500	3,000	2,500	1,800	1,100	950	800	600
97	5,000	5,000	5,000	5,000	4,400	4,000	3,500	3,000	2,200	1,500	1,200	1,000	750

RufCyl_Decel - Part 2

y/x	2,200	2,400	2,600	2,800	3,000	3,500	4,000	4,500	5,000	5,500	6,000	6,500	7,000
3	91	60	55	52	50	48	45	43	42	40	38	35	29
6	83	55	50	45	43	40	37	32	30	28	27	25	20
8	83	55	48	35	28	25	24	23	22	21	20	19	15
10	85	60	50	38	26	22	21	20	19	18	17	16	12
12	87	62	52	42	28	20	15	14	13	13	12	11	10
14	88	63	54	43	33	20	15	12	12	10	10	9	9
16	90	65	55	46	35	21	16	12	11	9	9	8	8
18	100	70	56	46	37	22	17	12	11	9	8	8	8
20	110	75	65	50	38	23	18	13	11	9	8	7	7
22	120	85	70	56	39	26	19	14	11	9	6	6	6
24	128	95	76	60	45	28	20	15	11	8	7	7	7

21OBDG03C ECM Supporting Tables

Initial Supporting table - RufCyl_Decel

26	135	100	80	62	49	32	22	16	11	8	7	7	7
30	150	103	84	76	54	35	24	17	12	9	7	7	7
40	170	159	121	99	80	52	33	21	14	12	9	7	7
60	320	266	200	167	136	84	53	32	27	19	14	11	10
78	441	344	274	221	182	100	74	45	38	28	18	11	10
97	555	433	344	278	228	140	105	60	55	32	20	11	10

210BDG03C ECM Supporting Tables

Initial Supporting table - RufCyl_Jerk

Description: Crankshaft jerk threshold during Idle or GPF regen. Thresholds are a function of rpm and % engine Load.

Value Units: Delta time per cylinder (usec)

X Unit: rpm

Y Units: percent load of max indicated torque (%)

RufCyl_Jerk - Part 1

y/x	400	500	600	700	800	900	1,000	1,100	1,200	1,400	1,600	1,800	2,000
3	5,600	5,100	4,700	2,600	1,700	900	640	510	430	160	150	130	125
6	5,600	5,100	4,700	2,800	1,800	1,200	664	520	450	180	150	130	125
8	5,700	5,200	4,800	3,200	2,100	1,400	885	650	450	180	170	130	125
10	6,900	6,400	5,900	3,600	2,500	1,526	1,000	710	460	280	184	130	135
12	8,000	7,500	7,000	4,000	2,700	1,711	1,100	800	480	300	250	175	140
14	8,000	8,000	8,000	4,605	2,800	1,800	1,200	880	500	325	280	200	143
16	8,000	8,000	8,000	5,000	3,100	2,000	1,400	990	560	358	365	210	148
18	8,000	8,000	8,000	5,500	3,500	2,300	1,600	1,100	688	453	443	250	160
20	8,000	8,000	8,000	6,000	4,300	2,600	1,790	1,300	880	570	526	300	170
22	8,000	8,000	8,000	6,500	4,600	3,100	1,900	1,450	1,043	680	579	342	220
24	8,000	8,000	8,000	7,000	5,500	3,700	2,011	1,639	1,288	800	631	400	240
26	8,000	8,000	8,000	7,500	6,300	4,200	2,218	1,779	1,406	950	644	477	270
30	8,000	8,000	8,000	8,000	7,000	4,700	2,397	2,027	1,716	1,100	789	550	330
40	8,000	8,000	8,000	8,000	7,800	5,200	3,500	3,000	2,200	1,400	1,052	600	500
60	8,000	8,000	8,000	8,000	8,000	6,000	4,800	3,800	2,800	1,900	1,350	800	680
78	8,000	8,000	8,000	8,000	8,000	6,800	5,800	4,500	3,500	2,400	1,950	1,421	900
97	8,000	8,000	8,000	8,000	8,000	7,600	6,600	5,200	4,200	3,300	2,563	1,788	1,200

RufCyl_Jerk - Part 2

y/x	2,200	2,400	2,600	2,800	3,000	3,500	4,000	4,500	5,000	5,500	6,000	6,500	7,000
3	100	80	70	65	60	55	51	48	46	44	42	38	38
6	100	75	60	55	50	45	42	40	38	35	33	30	30
8	110	76	60	50	40	35	33	32	30	28	25	23	23
10	114	82	60	50	40	30	28	25	22	20	18	16	16
12	116	89	73	62	45	34	19	18	17	16	15	14	14
14	118	96	75	65	45	34	23	16	15	13	12	11	11
16	120	108	76	66	45	38	26	18	13	10	10	10	10
18	125	110	82	67	46	42	29	20	15	11	10	10	10
20	130	112	84	68	48	45	32	23	16	12	10	10	8
22	172	116	96	85	63	48	35	25	18	14	10	10	9
24	200	152	120	104	71	51	39	26	20	15	11	10	9

21OBDG03C ECM Supporting Tables

Initial Supporting table - RufCyl_Jerk

26	210	174	150	108	90	57	42	28	21	16	12	10	9
30	260	190	170	120	98	65	46	34	24	18	14	11	10
40	300	290	230	165	145	90	62	41	28	24	19	13	11
60	400	350	280	202	190	144	92	56	40	34	24	16	15
78	650	530	460	360	280	186	124	87	63	47	36	28	20
97	900	640	580	460	370	234	156	109	79	59	45	36	30

210BDG03C ECM Supporting Tables

Initial Supporting table - RufSCD_Decel

Description: Used for P0300-P0308. Crankshaft decel threshold while in SCD mode during Idle or GPF regen. SCD mode uses smaller windows near TDC. Thresholds are a function of rpm and % engine Load. Note: Misfire's Load term is %, but not PID\$04. PID \$04 is not robust to temperature and altitude shifts. (especially decel and jerk thresholds since they track actual air trapped in cylinder)

Value Units: Delta time per cylinder (usec)

X Unit: rpm

Y Units: percent load of max indicated torque (%)

RufSCD_Decel - Part 1

y/x	400	500	600	700	800	900	1,000	1,100	1,200	1,400	1,600	1,800	2,000
3	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767
6	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767
8	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767
10	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767
12	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767
14	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767
16	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767
18	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767
20	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767
22	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767
24	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767
26	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767
30	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767
40	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767
60	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767
78	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767
97	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767

RufSCD_Decel - Part 2

y/x	2,200	2,400	2,600	2,800	3,000	3,500	4,000	4,500	5,000	5,500	6,000	6,500	7,000
3	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767
6	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767
8	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767
10	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767
12	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767
14	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767
16	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767
18	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767
20	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767

21OBDG03C ECM Supporting Tables

Initial Supporting table - RufSCD_Decel

22	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767
24	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767
26	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767
30	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767
40	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767
60	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767
78	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767
97	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767

Initial Supporting table - RufSCD_Jerk

Description: Used for P0300-P0308. Crankshaft jerk threshold while in SCD mode during Idle or GPF regen. SCD mode uses smaller windows near TDC. Thresholds are a function of rpm and % engine Load.

Value Units: Delta time per cylinder (usec)

X Unit: rpm

Y Units: percent load of max indicated torque (%)

RufSCD_Jerk - Part 1

y/x	400	500	600	700	800	900	1,000	1,100	1,200	1,400	1,600	1,800	2,000
3	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767
6	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767
8	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767
10	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767
12	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767
14	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767
16	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767
18	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767
20	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767
22	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767
24	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767
26	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767
30	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767
40	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767
60	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767
78	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767
97	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767

RufSCD_Jerk - Part 2

y/x	2,200	2,400	2,600	2,800	3,000	3,500	4,000	4,500	5,000	5,500	6,000	6,500	7,000
3	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767
6	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767
8	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767
10	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767
12	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767
14	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767
16	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767
18	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767
20	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767
22	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767

21OBDG03C ECM Supporting Tables

Initial Supporting table - RufSCD_Jerk

24	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767
26	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767
30	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767
40	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767
60	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767
78	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767
97	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767

Initial Supporting table - P0324_PerCyl_ExcessiveKnock_Threshold

Description: Fail threshold for the Knock Performance per-cylinder Excessive Knock Diagnostic

y/x	500	1,000	1,500	2,000	2,500	3,000	3,500	4,000	4,500	5,000	5,500	6,000	6,500	7,000	7,500	8,000	8,500
1	2.00	2.00	2.00	2.00	2.00	2.00	2.00	2.00	2.00	2.00	2.00	2.00	2.00	2.00	2.00	2.00	2.00

Initial Supporting table - P0325_P0330_OpenCktThrshMax (20 kHz)

Description: Knock Open Circuit Diagnostic Maximum Threshold when using the 20 kHz method (see "OpenMethod" description)

y/x	500	1,000	1,500	2,000	2,500	3,000	3,500	4,000	4,500	5,000	5,500	6,000	6,500	7,000	7,500	8,000	8,500
1	8.4004	8.4004	8.3496	8.2500	8.2500	8.5000	8.8008	8.5000	8.5000	8.0000	8.5000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000

Initial Supporting table - P0325_P0330_OpenCktThrshMax (Normal Noise)

Description: Knock Open Circuit Diagnostic Minimum Threshold when using the Normal Noise method (see "OpenMethod" description): When using the Normal Noise method (see "OpenMethod" description).

y/x	2,700	2,900	3,000	3,250	3,500	3,750	4,000	4,250	4,500	4,750	5,000	5,500	6,000	6,500	7,000	7,500	8,500
1	0.0000	0.0000	0.0000	0.0000	0.0000	0.0000	0.0000	0.0000	0.0000	0.0000	0.0000	0.0000	0.0000	0.0000	0.0000	0.0000	0.0000

Initial Supporting table - P0325_P0330_OpenCktThrshMin (20 kHz)**Description:** Knock Open Circuit Diagnostic Minimum Threshold when using the 20 kHz method (see "OpenMethod" description)

y/x	500	1,000	1,500	2,000	2,500	3,000	3,500	4,000	4,500	5,000	5,500	6,000	6,500	7,000	7,500	8,000	8,500
1	3.0000	3.0000	2.9004	2.8496	2.8496	2.9492	3.0508	2.9492	2.9492	2.8008	2.9492	2.8008	2.8008	2.8008	2.8008	2.8008	2.8008

Initial Supporting table - P0325_P0330_OpenCktThrshMin (Normal Noise)

Description: Knock Open Circuit Diagnostic Minimum Threshold when using the Normal Noise method (see "OpenMethod" description): When using the Normal Noise method (see "OpenMethod" description).

y/x	2,700	2,900	3,000	3,250	3,500	3,750	4,000	4,250	4,500	4,750	5,000	5,500	6,000	6,500	7,000	7,500	8,500
1	0.0000	0.0000	0.0000	0.0000	0.0000	0.0000	0.0000	0.0000	0.0000	0.0000	0.0000	0.0000	0.0000	0.0000	0.0000	0.0000	0.0000

Initial Supporting table - P0325_P0330_OpenMethod_2

Description: Defines which Knock Open Circuit Diagnostic method to use.

P0325_P0330_OpenMethod_2 - Part 1

y/x	0	1	2	3	4
1	CeKNKD_e_Open_20KHz	CeKNKD_e_Open_20KHz	CeKNKD_e_Open_20KHz	CeKNKD_e_Open_20KHz	CeKNKD_e_Open_20KHz

P0325_P0330_OpenMethod_2 - Part 2

y/x	5	6	7	8	9
1	CeKNKD_e_Open_20KHz	CeKNKD_e_Open_20KHz	CeKNKD_e_Open_20KHz	CeKNKD_e_Open_20KHz	CeKNKD_e_Open_20KHz

P0325_P0330_OpenMethod_2 - Part 3

y/x	10	11	12	13	14
1	CeKNKD_e_Open_20KHz	CeKNKD_e_Open_20KHz	CeKNKD_e_Open_20KHz	CeKNKD_e_Open_20KHz	CeKNKD_e_Open_20KHz

P0325_P0330_OpenMethod_2 - Part 4

y/x	15	16			
1	CeKNKD_e_Open_20KHz	CeKNKD_e_Open_20KHz			

Initial Supporting table - P0326_P0331_AbnormalNoise_CylsEnabled**Description:** Specifies which cylinders will be used for the Abnormal Noise portion of the performance diagnostics (1 = cylinder used, 0 = cylinder not used)

y/x	0	1	2	3	4	5	6	7
1	1	1	1	1	0	0	0	0

Initial Supporting table - P0326_P0331_AbnormalNoise_Threshold**Description:** Fail threshold for the Knock Performance Abnormal Noise Diagnostic when engine is NOT in AFM mode

y/x	500	1,000	1,500	2,000	2,500	3,000	3,500	4,000	4,500	5,000	5,500	6,000	6,500	7,000	7,500	8,000	8,500
1	1.190	1.190	0.950	0.750	0.640	0.510	0.550	0.410	0.330	0.290	0.330	0.300	0.300	0.300	0.300	0.300	0.300

Initial Supporting table - P06B6_P06B7_OpenTestCktThrshMax

Description: Knock Open Circuit Minimum Threshold for Internal Circuit Diagnostic. Used only when the 20 kHz method is being used (see "OpenMethod" description). The Open Test Circuit ensures that the internal circuit used to generate the 20 kHz signal for the Open Circuit diags (P0325, P0330) is within range.

y/x	500	1,000	1,500	2,000	2,500	3,000	3,500	4,000	4,500	5,000	5,500	6,000	6,500	7,000	7,500	8,000	8,500
1	0.178	0.178	0.176	0.186	0.188	0.197	0.225	0.254	0.262	0.309	0.418	0.527	0.738	0.738	0.738	0.738	0.738

Initial Supporting table - P06B6_P06B7_OpenTestCktThrshMin

Description: Knock Open Circuit Minimum Threshold for Internal Circuit Diagnostic. Used only when the 20 kHz method is being used (see "OpenMethod" description). The Open Test Circuit ensures that the internal circuit used to generate the 20 kHz signal for the Open Circuit diags (P0325, P0330) is within range.

y/x	500	1,000	1,500	2,000	2,500	3,000	3,500	4,000	4,500	5,000	5,500	6,000	6,500	7,000	7,500	8,000	8,500
1	0.078	0.078	0.078	0.080	0.080	0.092	0.094	0.117	0.129	0.148	0.205	0.234	0.293	0.293	0.293	0.293	0.293

21OBDG03C TCM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Malfunction	Enable Conditions	Time Required	MIL Illum.
Transmission Control Module (TCM)	P0601	Transmission Electro-Hydraulic Control Module Read Only Memory	Incorrect program/calibrations checksum	= TRUE Boolean	Disable Conditions: MIL not Illuminated for DTC's	TCM: P0601 ECM: None	>= 5 Fail Counts	One Trip
Transmission Control Module (TCM)	P0603	Transmission Electro-Hydraulic Control Module Long-Term Memory Reset	Non-volatile memory (static or dynamic) checksum failure at Powerup	= TRUE Boolean	Disable Conditions: MIL not Illuminated for DTC's	TCM: P0603 ECM: None	Runs Continuously	One Trip
Transmission Control Module (TCM)	P0604	Transmission Electro-Hydraulic Control Module Random Access Memory	RAM Read/Write Failure (Single Word)	= TRUE Boolean	Disable Conditions: MIL not Illuminated for DTC's	TCM: P0604 ECM: None	>= 5 Fail Counts = 16 Sample Counts	One Trip
Transmission Control Module (TCM)	P062F	Transmission Electro-Hydraulic Control Module Long Term Memory Performance	TCM Non-Volatile Memory bit Incorrect flag at Powerdown	= TRUE Boolean	Disable Conditions: MIL not Illuminated for DTC's	TCM: P062F ECM: None	Runs Continuously	One Trip
Transmission Control Module (TCM)	P0634	Transmission Electro-Hydraulic Control Module Internal Temperature Too High	<u>Fail Case 1</u> Substrate Temperature	>= 142.1015625 °C			>= 5 Fail Time (Sec)	One Trip
			<u>Fail Case 2</u> Substrate Temperature	>= 50 °C			>= 2 Fail Time (Sec)	
			Ignition Voltage	>= 18 Volts				

21OBDG03C TCM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Malfunction	Enable Conditions	Time Required	Mil Illum.
			Note: either fail case can set the DTC					
					Ignition Voltage Lo Ignition Voltage Hi Substrate Temp Lo Substrate Temp Hi Substrate Temp Between Temp Range for Time P0634 Status is	>= 8.5996094 Volts <= 31.999023 Volts >= 0 °C <= 170 °C >= 0.25 Sec Test Failed This Key On or Fault Active ≠		
High Side Driver 1	P0658	Actuator Supply Voltage Circuit Low	The HWIO reports a low voltage (open or ground short) error flag	= TRUE Boolean				One Trip
					P0658 Status is not High Side Driver 1 On	= Test Failed This Key On or Fault Active = True Boolean	>= 4 Fail Counts out of 6 Sample Counts	
Transmission Control Module (TCM)	P0667	TCM Internal Temp (substrate) Sensor Circuit Range/Performance	If transmission oil temp to substrate temp Δ	Refer to Table 19 in supporting documents > °C				Two Trips
			If TCM substrate temp to power up temp Δ	Refer to Table 20 in supporting documents > °C				
			Both conditions above required to increment fail counter				>= 3000 Fail Counts (100ms loop)	

210BDG03C TCM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Malfunction	Enable Conditions	Time Required	Mil Illum.
			Note: table reference temp = to the median temp of trans oil temp, substrate temp and power up temp.				Out of 3750 Sample Counts (100ms loop)	
			Non-continuous (intermittent) fail conditions will delay resetting fail counter until				>= 700 Pass Counts (100ms loop)	
							Out of 875 Sample Counts (100ms loop)	
					Engine Torque Signal Valid Accelerator Position Signal Valid Ignition Voltage Lo Ignition Voltage Hi Engine Speed Lo Engine Speed Hi Engine Speed is within the allowable limits for Brake torque active	= TRUE Boolean = TRUE Boolean >= 8.5996094 Volts <= 31.999023 Volts >= 400 RPM <= 7500 RPM >= 5 Sec = FALSE		
					Below describes the brake torque entry criteria Engine Torque Throttle Transmission Input Speed Vehicle Speed Transmission Range Transmission Range PTO Set Brake Torque Active TRUE if above conditions are met for	>= 90 N*m >= 30.000305 Pct <= 200 RPM <= 8 Kph ≠ Park ≠ Neutral = Not Active >= 7 sec		
					Below describes the brake torque exit criteria Brake torque entry criteria Clutch hydraulic pressure Clutch used to exit brake torque active The above clutch pressure is greater than this value for one loop Set Brake Torque Active FALSE if above conditions are met for	= Not Met ≠ Hydraulic ≠ Air Purge = CeTFTD_e _C3_RatlE nbl >= 600 kpa >= 20 Sec		

21OBDG03C TCM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Malfunction	Enable Conditions	Time Required	Mil Illum.
					P0667 Status is	Test Failed This Key On or Fault Active		
				Disable Conditions:	MIL not Illuminated for DTC's:	TCM: P0658, P0668, P0669, P06AD, P06AE, P0716, P0712, P0713, P0717, P0722, P0723, P0962, P0963, P0966, P0967, P0970, P0971, P215C, P2720, P2721, P2729, P2730 ECM: P0101, P0102, P0103, P0106, P0107, P0108, P0171, P0172, P0174, P0175, P0201, P0202, P0203, P0204, P0205, P0206, P0207, P0208, P0300, P0301, P0302, P0303, P0304, P0305, P0306, P0307, P0308, P0401, P042E		
Transmission Control Module (TCM)	P0668	TCM internal temperature (substrate) thermistor failed at a low voltage	Type of Sensor Used =	CeTFTI_e_Vol = tageDirectPro p				Two Trips
			If TCM Substrate Temperature Sensor = Direct Proportional and Temp	<= -249 °C				
			If TCM Substrate Temperature Sensor = Indirect Proportional and Temp	>= -249 °C				
			Either condition above will satisfy the fail conditions				>= 60 Fail Timer (Sec)	
					Ignition Voltage Lo Ignition Voltage Hi Engine Speed Lo Engine Speed Hi Engine Speed is within the allowable limits for	>= 8.5996094 Volts <= 31.999023 Volts >= 400 RPM <= 7500 RPM >= 5 Sec		
				Disable Conditions:	MIL not Illuminated for DTC's:	Test Failed This Key On or Fault Active TCM: None ECM: None		

21OBDG03C TCM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Malfunction	Enable Conditions	Time Required	Mil Illum.
Transmission Control Module (TCM)	P0669	TCM internal temperature (substrate) thermistor failed at a high voltage	Type of Sensor Used =	CeTFTI_e_Vol tageDirectPro p				Two Trips
			If TCM Substrate Temperature Sensor = Direct Proportional and Temp	>= 249 °C				
			If TCM Substrate Temperature Sensor = Indirect Proportional and Temp	<= 249 °C				
			Either condition above will satisfy the fail conditions				>= 60 Fail Timer (Sec)	
					Ignition Voltage Lo Ignition Voltage Hi Engine Speed Lo Engine Speed Hi Engine Speed is within the allowable limits for	>= 8.5996094 Volts <= 31.999023 Volts >= 400 RPM <= 7500 RPM >= 5 Sec		
					P0669 Status is	Test Failed This Key On or Fault Active		
					For Hybrids, below conditions must also be met			
					Estimated Motor Power Loss	>= 0 kW		
					Estimated Motor Power Loss greater than limit for time	>= 0 Sec		
					Lost Communication with Hybrid Processor Control Module	= FALSE		
					Estimated Motor Power Loss Fault	= FALSE		
				Disable Conditions:	MIL not Illuminated for DTC's:	TCM: P0716, P0717, P0722, P0723 ECM: None		
Transmission Control Module (TCM)	P06AC	TCM Power-up Temp Sensor Circuit Range/Performance	If TCM power-up temp to substrate temp Δ	Refer to Table 20 in supporting documents				Two Trips
			If transmission oil temp to power up temp Δ	Refer to Table 18 in supporting documents				

210BDG03C TCM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Malfunction	Enable Conditions	Time Required	Mil Illum.
			Both conditions above required to increment fail counter Note: table reference temp = to the median temp of trans oil temp, substrate temp and power up temp.				>= 3000 Fail Counts (100ms loop) Out of 3750 Sample Counts (100ms loop)	
			Non-continuous (intermittent) fail conditions will delay resetting fail counter until				>= 700 Pass Counts (100ms loop) Out of 875 Sample Counts (100ms loop)	
					Engine Torque Signal Valid Accelerator Position Signal Valid Ignition Voltage Low Ignition Voltage High Engine Speed Low Engine Speed High Engine Speed is within the allowable limits for Brake torque active	= TRUE Boolean = TRUE Boolean >= 8.5996094 Volts <= 31.999023 Volts >= 400 RPM <= 7500 RPM >= 5 Sec = FALSE		
					Below describes the brake torque entry criteria Engine Torque Throttle Transmission Input Speed Vehicle Speed Transmission Range Transmission Range PTO Set Brake Torque Active TRUE if above conditions are met for	>= 90 N*m >= 30.000305 Pct <= 200 RPM <= 8 Kph ≠ Park ≠ Neutral = Not Active >= 7 sec		
					Below describes the brake torque exit criteria Brake torque entry criteria Clutch hydraulic pressure Clutch used to exit brake torque active The above clutch pressure is greater than this value for one loop Set Brake Torque Active FALSE if above conditions are met for	= Not Met Clutch ≠ Hydraulic Air Purge Event = CeTFTD_e_C3_RatE_nbl >= 600 kpa >= 20 Sec		

21OBDG03C TCM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Malfunction	Enable Conditions	Time Required	Mil Illum.

21OBDG03C TCM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Malfunction	Enable Conditions	Time Required	Mil Illum.
Transmission Control Module (TCM)	P06AE	TCM power-up thermistor circuit voltage high	Power Up Temp	>= 164 °C			>= 60 Fail Time (Sec)	Two Trips
					Ignition Voltage Lo Ignition Voltage Hi Engine Speed Lo Engine Speed Hi Engine Speed is within the allowable limits for P06AE Status is Disable Conditions:	>= 8.5996094 Volts <= 31.999023 Volts >= 400 RPM <= 7500 RPM >= 5 Sec Test Failed This Key On or Fault Active TCM: None ECM: None		
Transmission Fluid Temperature Sensor (TFT)	P0711	Trans Fluid Temp Sensor Circuit Range/Performance	If transmission oil temp to substrate temp Δ	> 19 in supporting documents °C				Two Trips
			If transmission oil temp to power up temp Δ	> 18 in supporting documents °C				
			Both conditions above required to increment fail counter Note: table reference temp = to the median temp of trans oil temp, substrate temp and power up temp.				>= 3000 Fail Counts (100ms loop) Out of 3750 Sample Counts (100ms loop)	
			Non-continuous (intermittent) fail conditions will delay resetting fail counter until				>= 700 Pass Counts (100ms loop) Out of 875 Sample Counts (100ms loop)	
					Engine Torque Signal Valid Accelerator Position Signal Valid Ignition Voltage Lo Ignition Voltage Hi Engine Speed Lo Engine Speed Hi Engine Speed is within the allowable limits for	= TRUE Boolean = TRUE Boolean >= 8.5996094 Volts <= 31.999023 Volts >= 400 RPM <= 7500 RPM >= 5 Sec		

21OBDG03C TCM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Malfunction	Enable Conditions	Time Required	Mil Illum.
					Brake torque active Below describes the brake torque entry criteria Engine Torque Throttle Transmission Input Speed Vehicle Speed Transmission Range Transmission Range PTO Set Brake Torque Active TRUE if above conditions are met for	= FALSE >= 90 N*m >= 30.000305 Pct <= 200 RPM <= 8 Kph ≠ Park ≠ Neutral = Not Active >= 7 sec		
					Below describes the brake torque exit criteria Brake torque entry criteria Clutch hydraulic pressure Clutch used to exit brake torque active The above clutch pressure is greater than this value for one loop Set Brake Torque Active FALSE if above conditions are met for P0711 Status is MIL not Illuminated for DTC's: TCM: P0658, P0668, P0669, P06AD, P06AE, P0716, P0712, P0713, P0717, P0722, P0723, P0962, P0963, P0966, P0967, P0970, P0971, P215C, P2720, P2721, P2729, P2730 ECM: P0101, P0102, P0103, P0106, P0107, P0108, P0171, P0172, P0174, P0175, P0201, P0202, P0203, P0204, P0205, P0206, P0207, P0208, P0300, P0301, P0302, P0303, P0304, P0305, P0306, P0307, P0308, P0401, P042E	= Not Met Clutch ≠ Hydraulic Air Purge Event = CeTFTD_e_C3_RatIE nbl >= 600 kpa >= 20 Sec ≠ Test Failed This Key On or Fault Active		
Transmission Fluid Temperature Sensor (TFT)	P0712	Transmission fluid temperature thermistor failed at a low voltage	Type of Sensor Used	CeTFTI_e_Vol = tageDirectProc				Two Trips

21OBDG03C TCM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Malfunction	Enable Conditions	Time Required	Mil Illum.
			If Transmission Fluid Temperature Sensor = Direct Proportional and Temp	<= -74 °C				
			If Transmission Fluid Temperature Sensor = Indirect Proportional and Temp	>= -74 °C				
			Either condition above will satisfy the fail conditions				>= 60 Fail Time (Sec)	
					Ignition Voltage Lo Ignition Voltage Hi Engine Speed Lo Engine Speed Hi Engine Speed is within the allowable limits for	>= 8.5996094 Volts <= 31.999023 Volts >= 400 RPM <= 7500 RPM >= 5 Sec		
					P0712 Status is	Test Failed This Key On or Fault Active		
					For Hybrids, below conditions must also be met			
					Estimated Motor Power Loss	>= 0 kW		
					Estimated Motor Power Loss greater than limit for time	>= 0 Sec		
					Lost Communication with Hybrid Processor Control Module	= FALSE		
					Estimated Motor Power Loss Fault	= FALSE		
				Disable Conditions:	MIL not Illuminated for DTC's:	TCM: P0716, P0717, P0722, P0723 ECM: None		
Transmission Fluid Temperature Sensor (TFT)	P0713	Transmission fluid temperature thermistor failed at a high voltage	Type of Sensor Used	CeTFTI_e_Vol = tageDirectPro p				Two Trips
			If Transmission Fluid Temperature Sensor = Direct Proportional and Temp	>= 174 °C				
			If Transmission Fluid Temperature Sensor = Indirect Proportional and Temp	<= 174 °C				
			Either condition above will satisfy the fail conditions				>= 60 Fail Time (Sec)	
					Ignition Voltage Lo Ignition Voltage Hi Engine Speed Lo Engine Speed Hi	>= 8.5996094 Volts <= 31.999023 Volts >= 400 RPM <= 7500 RPM		

21OBDG03C TCM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Malfunction	Enable Conditions	Time Required	Mil Illum.
					Engine Speed is within the allowable limits for P0713 Status is Disable Conditions:	>= 5 Sec Test Failed This Key On or Fault Active TCM: P0713, P0716, P0717, P0722, P0723 ECM: None		
Transmission Input Speed Sensor (TISS)	P0716	Input Speed Sensor Performance	Transmission Input Speed Sensor Drops	>= 900 RPM			>= 0.8 Fail Time (Sec)	One Trip
					Engine Torque is Engine Torque is Engine Speed Engine Speed Engine Speed is within the allowable limits for Vehicle Speed is Throttle Position is ----- Transmission Input Speed is The previous requirement has been satisfied for ----- The change (loop to loop) in transmission input speed is The previous requirement has been satisfied for Throttle Position Signal Valid Engine Torque Signal Valid Ignition Voltage Ignition Voltage P0716 Status is not Disable Conditions:	>= 0 N*m <= 8191.875 N*m >= 400 RPM <= 7500 RPM >= 5 Sec >= 10 Kph >= 0 Pct >= 0 RPM >= 0 Sec < 8191.875 RPM/Loop >= 0 Sec = TRUE Boolean = TRUE Boolean >= 8.5996094 Volts <= 31.999023 Volts Test Failed This Key On or Fault Active TCM: P0717, P0752, P0973, P0974 ECM: P0101, P0102, P0103, P0121, P0122, P0123		

21OBDG03C TCM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Malfunction	Enable Conditions	Time Required	Mil Illum.
Transmission Input Speed Sensor (TISS)	P0717	Input Speed Sensor Circuit Low Voltage	Fail Case 1 Transmission Input Speed is	< 33 RPM			>= 4.5 Fail Time (Sec)	One Trip
			Fail Case 2 When P0722 DTC Status equal to Test Failed and Transmission Input Speed is	< 653.125 RPM	Controller uses a single power supply for the speed sensors	= 1 Boolean		
					Engine Torque is >= 80 N*m Engine Torque is <= 8191.875 N*m Vehicle Speed >= 10 Kph Engine Torque Signal Valid = TRUE Boolean Ignition Voltage >= 8.5996094 Volts Ignition Voltage <= 31.999023 Volts Engine Speed >= 400 RPM Engine Speed <= 7500 RPM Engine Speed is within the allowable limits for >= 5 Sec Test Failed This Key P0717 Status is not = On or Fault Active Disable Conditions: MIL not Illuminated for DTC's: TCM: P0722, P0723 ECM: P0101, P0102, P0103			
Transmission Output Speed Sensor (TOSS)	P0722	Output Speed Sensor Circuit Low Voltage	Transmission Output Speed	<= 35 RPM			>= 4.5 Fail Time (Sec)	One Trip
			Sensor Raw Speed			P0722 Status is not = Test Failed This Key On or Fault Active Transmission Input Speed Check = TRUE Boolean Engine Torque Check = TRUE Boolean Throttle Position >= 8.0001831 Pct Transmission Fluid Temperature >= -40 °C Disable this DTC if the PTO is active = 1 Boolean Engine Torque Signal Valid = TRUE Boolean Throttle Position Signal Valid = TRUE Boolean Ignition Voltage is >= 8.5996094 Volts Ignition Voltage is <= 31.999023 Volts Engine Speed is >= 400 RPM Engine Speed is <= 7500 RPM Engine Speed is within the allowable limits for >= 5 Sec		

21OBDG03C TCM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Malfunction	Enable Conditions	Time Required	Mil Illum.
					Enable_Flags Defined Below			
					The Engine Torque Check is TRUE, if either of the two following conditions are TRUE			
					Engine Torque Condition 1			
					Range Shift Status	≠ Range shift completed ENUM		
					OR			
					Transmission Range is	= Park or Neutral		
					Engine Torque is	>= 8191.75 N*m		
					Engine Torque is	<= 8191.75 N*m		
					Engine Torque Condition 2			
					Engine Torque is	>= 50 N*m		
					Engine Torque is	<= 8191.75 N*m		

					The Transmission Input Speed (TIS) Check is TRUE, if either of the two following conditions are TRUE			
					TIS Check Condition 1			
					Transmission Input Speed is	>= 653.125 RPM		
					Transmission Input Speed is	<= 5350 RPM		
					TIS Check Condition 2			
					Engine Speed without the brake applied is	>= 3200 RPM		
					Engine Speed with the brake applied is	>= 3200 RPM		
					Engine Speed is	<= 8191.875 RPM		
					Controller uses a single power supply for the speed sensors	= 1 Boolean		
					Powertrain Brake Pedal is Valid	= TRUE Boolean		
				Disable Conditions:	MIL not Illuminated for DTC's:	TCM: P0716, P0717, P0723 ECM: P0101, P0102, P0103, P0121, P0122, P0123		

21OBDG03C TCM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Malfunction	Enable Conditions	Time Required	Mil Illum.
Transmission Output Speed Sensor (TOSS)	P0723	Output Speed Sensor Circuit Intermittent	Transmission Output Speed Sensor Raw Speed	>= 105 RPM			>= 0 Enable Time (Sec)	One Trip
			Output Speed Delta	<= 8192 RPM			>= 0 Enable Time (Sec)	
			Output Speed Drop	> 650 RPM			>= 1.5 Output Speed Drop Recovery Fail Time (Sec)	
			AND Transmission Range is	= Driven range (R,D)				
					Range_Disable OR	= FALSE See Below		
					Neutral_Range_Enable And Neutral_Speed_Enable are TRUE concurrently	= TRUE See Below		
					Transmission_Range_Enable	= TRUE See Below		
					Transmission_Input_Speed_En able	= TRUE See Below		
					No Change in Transfer Case Range (High <-> Low) for	>= 5 Seconds		
					P0723 Status is not	= Test Failed This Key On or Fault Active		
					Disable this DTC if the PTO is active	= 1 Boolean		
					Ignition Voltage is	>= 8.5996094 Volts		
					Ignition Voltage is	<= 31.999023 Volts		
					Engine Speed is	>= 400 RPM		
					Engine Speed is	<= 7500 RPM		
					Engine Speed is within the allowable limits for	>= 5 Sec		
					Enable_Flags Defined Below			
					Transmission_Input_Speed_En able is TRUE when either TIS Condition 1 or TIS Condition 2 is TRUE			
					TIS Condition 1 is TRUE when both of the following conditions are satisfied for	>= 0 Enable Time (Sec)		
					Input Speed Delta	<= 4095.875 RPM		
					Raw Input Speed	>= 500 RPM		

210BDG03C TCM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Malfunction	Enable Conditions	Time Required	Mil Illum.
					TIS Condition 2 is TRUE when ALL of the next two conditions are satisfied Input Speed A Single Power Supply is used for all speed sensors	= 0 RPM = TRUE Boolean		
					Neutral_Range_Enable is TRUE when any of the next 3 conditions are TRUE Transmission Range is Transmission Range is Transmission Range is And when a drop occurs Loop to Loop Drop of Transmission Output Speed is	= Neutral ENUM = Reverse/Neutral Transitoal ENUM = Neutral/Drive Transitiona I ENUM > 650 RPM		
					Range_Disable is TRUE when any of the next three conditions are TRUE Transmission Range is Transmission Range is Input Clutch is not	= Park ENUM = Park/Reverse Transitoal ENUM = ON (Fully Applied) ENUM		
					Neutral_Speed_Enable is TRUE when ALL of the next three conditions are satisfied for Transmission Output Speed The loop to loop change of the Transmission Output Speed is The loop to loop change of the Transmission Output Speed is	> 1.5 Seconds > 130 RPM < 20 RPM > -10 RPM		
					Transmission_Range_Enable is TRUE when one of the next six conditions is TRUE Transmission Range is	= Neutral ENUM		

21OBDG03C TCM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Malfunction	Enable Conditions	Time Required	Mil Illum.
					Transmission Range is	= Reverse/Neutral Transition I	ENUM	
					Transmission Range is	= Neutral/Drive Transition I	ENUM	
					Time since a driven range (R,D) has been selected	>= Table Based Time Please Refer to Table 21 in supporting documents	Sec	
					Transmission Output Speed Sensor Raw Speed	>= 500	RPM	
					Output Speed when a fault was detected	>= 500	RPM	
				Disable Conditions:	MIL not Illuminated for DTC's:	TCM: P0973, P0974, P0976, P0977 ECM: P0101, P0102, P0103, P0121, P0122, P0123		
Torque Converter Clutch (TCC)	P0741	TCC System Stuck OFF	TCC Pressure Either Condition (A) or (B) Must be Met	>= 750 Kpa			>= 2 Enable Time (Sec)	Two Trips
			(A) TCC Slip Error @ TCC On Mode	>= 1 in Supporting Documents			>= 5 Fail Time (Sec)	
			(B) TCC Slip @ Lock On Mode	>= 130 RPM			>= 5 Fail Time (Sec)	
			If Above Conditions Have been Met, and Fail Timer Expired, Increment Fail Counter				>= 2 TCC Stuck Off Fail Counter	
					TCC Mode	= On or Lock		
					Ignition Voltage Low	>= 8.5996094 Volts		
					Ignition Voltage High	<= 31.999023 Volts		
					Engine Speed	>= 400 RPM		
					Engine Speed	<= 7500 RPM		
					Engine Speed is within the allowable limits for	>= 5 Sec		
					Engine Torque Low	>= 50 N*m		

21OBDG03C TCM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Malfunction	Enable Conditions	Time Required	Mil Illum.
					Engine Torque High Throttle Position Low Throttle Position High 2nd Gear Ratio Low 2nd Gear Ratio High 3rd Gear Ratio Low 3rd Gear Ratio High 4th Gear Ratio Low 4th Gear Ratio High 5th Gear Ratio Low 5th Gear Ratio High 6th Gear Ratio Low 6th Gear Ratio High Transmission Fluid Temperature Low Transmission Fluid Temperature High PTO Not Active Engine Torque Signal Valid Throttle Position Signal Valid Dynamic Mode P0741 Status is	<= 8191.875 N*m >= 8.0001831 Pct <= 99.998474 Pct >= 2.1948242 Ratio <= 2.5251465 Ratio >= 1.4228516 Ratio <= 1.637085 Ratio >= 1.069458 Ratio <= 1.2304688 Ratio >= 0.7905273 Ratio <= 0.9095459 Ratio >= 0.6230469 Ratio <= 0.7169189 Ratio >= -6.65625 °C <= 130 °C = TRUE Boolean = TRUE Boolean = TRUE Boolean = FALSE Boolean ≠ Test Failed This Key On or Fault Active		
				Disable Conditions:	MIL not Illuminated for DTC's:	TCM: P0716, P0717, P0722, P0723, P0742, P2763, P2764 ECM: P0101, P0102, P0103, P0106, P0107, P0108, P0171, P0172, P0174, P0175, P0201, P0202, P0203, P0204, P0205, P0206, P0207, P0208, P0300, P0301, P0302, P0303, P0304, P0305, P0306, P0307, P0308, P0401, P042E		
Torque Converter Clutch (TCC)	P0742	TCC System Stuck ON	TCC Slip Speed TCC Slip Speed If Above Conditions Have been Met, and Fail Timer Expired, Increment Fail Counter	>= -50 RPM <= 13 RPM			>= 1.5 Fail Time (Sec) >= 6 Fail Counter	One Trip
					TCC Mode Enable test if Cmnd Gear = 1stFW and value true Enable test if Cmnd Gear = 2nd and value true	= Off = 1 Boolean = 0 Boolean		

21OBDG03C TCM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Malfunction	Enable Conditions	Time Required	Mil Illum.
					Engine Speed Hi	<= 6000 RPM		
					Engine Speed Lo	>= 500 RPM		
					Vehicle Speed Hi	<= 511 KPH		
					Vehicle Speed Lo	>= 1 KPH		
					Engine Torque Hi	<= 8191,875 Nm		
					Engine Torque Lo	>= 80 Nm		
					Current Range	≠ Neutral Range		
					Current Range	≠ Reverse Range		
					Transmission Sump Temperature	<= 130 °C		
					Transmission Sump Temperature	>= 18 °C		
					Throttle Position Hyst High AND	>= 5,0003052 Pct		
					Max Vehicle Speed to Meet Throttle Enable	<= 8 KPH		
					Once Hyst High has been met, the enable will remain while	>= 2,0004272 Pct		
					Throttle Position Disable for Throttle Position	>= 75 Pct		
					Disable if PTO active and value true	= 1 Boolean		
					Disable if in D1 and value true	= 1 Boolean		
					Disable if in D2 and value true	= 1 Boolean		
					Disable if in D3 and value true	= 1 Boolean		
					Disable if in D4 and value true	= 1 Boolean		
					Disable if in D5 and value true	= 1 Boolean		
					Disable if in MUMD and value true	= 1 Boolean		
					Disable if in TUTD and value true	= 1 Boolean		
					4 Wheel Drive Low Active	= FALSE Boolean		
					Disable if Air Purge active and value false	= 0 Boolean		
					RVT Diagnostic Active	= FALSE Boolean		
					Ignition Voltage	>= 8,5996094 V		
					Ignition Voltage	<= 31,999023 V		
					Vehicle Speed	<= 511 KPH		
					Engine Speed	>= 400 RPM		
					Engine Speed	<= 7500 RPM		
					Engine Speed is within the allowable limits for	>= 5 Sec		
					Engine Torque Signal Valid	= TRUE Boolean		
					Throttle Position Signal Valid	= TRUE Boolean		

21OBDG03C TCM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Malfunction	Enable Conditions	Time Required	Mil Illum.
					P0742 Status is ML not illuminated for DTC's:	Test Failed This Key On or Fault Active TCM: P0716, P0717, P0722, P0723, P0741, P2763, P2764 ECM: P0101, P0102, P0103, P0106, P0107, P0108, P0171, P0172, P0174, P0175, P0201, P0202, P0203, P0204, P0205, P0206, P0207, P0208, P0300, P0301, P0302, P0303, P0304, P0305, P0306, P0307, P0308, P0401, P042E		
Mode 2 Multiplex Valve	P0751	Shift Solenoid Valve A Stuck Off	Commaned Gear Slip Commanded Gear Gear Ratio Gear Ratio If the above parameters are true	>= 400 RPM = 1st Lock rpm <= 1.209594727 >= 1.094360352			>= 0.2 = 5 ≠ 0 >= 0.3 ≥ 8	Fail Tmr Fail Counts Neutral Timer (Sec) Fail Timer (Sec) Counts
					Ignition Voltage Lo Ignition Voltage Hi Engine Speed Lo Engine Speed Hi Engine Speed is within the allowable limits for Transmission Fluid Temperature Range Shift State TPS OR Output Speed Throttle Position Signal Valid from ECM Engine Torque Signal Valid from ECM, High side driver is enabled High-Side Driver is Enabled Input Speed Sensor fault Output Speed Sensor fault	>= 8.5996094 Volts <= 31.999023 Volts >= 400 RPM <= 7500 RPM >= 5 Sec >= -6.65625 °C = Range Shift ENUM Completed >= 0.5004883 % >= 67 RPM = TRUE Boolean = TRUE Boolean = TRUE Boolean = FALSE Boolean = FALSE Boolean		Two Trips

21OBDG03C TCM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Malfunction	Enable Conditions	Time Required	MIL Illum.
					Default Gear Option is not present MIL not Illuminated for DTC's:	= TRUE TCM: P0716, P0717, P0722, P0723, P182E ECM: P0101, P0102, P0103, P0106, P0107, P0108, P0171, P0172, P0174, P0175, P0201, P0202, P0203, P0204, P0205, P0206, P0207, P0208, P0300, P0301, P0302, P0303, P0304, P0305, P0306, P0307, P0308, P0401, P042E		
Mode 2 Multiplex Valve	P0752	Shift Solenoid Valve A Stuck On	Gear Box Slip Commanded Gear Commanded Gear has Achieved 1st Locked OR 1st Free-Wheel OR 2nd with Mode 2 Sol. Commanded On If the above parameters are true	>= 400 RPM = 3rd Gear = TRUE Boolean				One Trip
			Command 4th Gear once Output Shaft Speed If Gear Ratio And Gear Ratio	<= 400 RPM >= 3.825683594 <= 4.228393555			Please Refer to Table 16 in Supporting Documents Neutral Timer (Sec) Fail Timer (Sec) Counts	
					Ignition Voltage Lo Ignition Voltage Hi Engine Speed Lo Engine Speed Hi Engine Speed is within the allowable limits for High-Side Driver is Enabled Throttle Position Signal Valid from ECM Output Speed OR TPS Range Shift State Transmission Fluid Temperature Input Speed Sensor fault	>= 8.5996094 Volts <= 31.999023 Volts >= 400 RPM <= 7500 RPM >= 5 Sec = TRUE Boolean = TRUE Boolean >= 67 RPM >= 0.5004883 % Range Shift Completed >= -6.65625 °C = FALSE Boolean		

21OBDG03C TCM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Malfunction	Enable Conditions	Time Required	Mil Illum.
					Output Speed Sensor fault Default: Gear Option is not present	= FALSE Boolean = TRUE		
				Disable Conditions:	MIL not Illuminated for DTC's:	TCM: P0716, P0717, P0722, P0723, P182E ECM: P0101, P0102, P0103, P0106, P0107, P0108, P0171, P0172, P0174, P0175, P0201, P0202, P0203, P0204, P0205, P0206, P0207, P0208, P0300, P0301, P0302, P0303, P0304, P0305, P0306, P0307, P0308, P0401, P042E		
Mode 2 Multiplex Valve	P0756	Shift Solenoid Valve B Stuck Off	Fail Case 1 Commanded Gear = 1st Locked Gear Box Slip >= 400 RPM Intrusive Shift to 2nd Commanded Gear Previous = 1st Locked Gear Gear Ratio <= 2.482177734 Gear Ratio >= 2.245849609 If the above parameters are true				Please Refer to Table 5 in Supporting Documents Neutral Timer (Sec) >= 1 sec >= 3 counts	One Trip
					Ignition Voltage Lo Ignition Voltage Hi Engine Speed Lo Engine Speed Hi Engine Speed is within the allowable limits for Output Speed OR TPS Range Shift State Transmission Fluid Temperature High-Side Driver is Enabled Throttle Position Signal Valid from ECM Input Speed Sensor fault Output Speed Sensor fault Default: Gear Option is not present	>= 8.5996094 Volts <= 31.999023 Volts >= 400 RPM <= 7500 RPM >= 5 Sec >= 67 RPM OR >= 0.5004883 % Range Shift Completed ENUM = -6.65625 °C = TRUE Boolean = TRUE Boolean = FALSE Boolean = FALSE Boolean = TRUE		

210BDG03C TCM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Malfunction	Enable Conditions	Time Required	Mil Illum.
				Disable Conditions:	MIL not Illuminated for DTC's:	TCM: P0716, P0717, P0722, P0723, P182E ECM: P0101, P0102, P0103, P0106, P0107, P0108, P0171, P0172, P0174, P0175, P0201, P0202, P0203, P0204, P0205, P0206, P0207, P0208, P0300, P0301, P0302, P0303, P0304, P0305, P0306, P0307, P0308, P0401, P042E		
Variable Bleed Solenoid (VBS)	P0776	Pressure Control (PC) Solenoid B Stuck Off [C35R]	<u>Fail Case 1</u>	Case: Steady State 3rd Gear Commanded Gear = 3rd Gear Gearbox Slip >= 400 RPM Command 4th Gear once Output Shaft Speed <= 400 RPM If Gear Ratio >= 1.094360352 And Gear Ratio <= 1.209594727 If the above conditions are true, Increment 3rd gear fail counter and C35R Fail counter			Please Refer to Table 16 in Supporting Documents Neutral Timer (Sec) 3 Fail Timer (Sec) 3 3rd Gear Fail Counts or 14 3-5R Clutch Fail Counts	One Trip
			<u>Fail Case 2</u>	Case: Steady State 5th Gear Commanded Gear = 5th Gear Gearbox Slip >= 400 Rpm Intrusive Test: Command 6th Gear If attained Gear=6th gear Time >= Please refer to Table 3 in supporting documents Shift Time (Sec) If the above conditions are true, Increment 5th gear fail counter and C35R Fail counter			Please Refer to Table 5 in Supporting Documents Neutral Timer (Sec) 3 5th Gear Fail Counts or 14 3-5R Clutch Fail Counts	
					PRNDL State defaulted	= FALSE Boolean		
					inhibit RVT	= FALSE Boolean		
					IMS fault pending indication	= FALSE Boolean		

210BDG03C TCM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Malfunction	Enable Conditions	Time Required	MIL Illum.
					TPS validity flag Hydraulic System Pressurized Minimum output speed for RVT A OR B (A) Output speed enable (B) Accelerator Pedal enable Common Enable Criteria Ignition Voltage Lo Ignition Voltage Hi Engine Speed Lo Engine Speed Hi Engine Speed is within the allowable limits for Throttle Position Signal valid HSD Enabled Transmission Fluid Temperature Input Speed Sensor fault Output Speed Sensor fault Default Gear Option is not present	= TRUE Boolean = TRUE Boolean >= 67 RPM >= 67 RPM >= 0.5004883 Pct >= 8.5996094 Volts <= 31.999023 Volts >= 400 RPM <= 7500 RPM >= 5 Sec = TRUE Boolean = TRUE Boolean >= -6.65625 °C = FALSE Boolean = FALSE Boolean = TRUE		
				Disable Conditions:	MIL not Illuminated for DTC's:	TCM: P0716, P0717, P0722, P0723, P182E ECM: P0101, P0102, P0103, P0106, P0107, P0108, P0171, P0172, P0174, P0175, P0201, P0202, P0203, P0204, P0205, P0206, P0207, P0208, P0300, P0301, P0302, P0303, P0304, P0305, P0306, P0307, P0308, P0401, P042E		
Variable Bleed Solenoid (VBS)	P0777	Pressure Control (PC) Solenoid B Stuck On [C35R] (Steady State)	<u>Fail Case 1</u> Case: Steady State 1st Attained Gear slip If the Above is True for Time Intrusive test: (CBR1 clutch exhausted) Gear Ratio Gear Ratio If the above parameters are true	>= 400 RPM Table Based Time Please Refer to Table Enable Time >= 4 in (Sec) supporting documents <= 1.608642578 >= 1.455444336			>= 1.1 Fail Timer (Sec)	One Trip

210BDG03C TCM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Malfunction	Enable Conditions	Time Required	Mil Illum.
							<div> <div> <div>>=</div> <div>2</div> <div>Fail Count in 1st Gear or Total Fail Counts</div> </div> <div> <div>>=</div> <div>3</div> <div></div> </div> </div>	
			<div> <div>Fail Case 2</div> <div>Case: Steady State 2nd gear</div> </div>	<div> <div>Table Based value Please Refer to Table 22 in supporting documents</div> <div>Table Based value Please Refer to Table 23 in supporting documents</div> <div>Table Based Time Please Refer to Table 17 in supporting documents</div> </div>				
			<div> <div>Max Delta Output Speed Hysteresis</div> <div>>=</div> </div>	rpm/sec				
			<div> <div>Min Delta Output Speed Hysteresis</div> <div>>=</div> </div>	rpm/sec				
			<div> <div>If the Above is True for Time</div> <div>>=</div> </div>	Sec				
			<div> <div>Intrusive test: (CB26 clutch exhausted)</div> <div>Gear Ratio</div> <div><=</div> <div>1.608642578</div> </div>					
			<div> <div>Gear Ratio</div> <div>>=</div> <div>1.455444336</div> </div>					
			<div> <div>If the above parameters are true</div> </div>				<div> <div>>=</div> <div>1,1</div> <div>Fail Timer (Sec)</div> </div>	
							<div> <div>>=</div> <div>3</div> <div>Fail Count in 2nd Gear or Total Fail Counts</div> </div>	
			<div> <div>Fail Case 3</div> <div>Case: Steady State 4th gear</div> </div>	<div> <div>Table Based value Please Refer to Table 22 in supporting documents</div> <div>Table Based value Please Refer to Table 23 in supporting documents</div> </div>				
			<div> <div>Max Delta Output Speed Hysteresis</div> <div>>=</div> </div>	rpm/sec				
			<div> <div>Min Delta Output Speed Hysteresis</div> <div>>=</div> </div>	rpm/sec				

21OBDG03C TCM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Malfunction	Enable Conditions	Time Required	Mil Illum.
			<p>If the Above is True for Time</p> <p>Intrusive test: (C1234 clutch exhausted)</p> <p>Gear Ratio</p> <p>Gear Ratio</p> <p>If the above parameters are true</p>	<p>Table Based Time Please Refer to Table 17 in supporting documents</p> <p>Sec</p> <p><= 0.89465332</p> <p>>= 0.809448242</p>			<p>>= 1.1 Fail Timer (Sec)</p> <p>>= 3 Fail Count in 4th Gear or Total Fail Counts</p> <p>>= 3</p>	
			<p>Fail Case 4 Case: Steady State 6th gear</p> <p>Max Delta Output Speed Hysteresis</p> <p>Min Delta Output Speed Hysteresis</p> <p>If the Above is True for Time</p> <p>Intrusive test: (CB26 clutch exhausted)</p> <p>Gear Ratio</p> <p>Gear Ratio</p> <p>If the above parameters are true</p>	<p>Table Based value Please Refer to Table 22 in supporting documents</p> <p>Table Based value Please Refer to Table 23 in supporting documents</p> <p>Table Based Time Please Refer to Table 17 in supporting documents</p> <p>Sec</p> <p><= 0.89465332</p> <p>>= 0.809448242</p>			<p>>= 1.1 Fail Timer (Sec)</p> <p>>= 3 counts</p> <p>>= 1.1 Fail Timer (Sec)</p> <p>>= 3 Fail Count in 6th Gear or Total Fail Counts</p> <p>>= 3</p>	
					PRNDL State defaulted	= FALSE Boolean		
					inhibit RVT	= FALSE Boolean		
					IMS fault pending indication	= FALSE Boolean		

21OBDG03C TCM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Malfunction	Enable Conditions	Time Required	MIL Illum.
					output speed TPS validity flag HSD Enabled Hydraulic_System_Pressurized A OR B (A) Output speed enable (B) Accelerator Pedal enable Ignition Voltage Lo Ignition Voltage Hi Engine Speed Lo Engine Speed Hi Engine Speed is within the allowable limits for if Attained Gear=1st FW Accelerator Pedal enable if Attained Gear=1st FW Engine Torque Enable if Attained Gear=1st FW Engine Torque Enable Transmission Fluid Temperature Input Speed Sensor fault Output Speed Sensor fault	>= 0 RPM = TRUE Boolean = TRUE Boolean = TRUE Boolean => 67 Nm => 0.5004883 Nm => 8.5996094 Volts <= 31.999023 Volts => 400 RPM <= 7500 RPM => 5 Sec => 5.0003052 Pct => 5 Nm <= 8191.875 Nm => -6.65625 °C = FALSE Boolean = FALSE Boolean		
				Disable Conditions:	MIL not Illuminated for DTC's:	TCM: P0716, P0717, P0722, P0723, P182E ECM: P0101, P0102, P0103, P0106, P0107, P0108, P0171, P0172, P0174, P0175, P0201, P0202, P0203, P0204, P0205, P0206, P0207, P0208, P0300, P0301, P0302, P0303, P0304, P0305, P0306, P0307, P0308, P0401, P042E		
Variable Bleed Solenoid (VBS)	P0777	Pressure Control (PC) Solenoid B StuckOn [C35R] (Dynamic)	Primary Offgoing Clutch is exhausted (See Table 12 in Supporting Documents for Exhaust Delay Timers) Primary Oncoming Clutch Pressure Command Status Primary Offgoing Clutch Pressure Command Status Range Shift Status Attained Gear Slip	= TRUE Boolean = Maximum pressurized Clutch exhaust command Initial Clutch Control 40 RPM				One Trip

21OBDG03C TCM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Malfunction	Enable Conditions	Time Required	Mil Illum.
			<p>If the above conditions are true run appropriate Fail 1 Timers Below:</p> <p>fail timer 1 (3-1 shifting with Closed Throttle) >= 0.5 Fail Time (Sec)</p> <p>fail timer 1 (3-2 shifting with Throttle) >= 0.299804688 Fail Time (Sec)</p> <p>fail timer 1 (3-2 shifting with Closed Throttle) >= 0.5 Fail Time (Sec)</p> <p>fail timer 1 (3-4 shifting with Throttle) >= 0.299804688 Fail Time (Sec)</p> <p>fail timer 1 (3-4 shifting with Closed Throttle) >= 0.5 Fail Time (Sec)</p> <p>fail timer 1 (3-5 shifting with Throttle) >= 0.299804688 Fail Time (Sec)</p> <p>fail timer 1 (3-5 shifting with Closed Throttle) >= 0.5 Fail Time (Sec)</p> <p>fail timer 1 (5-3 shifting with Throttle) >= 0.299804688 Fail Time (Sec)</p> <p>fail timer 1 (5-3 shifting with Closed Throttle) >= 0.5 Fail Time (Sec)</p> <p>fail timer 1 (5-4 shifting with Throttle) >= 0.299804688 Fail Time (Sec)</p> <p>fail timer 1 (5-4 shifting with Closed Throttle) >= 0.5 Fail Time (Sec)</p> <p>fail timer 1 (5-6 shifting with Throttle) >= 0.299804688 Fail Time (Sec)</p> <p>fail timer 1 (5-6 shifting with Closed Throttle) >= 0.5 Fail Time (Sec)</p> <p>If Attained Gear Slip is Less than Above Cal Increment Fail Timers</p> <p>If fail timer is greater than threshold increment corresponding gear fail counter and total fail counter</p> <p>3rd gear fail counter</p>				<p>Total Fail Time = (Fail 1 + Fail 2) See Enable Timers for Fail Timer 1, and Reference Supporting Table 15 for Fail Timer 2</p> <p>>= 1 sec</p> <p>>= 3 3rd gear fail counts OR</p>	

21OBDG03C TCM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Malfunction	Enable Conditions	Time Required	MIL Illum.
			5th gear fail counter				>= 3	5th gear fail counts
			Total fail counter				>= 5	OR total fail counts
					TUT Enable temperature Input Speed Sensor fault Output Speed Sensor fault Command / Attained Gear High Side Driver ON output speed limit for TUT input speed limit for TUT PRNDL state defaulted IMS Fault Pending Service Fast Learn Mode HSD Enabled Default Gear Option is not present	>= -6.65625 °C = FALSE Boolean = FALSE Boolean ≠ 1st Boolean = TRUE Boolean >= 100 RPM >= 150 RPM = FALSE Boolean = FALSE Boolean = FALSE Boolean = TRUE Boolean = TRUE		
				Disable Conditions:	MIL not Illuminated for DTC's:	TCM: P0716, P0717, P0722, P0723, P182E ECM: P0101, P0102, P0103, P0106, P0107, P0108, P0171, P0172, P0174, P0175, P0201, P0202, P0203, P0204, P0205, P0206, P0207, P0208, P0300, P0301, P0302, P0303, P0304, P0305, P0306, P0307, P0308, P0401, P042E		
Variable Bleed Solenoid (VBS)	P0796	Pressure Control (PC) Solenoid C Stuck Off [C456] (Steady State)	Fail Case 1 Case: Steady State 4th Gear Gear slip Intrusive test: commanded 5th gear If attained Gear ≠ 5th for time if the above conditions have been met Increment 4th Gear Fail Counter and C456 Fail Counters	>= 400 RPM Please refer to Table 3 in Supporting Documents >= Shift Time (Sec)			Please See Table 5 For Neutral Time Cal >= Neutral Timer (Sec) >= 3 4th Gear Fail Count OR >= 14 C456 Fail Counts	One Trip
			Fail Case 2 Case: Steady State 5th Gear					

210BDG03C TCM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Malfunction	Enable Conditions	Time Required	Mil Illum.
			Gear slip Intrusive test: commanded 6th gear If attained Gear ≠ 6th for time if the above conditions have been met Increment 5th Gear Fail Counter and C456 Fail Counters	≥ 400 RPM Please Refer to Table 3 in Supporting Documents ≥ Shift Time (Sec)			Please See Table 5 For Neutral Time Cal ≥ Neutral Timer (Sec) ≥ 3 5th Gear Fail Count OR ≥ 14 C456 Fail Counts	
			<u>Fail Case 3</u> Case: Steady State 6th Gear Gear slip Intrusive test: commanded 5th gear If attained Gear ≠ 5th for time if the above conditions have been met Increment 6th Gear Fail Counter and C456 Fail Counter and C456 Fail Counter	≥ 400 RPM Please refer to Table 3 in Supporting Documents ≥ Shift Time (Sec)			Please See Table 5 For Neutral Time Cal ≥ Neutral Timer (Sec) ≥ 3 6th Gear Fail Count OR ≥ 14 C456 Fail Counts	
					PRNDL State defaulted inhibit RVT IMS fault pending indication TPS validity flag Hydraulic System Pressurized Minimum output speed for RVT A OR B (A) Output speed enable (B) Accelerator Pedal enable Common Enable Criteria Ignition Voltage Lo Ignition Voltage Hi Engine Speed Lo Engine Speed Hi Engine Speed is within the allowable limits for	= FALSE Boolean = FALSE Boolean = FALSE Boolean = TRUE Boolean = TRUE Boolean ≥ 67 RPM ≥ 67 RPM ≥ 0.5004883 Pct ≥ 8.5996094 Volts ≤ 31.999023 Volts ≥ 400 RPM ≤ 7500 RPM ≥ 5 Sec		

21OBDG03C TCM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Malfunction	Enable Conditions	Time Required	Mil Illum.
					Throttle Position Signal valid HSD Enabled Transmission Fluid Temperature Input Speed Sensor fault OutputSpeed Sensor fault Default Gear Option is not present	= TRUE Boolean = TRUE Boolean >= -6.65625 °C = FALSE Boolean = FALSE Boolean = TRUE		
				Disable Conditions:	MIL not Illuminated for DTC's:	TCM: P0716, P0717, P0722, P0723, P182E ECM: P0101, P0102, P0103, P0106, P0107, P0108, P0171, P0172, P0174, P0175, P0201, P0202, P0203, P0204, P0205, P0206, P0207, P0208, P0300, P0301, P0302, P0303, P0304, P0305, P0306, P0307, P0308, P0401, P042E		
Variable Bleed Solenoid (VBS)	P0797	Pressure Control (PC) Solenoid C Stuck On [C456] (Steady State)	<u>Fail Case 1</u> Case: Steady State 1st Attained Gear slip If the Above is True for Time Intrusive test (CBR1 clutch exhausted) Gear Ratio Gear Ratio If the above parameters are true	>= 400 RPM Table Based Time Please Refer to Table Enable Time >= 4 in (Sec) supporting documents <= 1.209594727 >= 1.094360352			>= 1.1 Fail Timer (Sec) >= 2 Fail Count in 1st Gear or >= 3 Total Fail Counts	One Trip
			<u>Fail Case 2</u> Case Steady State 2nd Max Delta Output Speed Hysteresis	Table Based value Please Refer to Table >= 22 in rpm/sec supporting documents				

210BDG03C TCM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Malfunction	Enable Conditions	Time Required	Mil Illum.
			Min Delta Output Speed Hysteresis	Table Based value Please Refer to Table 23 in supporting documents Table Based Time Please Refer to Table 17 in supporting documents				
			If the Above is True for Time					
			Intrusive test: (CB26 clutch exhausted) Gear Ratio	<= 1.209594727				
			Gear Ratio	>= 1.094360352				
			If the above parameters are true					
							>= 1.1 Fail Timer (Sec)	
							>= 3 Fail Count in 2nd Gear or	
							>= 3 Total fail counts	
			<u>Fail Case 3</u> Case Steady State 3rd					
			Max Delta Output Speed Hysteresis	Table Based value Please Refer to Table 22 in supporting documents Table Based value Please Refer to Table 23 in supporting documents Table Based Time Please Refer to Table 17 in supporting documents				
			Min Delta Output Speed Hysteresis					
			If the Above is True for Time					
			Intrusive test: (C35R clutch exhausted) Gear Ratio	<= 1.209594727				
			Gear Ratio	>= 1.094360352				
			If the above parameters are true					
							>= 1.1 Fail Timer (Sec)	
							>= 3 Fail Count in 3rd Gear	

210BDG03C TCM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Malfunction	Enable Conditions	Time Required	Mil Illum.
							OR 3	Total Fail Counts
							>=	
					PRNDL State defaulted inhibit RVT IMS fault pending indication output speed TPS validity flag HSD Enabled Hydraulic_System_Pressurized A OR B (A) Output speed enable (B) Accelerator Pedal enable Ignition Voltage Low Ignition Voltage High Engine Speed Low Engine Speed High Engine Speed is within the allowable limits for if Attained Gear=1st FW Accelerator Pedal enable if Attained Gear=1st FW Engine Torque Enable if Attained Gear=1st FW Engine Torque Enable Transmission Fluid Temperature Input Speed Sensor fault Output Speed Sensor fault Default Gear Option is not present	= FALSE Boolean = FALSE Boolean = FALSE Boolean >= 0 RPM = TRUE Boolean = TRUE Boolean = TRUE Boolean >= 67 Nm >= 0.5004883 Nm >= 8.5996094 Volts <= 31.999023 Volts >= 400 RPM <= 7500 RPM >= 5 Sec >= 5.0003052 Pct >= 5 Nm <= 8191.875 Nm >= -6.65625 °C = FALSE Boolean = FALSE Boolean = TRUE		
Variable Bleed Solenoid (VBS)	P0797	Pressure Control (PC) Solenoid C Stuck On [C456] (Dynamic)	Primary Offgoing Clutch is exhausted (See Table 11 in Supporting Documents for Exhaust Delay Timers) Primary Oncoming Clutch Pressure Command Status	= TRUE Boolean = Maximum pressurized				One Trip

210BDG03C TCM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Malfunction	Enable Conditions	Time Required	Mil Illum.
			Primary Offgoing Clutch Pressure Command Status = Clutch exhaust command					
			Range Shift Status ≠ Initial Clutch Control					
			Attained Gear Slip ≤ 40 RPM					
			If the above conditions are true increment appropriate Fail 1 Timers Below:					
			fail timer 1	>= 0.299804688	Fail Time (Sec)			
			(4-1 shifting with throttle)					
			fail timer 1	>= 0.5	Fail Time (Sec)			
			(4-1 shifting without throttle)					
			fail timer 1	>= 0.299804688	Fail Time (Sec)			
			(4-2 shifting with throttle)					
			fail timer 1	>= 0.5	Fail Time (Sec)			
			(4-2 shifting without throttle)					
			fail timer 1	>= 0.299804688	Fail Time (Sec)			
			(4-3 shifting with throttle)					
			fail timer 1	>= 0.5	Fail Time (Sec)			
			(4-3 shifting without throttle)					
			fail timer 1	>= 0.299804688	Fail Time (Sec)			
			(5-3 shifting with throttle)					
			fail timer 1	>= 0.5	Fail Time (Sec)			
			(5-3 shifting without throttle)					
			fail timer 1	>= 0.299804688	Fail Time (Sec)			
			(6-2 shifting with throttle)					
			fail timer 1	>= 0.5	Fail Time (Sec)			
			(6-2 shifting without throttle)					
			If Attained Gear Slip is Less than Above Cal Increment Fail Timers				Total Fail Time = (Fail 1 + Fail 2) See Enable Timers for Fail Timer 1, and Reference Supporting Table 15 for Fail Timer 2	
			If fail timer is greater than threshold increment corresponding gear fail counter and total fail counter					
			4th gear fail counter				>= 3	Fail Counter From 4th Gear OR
			5th gear fail counter				>= 3	Fail Counter From 5th Gear OR
			6th gear fail counter				>= 3	Fail Counter From 6th Gear

21OBDG03C TCM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Malfunction	Enable Conditions	Time Required	Mil Illum.
			Total fail counter				>= 5 OR Total Fail Counter	
					TUT Enable temperature Input Speed Sensor fault Output Speed Sensor fault Command / Attained Gear High Side Driver ON output speed limit for TUT input speed limit for TUT PRNDL state defaulted IMS Fault Pending Service Fast Learn Mode HSD Enabled Disable Conditions: MIL not Illuminated for DTC's	>= -6.65625 °C = FALSE Boolean = FALSE Boolean ≠ 1st Boolean = TRUE Boolean >= 100 RPM >= 150 RPM = FALSE Boolean = FALSE Boolean = FALSE Boolean = TRUE Boolean TCM: P0716, P0717, P0722, P0723, P182E ECM: P0101, P0102, P0103, P0106, P0107, P0108, P0171, P0172, P0174, P0175, P0201, P0202, P0203, P0204, P0205, P0206, P0207, P0208, P0300, P0301, P0302, P0303, P0304, P0305, P0306, P0307, P0308, P0401, P042E		
Tap Up Tap Down Switch (TUTD)	P0815	Upshift Switch Circuit	<u>Fail Case 1</u> Tap Up Switch Stuck in the Up Position in Range 1 Enabled Tap Up Switch Stuck in the Up Position in Range 2 Enabled Tap Up Switch Stuck in the Up Position in Range 3 Enabled Tap Up Switch Stuck in the Up Position in Range 4 Enabled Tap Up Switch Stuck in the Up Position in Range 5 Enabled Tap Up Switch Stuck in the Up Position in Range 6 Enabled Tap Up Switch Stuck in the Up Position in Neutral Enabled Tap Up Switch Stuck in the Up Position in Park Enabled Tap Up Switch Stuck in the Up Position in Reverse Enabled Tap Up Switch ON	= 0 Boolean = 0 Boolean = 0 Boolean = 0 Boolean = 0 Boolean = 0 Boolean = 0 Boolean = 1 Boolean = 1 Boolean = 0 Boolean = TRUE Boolean			>= 1 Fail Time (Sec)	Special No MIL
			<u>Fail Case 2</u> Tap Up Switch Stuck in the Up Position in Range 1 Enabled Tap Up Switch Stuck in the Up Position in Range 2 Enabled	= 1 Boolean = 1 Boolean				

21OBDG03C TCM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Malfunction	Enable Conditions	Time Required	MIL Illum.
			Tap Up Switch Stuck in the Up Position in Range 3 Enabled	= 1 Boolean				
			Tap Up Switch Stuck in the Up Position in Range 4 Enabled	= 1 Boolean				
			Tap Up Switch Stuck in the Up Position in Range 5 Enabled	= 1 Boolean				
			Tap Up Switch Stuck in the Up Position in Range 6 Enabled	= 1 Boolean				
			Tap Up Switch Stuck in the Up Position in Neutral Enabled	= 0 Boolean				
			Tap Up Switch Stuck in the Up Position in Park Enabled	= 0 Boolean				
			Tap Up Switch Stuck in the Up Position in Reverse Enabled	= 0 Boolean				
			Tap Up Switch ON	= TRUE Boolean				
			NOTE: Both Failcase1 and Failcase 2 Must Be Met				>= 600 Fail Time (Sec)	
					Time Since Last Range Change	>= 1 Enable Time (Sec)		
					Ignition Voltage Low	>= 8.5996094 Volts		
					Ignition Voltage High	<= 31.999023 Volts		
					Engine Speed Low	>= 400 RPM		
					Engine Speed High	<= 7500 RPM		
					Engine Speed is within the allowable limits for	>= 5 Sec		
					P0815 Status is	Test Failed This Key On or Fault Active		
					Disable Conditions:	MIL not Illuminated for DTC's:	TCM: P0816, P0826, P182E, P1876, P1877, P1915, P1761	
							ECM: None	
Tap Up Tap Down Switch (TUTD)	P0816	Downshift Switch Circuit	Fail Case 1 Tap Down Switch Stuck in the Down Position in Range 1 Enabled	= 0 Boolean				Special No MIL

210BDG03C TCM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Malfunction	Enable Conditions	Time Required	Mil Illum.		
			Tap Down Switch Stuck in the Down Position in Range 2 Enabled	= 0 Boolean						
			Tap Down Switch Stuck in the Down Position in Range 3 Enabled	= 0 Boolean						
			Tap Down Switch Stuck in the Down Position in Range 4 Enabled	= 0 Boolean						
			Tap Down Switch Stuck in the Down Position in Range 5 Enabled	= 0 Boolean						
			Tap Down Switch Stuck in the Down Position in Range 6 Enabled	= 0 Boolean						
			Tap Down Switch Stuck in the Down Position in Range Neutral Enabled	= 1 Boolean						
			Tap Down Switch Stuck in the Down Position in Range Park Enabled	= 1 Boolean						
			Tap Down Switch Stuck in the Down Position in Range Reverse Enabled	= 0 Boolean						
			Tap Down Switch ON	= TRUE Boolean					>= 1 sec	
			<u>Fail Case 2</u>							
			Tap Down Switch Stuck in the Down Position in Range 1 Enabled	= 1 Boolean						
			Tap Down Switch Stuck in the Down Position in Range 2 Enabled	= 1 Boolean						
			Tap Down Switch Stuck in the Down Position in Range 3 Enabled	= 1 Boolean						
			Tap Down Switch Stuck in the Down Position in Range 4 Enabled	= 1 Boolean						
			Tap Down Switch Stuck in the Down Position in Range 5 Enabled	= 1 Boolean						
			Tap Down Switch Stuck in the Down Position in Range 6 Enabled	= 1 Boolean						
			Tap Down Switch Stuck in the Down Position in Neutral Enabled	= 0 Boolean						
			Tap Down Switch Stuck in the Down Position in Park Enabled	= 0 Boolean						
			Tap Down Switch Stuck in the Down Position in Reverse Enabled	= 0 Boolean						
			Tap Down Switch ON	= TRUE Boolean						

21OBDG03C TCM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Malfunction	Enable Conditions	Time Required	Mil Illum.
			NOTE: Both Failcase1 and Failcase 2 Must Be Met				>= 600 sec	
					Time Since Last Range Change Ignition Voltage Lo Ignition Voltage Hi Engine Speed Lo Engine Speed Hi Engine Speed is within the allowable limits for P0816 Status is Disable Conditions:	>= 1 Enable Time (Sec) >= 8.5996094 Volts <= 31.999023 Volts >= 400 RPM <= 7500 RPM >= 5 Sec Test Failed This Key On or Fault Active MIL not Illuminated for DTC's: TCM: P0815, P0826, P182E, P1876, P1877, P1915, P1761 ECM: None		
Tap Up Tap Down Switch (TUTD)	P0826	Up and Down Shift Switch Circuit	TUTD Circuit Reads Invalid Voltage	= TRUE Boolean			>= 60 Fail Time (Sec)	Special No MIL
					Ignition Voltage Lo Ignition Voltage Hi Engine Speed Lo Engine Speed Hi Engine Speed is within the allowable limits for P0826 Status is Disable Conditions:	>= 8.5996094 Volts <= 31.999023 Volts >= 400 RPM <= 7500 RPM >= 5 Sec Test Failed This Key On or Fault Active MIL not Illuminated for DTC's: TCM: P1761 ECM: None		

21OBDG03C TCM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Malfunction	Enable Conditions	Time Required	Mil Illum.
Variable Bleed Solenoid (VBS)	P0961	Pressure Control (PC) Solenoid A Control Circuit Rationality Test (Line Pressure VBS)	The HWIO reports an invalid voltage (out of range) error flag	= TRUE Boolean			>= 4.4 Fail Time (Sec) out of 5 Sample Time (Sec)	Two Trips
					Ignition Voltage >= 8.5996094 Volts Ignition Voltage <= 31.999023 Volts Engine Speed >= 400 RPM Engine Speed <= 7500 RPM Engine Speed is within the allowable limits for >= 5 Sec Disable Conditions: MIL not Illuminated for DTC's: TCM: None ECM: None			
Variable Bleed Solenoid (VBS)	P0962	Pressure Control (PC) Solenoid A Control Circuit Low Voltage (Line Pressure VBS)	The HWIO reports a low voltage (ground short) error flag	= TRUE Boolean			>= 1.5 Fail Time (Sec) out of 1.875 Sample Time (Sec)	One Trip
					Ignition Voltage >= 8.5996094 Volts Ignition Voltage <= 31.999023 Volts Engine Speed >= 400 RPM Engine Speed <= 7500 RPM Engine Speed is within the allowable limits for >= 5 Sec Disable Conditions: MIL not Illuminated for DTC's: TCM: None ECM: None			
Variable Bleed Solenoid (VBS)	P0963	Pressure Control (PC) Solenoid A Control Circuit High Voltage (Line Pressure VBS)	The HWIO reports a high voltage (open or power short) error flag	= TRUE Boolean			>= 4.4 Fail Time (Sec) out of 5 Sample Time (Sec)	Two Trips
					Ignition Voltage >= 8.5996094 Volts Ignition Voltage <= 31.999023 Volts Engine Speed >= 400 RPM Engine Speed <= 7500 RPM Engine Speed is within the allowable limits for >= 5 Sec			

21OBDG03C TCM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Malfunction	Enable Conditions	Time Required	Mil Illum.
				Disable Conditions:	MIL not Illuminated for DTC's:	TCM: None ECM: None		
Variable Bleed Solenoid (VBS)	P0966	Pressure Control (PC) Solenoid B Control Circuit Low Voltage (C35R VBS)	The HWIO reports a low voltage (ground short) error flag	= TRUE Boolean			>= 0.3 Fail Time (Sec) out of 0.375 Sample Time (Sec)	One Trip
					Ignition Voltage >= 8.5996094 Volts Ignition Voltage <= 31.999023 Volts Engine Speed >= 400 RPM Engine Speed <= 7500 RPM Engine Speed is within the allowable limits for >= 5 Sec P0966 Status is not = Test Failed This Key On or Fault Active	TCM: None ECM: None		
Variable Bleed Solenoid (VBS)	P0967	Pressure Control (PC) Solenoid B Control Circuit High Voltage (C35R VBS)	The HWIO reports a high voltage (open or power short) error flag	= TRUE Boolean			>= 0.3 Fail Time (Sec) out of 0.375 Sample Time (Sec)	One Trip
					Ignition Voltage >= 8.5996094 Volts Ignition Voltage <= 31.999023 Volts Engine Speed >= 400 RPM Engine Speed <= 7500 RPM Engine Speed is within the allowable limits for >= 5 Sec P0967 Status is not = Test Failed This Key On or Fault Active	TCM: None ECM: None		
Variable Bleed Solenoid (VBS)	P0970	Pressure Control (PC) Solenoid C Control Circuit Low Voltage (C456/CBR1 VBS)	The HWIO reports a low voltage (ground short) error flag	= TRUE Boolean			>= 0.3 Fail Time (Sec)	One Trip

210BDG03C TCM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Malfunction	Enable Conditions	Time Required	Mil Illum.
							out of 0.375 Sample Time (Sec)	
					P0970 Status is not	Test Failed This Key On or Fault Active		
					Ignition Voltage	>= 8.5996094 Volts		
					Ignition Voltage	<= 31.999023 Volts		
					Engine Speed	>= 400 RPM		
					Engine Speed	<= 7500 RPM		
					Engine Speed is within the allowable limits for	>= 5 Sec		
				Disable Conditions:	MIL not Illuminated for DTC's:	TCM: None ECM: None		
Variable Bleed Solenoid (VBS)	P0971	Pressure Control (PC) Solenoid C Control Circuit High Voltage (C456/CBR1 VBS)	The HWIO reports a high voltage (open or power short) error flag	= TRUE Boolean			>= 0.3 Fail Time (Sec)	One Trip
							out of 0.375 Sample Time (Sec)	
					P0971 Status is not	Test Failed This Key On or Fault Active		
					Ignition Voltage	>= 8.5996094 Volts		
					Ignition Voltage	<= 31.999023 Volts		
					Engine Speed	>= 400 RPM		
					Engine Speed	<= 7500 RPM		
					Engine Speed is within the allowable limits for	>= 5 Sec		
				Disable Conditions:	MIL not Illuminated for DTC's:	TCM: None ECM: None		
Shift Solenoid	P0973	Shift Solenoid A Control Circuit Low (Mode 2 Solenoid)	The HWIO reports a low voltage (ground short) error flag	= TRUE Boolean			>= 1.2 Fail Time (Sec)	One Trip
							out of 1.5 Sample Time (Sec)	

21OBDG03C TCM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Malfunction	Enable Conditions	Time Required	Mil Illum.
					P0973 Status is not Ignition Voltage Ignition Voltage Engine Speed Engine Speed Engine Speed is within the allowable limits for Disable Conditions:	Test Failed This Key On or Fault Active = >= 8.5996094 Volts <= 31.999023 Volts >= 400 RPM <= 7500 RPM >= 5 Sec MIL not Illuminated for DTC's: TCM: None ECM: None		
Shift Solenoid	P0974	Shift Solenoid A Control Circuit High (Mode 2 Solenoid)	The HWIO reports a high voltage (open or power short) error flag	= TRUE Boolean			>= 1.2 Fail Time (Sec) out of 1.5 Sample Time (Sec)	Two Trips
					P0974 Status is not Ignition Voltage Ignition Voltage Engine Speed Engine Speed Engine Speed is within the allowable limits for Disable Conditions:	Test Failed This Key On or Fault Active = >= 8.5996094 Volts <= 31.999023 Volts >= 400 RPM <= 7500 RPM >= 5 Sec MIL not Illuminated for DTC's: TCM: None ECM: None		
Mode 3 Multiplex Valve	P0977	Shift Solenoid B Control Circuit High (Mode 3 Solenoid)	The HWIO reports a high voltage (open or power short) error flag	= TRUE Boolean			>= 1.2 Sec out of 1.5 Sec	One Trip

21OBDG03C TCM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Malfunction	Enable Conditions	Time Required	MIL Illum.
					P0977 Status is not	Test Failed This Key On or Fault Active		
					Ignition Voltage	>= 8.5996094 Volts		
					Ignition Voltage	<= 31.999023 Volts		
					Engine Speed	>= 400 RPM		
					Engine Speed	<= 7500 RPM		
					Engine Speed is within the allowable limits for	>= 5 Sec		
				Disable Conditions:	MIL not Illuminated for DTC's:	TCM: None ECM: None		
Tap Up Tap Down Switch (TUTD)	P1761	Tap Up and Down switch signal circuit (rolling count)	Rolling count value received from BCM does not match expected value	= TRUE Boolean			>= 3 Fail Counter > 10 Sample Timer (Sec)	Special No MIL
					Tap Up Tap Down Message Health	= TRUE Boolean		
					Engine Speed Low	>= 400 RPM		
					Engine Speed High	<= 7500 RPM		
					Engine Speed is within the allowable limits for	>= 5 Sec		
				Disable Conditions:	MIL not Illuminated for DTC's:	TCM: None ECM: None		
Internal Mode Switch (IMS)	P182E	Internal Mode Switch - Invalid Range	Fail Case 1 Current range	= Transition 1 (bit state Range 1110)				One Trip
			Previous range	≠ CeTRGR_e_P RNDL_Drive6 Range				
			Previous range	≠ CeTRGR_e_P RNDL_Drive5 Range				
			Range Shift State	= Range Shift Completed ENUM				
			Absolute Attained Gear Slip	<= 50 rpm				
			Attained Gear	<= Sixth				
			Attained Gear	>= First				
			Throttle Position Available	= TRUE				
			Throttle Position	>= 8.000183105 pct				
			Output Speed	>= 200 rpm				
			Engine Torque	>= 50 Nm				

21OBDG03C TCM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Malfunction	Enable Conditions	Time Required	Mil Illum.
			Engine Torque	<= 8191.75 Nm				
			If the above conditions are met then Increment Fail Timer				>= 1 Fail Seconds	
			If Fail Timer has Expired then Increment Fail Counter				>= 5 Fail Counts	
			<u>Fail Case 2</u> Output Speed	<= 70 rpm				
			The following PRNDL sequence events occur in this exact order:					
			PRNDL state = Drive 6 (bit state 0110)	= Range				
			PRNDL state = Drive 6 for	>= 1 Sec				
			PRNDL state =	Transition 8 (bit state 0111) Range				
			PRNDL state = Drive 6 (bit state 0110)	= Range				
			PRNDL state =	Transition 1 (bit state 1110) Range				
			Above sequencing occurs in Neutral Idle Mode	<= 1 Sec				
			If all conditions above are met Increment delay Timer	= Inactive				
			If the below two conditions are met Increment Fail Timer					
			delay timer	>= 1 Sec				
			Input Speed	>= 400 Sec				
			If Fail Timer has Expired then Increment Fail Counter				>= 3 Fail Seconds	
							>= 2 Fail Counts	
			<u>Fail Case 3</u> Current range	= Transition 13 (bit state 0010) Range	Previous range	≠ CeTRGR_ e_PRNDL_ Drive5		
			Engine Torque	>= -8192 Nm	Previous range	≠ CeTRGR_ e_PRNDL_ Drive5		
			Engine Torque	<= 8191.75 Nm	IMS is 7 position configuration	= 0 Boolean		
			If the above conditions are met then, Increment Fail Timer		If the "IMS 7 Position config" = 1 then the "previous range" criteria above must also be satisfied when the "current		>= 0.225 Seconds	
			If Fail Timer has Expired then Increment Fail Counter				>= 15 Fail Counts	

21OBDG03C TCM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Malfunction	Enable Conditions	Time Required	Mil Illum.
			<u>Fail Case 4</u>	<p>Current range = Transition 8 (bit state 0111) Range</p> <p>Inhibit bit (see definition) = FALSE</p> <p>Steady State Engine Torque >= 100 Nm</p> <p>Steady State Engine Torque <= 8191.75 Nm</p> <p>If the above conditions are met then Increment Fail Timer</p> <p>If the above Conditions have been met, Increment Fail Counter</p>	<p>Disable Fail Case 4 if last positive range was Drive 6 and current range is transition 8</p> <p>Set inhibit bit true if PRNDL = 1100 (rev) or 0100 (Rev-Neutral transition 11)</p> <p>Set inhibit bit false if PRNDL = 1001 (park)</p>		<p>>= 0.225 Seconds</p> <p>>= 15 Fail Counts</p>	
			<u>Fail Case 5</u>	<p>Throttle Position Available = TRUE Boolean</p> <p>The following PRNDL sequence events occur in this exact order:</p> <p>PRNDL State = Reverse (bit state 1100) Range</p> <p>PRNDL State = Transition 11 (bit state 0100) Range</p> <p>PRNDL State = Neutral (bit state 0101) Range</p> <p>PRNDL State = Transition 11 (bit state 0100) Range</p> <p>Above sequencing occurs in <= 1 Sec</p> <p>Then delay timer increments</p> <p>Delay timer >= 5 sec</p> <p>Range Shift State = Range Shift Complete</p> <p>Absolute Attained Gear Slip <= 50 rpm</p> <p>Attained Gear <= Sixth</p> <p>Attained Gear >= First</p> <p>Throttle Position >= 8.000183105 pct</p> <p>Output Speed >= 200 rpm</p> <p>If the above conditions are met Increment Fail Timer</p>			>= 20 Seconds	
			<u>Fail Case 6</u>	<p>Current range = Illegal (bit state 0000 or 1000 or 0001)</p> <p>and</p> <p>A Open Circuit (See Definition) = FALSE Boolean</p>	<p>A Open Circuit Definition (flag set false if the following conditions are met):</p> <p>Current Range ≠ Transition 11 (bit state 0100)</p> <p>or</p> <p>Last positive state ≠ Neutral (bit state 0101)</p>			

21OBDG03C TCM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Malfunction	Enable Conditions	Time Required	Mil Illum.	
			If the above Conditions are met then, Increment Fail timer		Previous transition state Fail case 5 delay timer	Transition 8 (bit state 0111) 0 sec	>= 6.25 Seconds		
			Fail Case 7	Current PRNDL State = PRNDL circuit ABCP = 1101 Range and Previous PRNDL state = PRNDL circuit ABCP =1111 Range Input Speed >= 150 RPM Reverse Trans Ratio <= 2.975952148 ratio Reverse Trans Ratio >= 3.423950195 ratio If the above Conditions are met then, Increment Fail timer					>= 6.25 Seconds
			P182E will report test fail when any of the above 7 fail cases are met		Ignition Voltage Lo >= 8.5996094 Volts Ignition Voltage Hi <= 31.999023 Volts Engine Speed Lo >= 400 RPM Engine Speed Hi <= 7500 RPM Engine Speed is within the allowable limits for >= 5 Sec Engine Torque Signal Valid = TRUE Boolean				
			Disable Conditions: MIL not Illuminated for TCM: P0716, P0717, P0722, P0723, DTC's: P07C0, P07BF, P077C, P077D ECM: P0101, P0102, P0103, P0106, P0107, P0108, P0171, P0172, P0174, P0175, P0201, P0202, P0203, P0204, P0205, P0206, P0207, P0208, P0300, P0301, P0302, P0303, P0304, P0305, P0306, P0307, P0308, P0401, P042E						
Internal Mode Switch (IMS)	P1915	Internal Mode Switch Does Not Indicate Park/Neutral (P/N) During Start	PRNDL State is ≠ Park or Neutral Enumeration The following events must occur Sequentially Initial Engine speed <= 50 RPM				>= 0.25 Enable Time (Sec)	One Trip	
			Then						

21OBDG03C TCM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Malfunction	Enable Conditions	Time Required	Mil Illum.
			Engine Speed Between Following Cals					
			Engine Speed Lo Hist	>= 50 RPM			>= 0.06875 Enable Time (Sec)	
			Engine Speed Hi Hist	<= 480 RPM				
			Then Final Engine Speed	>= 525 RPM				
			Final Transmission Input Speed	>= 100 RPM			>= 1.25 Fail Time (Sec)	
					DTC has Ran this Key Cycle?	= FALSE Boolean		
					Ignition Voltage Lo	>= 6 V		
					Ignition Voltage Hi	<= 31.999023 V		
					Ignition Voltage Hyst High (enables above this value)	>= 5 V		
					Ignition Voltage Hyst Low (disabled below this value)	<= 2 V		
					Transmission Output Speed	<= 90 rpm		
					P1915 Status Is	≠ Test Failed This Key On or Fault Active		
				Disable Conditions:	MIL not Illuminated for DTC's:	TCM: P0722, P0723 ECM: None		
Transmission Control Module (TCM)	P2534	Ignition Switch Run/Start Position Circuit Low	TCM Run crank active (based on voltage thresholds below)	= FALSE Boolean				One Trip
			Ignition Voltage High Hyst (run crank goes true when above this value)	5 Volts			>= 280 Fail Counts (25ms loop)	
			Ignition Voltage Low Hyst (run crank goes false when below this value)	2 Volts			Out of 280 Sample Counts (25ms loop)	
					ECM run/crank active status available	= TRUE Boolean		
					ECM run/crank active status	= TRUE Boolean		
				Disable Conditions:	MIL not Illuminated for DTC's:	TCM: None ECM: None		
Transmission Control Module (TCM)	P2535	Ignition Switch Run/Start Position Circuit High	TCM Run crank active (based on voltage thresholds below)	= TRUE Boolean				One Trip

21OBDG03C TCM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Malfunction	Enable Conditions	Time Required	Mil Illum.
			Ignition Voltage High Hyst (run crank goes true when above this value)	5 Volts			>= 280 Fail Counts (25ms loop)	
			Ignition Voltage Low Hyst (run crank goes false when below this value)	2 Volts			Out of 280 Sample Counts (25ms loop)	
					ECM run/crank active status available ECM run/crank active status	= TRUE Boolean = FALSE Boolean		
				Disable Conditions:	MIL not Illuminated for DTC's	TCM: None ECM: None		
Variable Bleed Solenoid (VBS)	P2714	Pressure Control (PC) Solenoid D Stuck Off [CB26]	Fail Case 1 Case: Steady State 2nd Gear					One Trip
			Gear slip	>= 400 RPM				
			Intrusive test: commanded 3rd gear					
			If attained Gear = 3rd for Time	>= Table Based Time Please see Table 2 in Supporting Documents Enable Time (Sec)				
			If Above Conditions have been met					
			Increment 2nd gear fail count				>= 3 2nd Gear Fail Count or	
			and CB26 Fail Count				>= 14 CB26 Fail Count	
			Fail Case 2 Case: Steady State 6th Gear					
			Gear slip	>= 400 RPM				
			Intrusive test: commanded 5th gear					
			If attained Gear = 5th For Time	>= Table Based Time Please see Table 2 in Supporting Documents Enable Time (Sec)				
			If Above Conditions have been met, Increment 5th gear fail counter				>= 3 5th Gear Fail Count or	
			and CB26 Fail Count				>= 14 CB26 Fail Count	
					PRNDL State defaulted	= FALSE Boolean		

21OBDG03C TCM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Malfunction	Enable Conditions	Time Required	MIL Illum.
					inhibit RVT IMS fault pending indication TPS validity flag Hydraulic System Pressurized Minimum output speed for RVT A OR B (A) Output speed enable (B) Accelerator Pedal enable Common Enable Criteria Ignition Voltage Lo Ignition Voltage Hi Engine Speed Lo Engine Speed Hi Engine Speed is within the allowable limits for Throttle Position Signal valid HSD Enabled Transmission Fluid Temperature Input Speed Sensor fault Output Speed Sensor fault Default Gear Option is not present	= FALSE Boolean = FALSE Boolean = TRUE Boolean = TRUE Boolean >= 0 RPM >= 67 RPM >= 0.5004883 Pct >= 8.5996094 Volts <= 31.999023 Volts >= 400 RPM <= 7500 RPM >= 5 Sec = TRUE Boolean = TRUE Boolean >= -6.65625 °C = FALSE Boolean = FALSE Boolean = TRUE		
				Disable Conditions:	MIL not Illuminated for DTC's:	TCM: P0716, P0717, P0722, P0723, P182E ECM: P0101, P0102, P0103, P0106, P0107, P0108, P0171, P0172, P0174, P0175, P0201, P0202, P0203, P0204, P0205, P0206, P0207, P0208, P0300, P0301, P0302, P0303, P0304, P0305, P0306, P0307, P0308, P0401, P042E		
Variable Bleed Solenoid (VBS)	P2715	Pressure Control (PC) Solenoid D Stuck On [CB26] (Dynamic)	Primary Offgoing Clutch is exhausted (See Table 13 in Supporting Documents for Exhaust Delay Timers) Primary Oncoming Clutch Pressure Command Status Primary Offgoing Clutch Pressure Command Status Range Shift Status Attained Gear Slip	= TRUE Boolean = Maximum pressurized Clutch exhaust command Initial Clutch Control <= 40 RPM				One Trip

210BDG03C TCM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Malfunction	Enable Conditions	Time Required	Mil Illum.
			If above coditons are true, increment appropriate Fail 1 Timers Below: fail timer 1 (2-1 shifting with throttle) fail timer 1 (2-1 shifting without throttle) fail timer 1 (2-3 shifting with throttle) fail timer 1 (2-3 shifing without throttle) fail timer 1 (2-4 shifting with throttle) fail timer 1 (2-4 shifing without throttle) fail timer 1 (6-4 shifting with throttle) fail timer 1 (6-4 shifting without throttle) fail timer 1 (6-5 shifting with throttle) fail timer 1 (6-5 shifing without throttle)	>= 0.299804688 Fail Time (Sec) >= 0.5 Fail Time (Sec) >= 0.299804688 Fail Time (Sec) >= 0.5 Fail Time (Sec) >= 0.299804688 Fail Time (Sec) >= 0.5 Fail Time (Sec) >= 0.299804688 Fail Time (Sec) >= 0.5 Fail Time (Sec) >= 0.299804688 Fail Time (Sec) >= 0.5 Fail Time (Sec) >= 0.299804688 Fail Time (Sec) >= 0.5 Fail Time (Sec)				
			If Attained Gear Slip is Less than Above Cal Increment Fail Timers				>= Total Fail Time = (Fail 1 + Fail 2) See Enable Timers for Fail Timer 1, and Reference Supporting Table 15 for Fail Timer 2 sec	
			If fail timer is greater than threshold increment corresponding gear fail counter and total fail counter					
			2nd gear fail counter				>= 3 Fail Counter From 2nd Gear	
			6th gear fail counter				>= 3 OR Fail Counter From 6th Gear	
			total fail counter				>= 5 OR Total Fail Counter	
					TUT Enable temperature	>= -6.65625 °C		
					Input Speed Sensor fault	= FALSE Boolean		
					Output Speed Sensor fault	= FALSE Boolean		
					Command / Attained Gear	≠ 1st Boolean		
					High Side Driver ON	= TRUE Boolean		

21OBDG03C TCM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Malfunction	Enable Conditions	Time Required	MIL Illum.
					output speed limit for TUT input speed limit for TUT PRNDL state defaulted IMS Fault Pending Service Fast Learn Mode HSD Enabled	>= 100 RPM >= 150 RPM = FALSE Boolean = FALSE Boolean = FALSE Boolean = TRUE Boolean		
				Disable Conditions:	MIL not Illuminated for DTC's:	TCM: P0716, P0717, P0722, P0723, P182E ECM: P0101, P0102, P0103, P0106, P0107, P0108, P0171, P0172, P0174, P0175, P0201, P0202, P0203, P0204, P0205, P0206, P0207, P0208, P0300, P0301, P0302, P0303, P0304, P0305, P0306, P0307, P0308, P0401, P042E		
Variable Bleed Solenoid (VBS)	P2715	Pressure Control (PC) Solenoid D Stuck On [CB26] (Steady State)	<u>Fail Case 1</u> Case: Steady State 1st Attained Gear slip If the Above is True for Time Intrusive test (CBR1 clutch exhausted) Gear Ratio Gear Ratio If the above parameters are true	>= 400 RPM Table Based Time Please Refer to Table Enable Time >= 4 in (Sec) supporting documents <= 2.482177734 >= 2.245849609			>= 1.1 Fail Timer (Sec) >= 5 Fail Count in 1st Gear or >= 5 Total Fail Counts	One Trip
			<u>Fail Case 2</u> Case: Steady State 3rd Gear Max Delta Output Speed Hysteresis Min Delta Output Speed Hysteresis	Table Based value Please Refer to Table >= 22 in rpm/sec supporting documents Table Based value Please Refer to Table >= 23 in rpm/sec supporting documents				

21OBDG03C TCM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Malfunction	Enable Conditions	Time Required	Mil Illum.
			<p>If the Above is True for Time</p> <p>Intrusive test: (C35R clutch exhausted) Gear Ratio Gear Ratio If the above parameters are true</p>	<p>Table Based Time Please Refer to Table 17 in supporting documents</p> <p>Sec</p> <p><= 2.482177734 >= 2.245849609</p>			<p>>= 1.1 Fail Timer (Sec)</p> <p>>= 3 Fail Count in 3rd Gear or Total Fail Counts</p> <p>>= 5</p>	
			<p>Fail Case 3 Case: Steady State 4rd Gear</p> <p>Max Delta Output Speed Hysteresis</p> <p>Min Delta Output Speed Hysteresis</p> <p>If the Above is True for Time</p> <p>Intrusive test: (C1234 clutch exhausted) Gear Ratio Gear Ratio If the above parameters are true</p>	<p>Table Based value Please Refer to Table 22 in supporting documents</p> <p>Table Based value Please Refer to Table 23 in supporting documents</p> <p>Table Based Time Please Refer to Table 17 in supporting documents</p> <p>Sec</p> <p><= 0.700317383 >= 0.633666992</p>			<p>>= 1.1 Fail Timer (Sec)</p> <p>>= 3 Fail Count in 4th Gear or Total Fail Counts</p> <p>>= 5</p>	
			<p>Fail Case 4 Case: Steady State 5th Gear</p>					

210BDG03C TCM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Malfunction	Enable Conditions	Time Required	Mil Illum.
			Max Delta Output Speed Hysteresis	>= 22 in rpm/sec Table Based value Please Refer to Table 22 in supporting documents				
			Min Delta Output Speed Hysteresis	>= 23 in rpm/sec Table Based value Please Refer to Table 23 in supporting documents				
			If the Above is True for Time	>= 17 in Sec Table Based Time Please Refer to Table 17 in supporting documents				
			Intrusive test (C35R clutch exhausted) Gear Ratio <= 0.700317383 Gear Ratio >= 0.633666992 If the above parameters are true					
							>= 1.1 Fail Timer (Sec) >= 3 Fail Count in 5th Gear or >= 5 Total Fail Counts	
					PRNDL State defaulted inhibit RVT IMS fault pending indication output speed TPS validity flag HSD Enabled Hydraulic_System_Pressurized A OR B (A) Output speed enable (B) Accelerator Pedal enable Ignition Voltage Lo Ignition Voltage Hi Engine Speed Lo Engine Speed Hi Engine Speed is within the allowable limits for if Attained Gear=1st FW Accelerator Pedal enable If Attained Gear=1st FW Engine Torque Enable	= FALSE Boolean = FALSE Boolean = FALSE Boolean >= 0 RPM = TRUE Boolean = TRUE Boolean = TRUE Boolean => 67 Nm => 0.5004883 Nm => 8.5996094 Volts =< 31.999023 Volts => 400 RPM =< 7500 RPM => 5 Sec => 5.0003052 Pct => 5 Nm		

21OBDG03C TCM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Malfunction	Enable Conditions	Time Required	MIL Illum.
					If Attained Gear=1st FW Engine Torque Enable Transmission Fluid Temperature Input Speed Sensor fault Output Speed Sensor fault Default Gear Option is not present	<= 8191.875 Nm >= -6.65625 °C = FALSE Boolean = FALSE Boolean = TRUE		
				Disable Conditions:	MIL not Illuminated for DTC's:	TCM: P0716, P0717, P0722, P0723, P182E ECM: P0101, P0102, P0103, P0106, P0107, P0108, P0171, P0172, P0174, P0175, P0201, P0202, P0203, P0204, P0205, P0206, P0207, P0208, P0300, P0301, P0302, P0303, P0304, P0305, P0306, P0307, P0308, P0401, P042E		
Variable Bleed Solenoid (VBS)	P2720	Pressure Control (PC) Solenoid D Control Circuit Low (CB26 VBS)	The HWIO reports a low voltage (ground short) error flag	= TRUE Boolean			>= 0.3 Fail Time (Sec) out of 0.375 Sample Time (Sec)	One Trip
					P2770 Status is not Ignition Voltage Ignition Voltage Engine Speed Engine Speed Engine Speed is within the allowable limits for	Test Failed This Key On or Fault Active >= 8.5996094 Volts <= 31.999023 Volts >= 400 RPM <= 7500 RPM >= 5 Sec		
Variable Bleed Solenoid (VBS)	P2721	Pressure Control (PC) Solenoid D Control Circuit High (CB26 VBS)	The HWIO reports a high voltage (open or power short) error flag	= TRUE Boolean			>= 0.3 Fail Time (Sec) out of 0.375 Sample Time (Sec)	One Trip

21OBDG03C TCM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Malfunction	Enable Conditions	Time Required	Mil Illum.
					P2721 Status is not Ignition Voltage Ignition Voltage Engine Speed Engine Speed Engine Speed is within the allowable limits for Disable Conditions: MIL not Illuminated for DTC's:	= Test Failed This Key On or Fault Active >= 8.5996094 Volts ≤ 31.999023 Volts >= 400 RPM ≤ 7500 RPM >= 5 Sec TCM: None ECM: None		
Variable Bleed Solenoid (VBS)	P2723	Pressure Control (PC) Solenoid E Stuck Off	<u>Fail Case 1</u> Case: Steady State 1st Gear Gear slip Intrusive test: commanded 2nd gear If attained Gear ≠ 2nd for Time If Above Conditions have been met, Increment 1st gear fail counter and C1234 fail counter	 >= 400 RPM Please refer to Table 3 in Supporting Documents Shift Time (Sec) >= <				

21OBDG03C TCM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Malfunction	Enable Conditions	Time Required	Mil Illum.
			<u>Fail Case 3</u> Case: Steady State 3rd Gear	Gear slip >= 400 RPM Intrusive test: commanded 4th gear Please refer to Table 3 in Supporting Documents If attained Gear ≠ 4th for time >= Shift Time (Sec) If Above Conditions have been met, Increment 3rd gear fail counter and C1234 fail counter			Please See Table 5 For Neutral Time Cal >= Neutral Timer (Sec)	
			<u>Fail Case 4</u> Case: Steady State 4th Gear				>= 3 3rd Gear Fail Count or >= 14 C1234 Clutch Fail Count	
							Please See Table 5 For Neutral Time Cal >= Neutral Timer (Sec)	
							>= 3 4th Gear Fail Count or >= 14 C1234 Clutch Fail Count	
					PRNDL State defaulted inhibit RVT IMS fault pending indication TPS validity flag Hydraulic System Pressurized Minimum output speed for RVT A OR B (A) Output speed enable (B) Accelerator Pedal enable Common Enable Criteria Ignition Voltage Lo Ignition Voltage Hi Engine Speed Lo Engine Speed Hi Engine Speed is within the allowable limits for Throttle Position Signal valid	= FALSE Boolean = FALSE Boolean = FALSE Boolean = TRUE Boolean = TRUE Boolean >= 0 RPM >= 67 RPM >= 0.5004883 Pct >= 8.5996094 Volts <= 31.999023 Volts >= 400 RPM <= 7500 RPM >= 5 Sec = TRUE Boolean		

21OBDG03C TCM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Malfunction	Enable Conditions	Time Required	MIL Illum.
					HSD Enabled Transmission Fluid Temperature Input Speed Sensor fault Output Speed Sensor fault Default Gear Option is not present	= TRUE Boolean >= -6.65625 °C = FALSE Boolean = FALSE Boolean = TRUE		
				Disable Conditions:	MIL not Illuminated for DTC's:	TCM: P0716, P0717, P0722, P0723, P182E ECM: P0101, P0102, P0103, P0106, P0107, P0108, P0171, P0172, P0174, P0175, P0201, P0202, P0203, P0204, P0205, P0206, P0207, P0208, P0300, P0301, P0302, P0303, P0304, P0305, P0306, P0307, P0308, P0401, P042E		
Variable Bleed Solenoid (VBS)	P2724	Pressure Control (PC) Solenoid E Stuck On (Dynamic)	Primary Offgoing Clutch is exhausted (See Table 10 in Supporting Documents for Exhaust Delay Timers) Primary Oncoming Clutch Pressure Command Status Primary Offgoing Clutch Pressure Command Status Range Shift Status Attained Gear Slip If the above conditions are true increment appropriate Fail 1 Timers Below: fail timer 1 (2-6 shifting with throttle) fail timer 1 (2-6 shifting without throttle) fail timer 1 (3-5 shifting with throttle) fail timer 1 (3-5 shifting without throttle) fail timer 1 (4-5 shifting with throttle) fail timer 1 (4-5 shifting without throttle) fail timer 1 (4-6 shifting with throttle) fail timer 1 (4-6 shifting without throttle)	= TRUE Boolean = Maximum pressurized Clutch exhaust command Initial Clutch Control <= 40 RPM >= 0.299804688 sec >= 0.5 sec >= 0.299804688 sec >= 0.5 sec >= 0.299804688 sec >= 0.5 sec >= 0.299804688 sec >= 0.5 sec				One Trip

21OBDG03C TCM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Malfunction	Enable Conditions	Time Required	Mil Illum.
			<p>If Attained Gear Slip is Less than Above Cal Increment Fail Timers</p> <p>If fail timer is greater than threshold increment corresponding gear fail counter and total fail counter</p> <p>2nd gear fail counter</p> <p>3rd gear fail counter</p> <p>4th gear fail counter</p> <p>total fail counter</p>				<p>Total Fail Time = (Fail 1 + Fail 2) See Enable Timers for Fail Timer 1, and Reference Supporting Table 15 for Fail Timer 2</p> <p>>= 3 sec</p> <p>Fail Counter From 2nd Gear</p> <p>Fail Counter From 3rd Gear</p> <p>Fail Counter From 4th Gear</p> <p>Total Fail Counter</p>	
			<p>TUT Enable temperature >= -6.65625 °C</p> <p>Input Speed Sensor fault = FALSE Boolean</p> <p>Output Speed Sensor fault = FALSE Boolean</p> <p>Command / Attained Gear ≠ 1st Boolean</p> <p>High Side Driver ON = TRUE Boolean</p> <p>output speed limit for TUT >= 100 RPM</p> <p>input speed limit for TUT >= 150 RPM</p> <p>PRNDL state defaulted = FALSE Boolean</p> <p>IMS Fault Pending = FALSE Boolean</p> <p>Service Fast Learn Mode = FALSE Boolean</p> <p>HSD Enabled = TRUE Boolean</p> <p>Disable Conditions:</p> <p>MIL not Illuminated for DTC's:</p> <p>TCM: P0716, P0717, P0722, P0723, P182E</p> <p>ECM: P0101, P0102, P0103, P0106, P0107, P0108, P0171, P0172, P0174, P0175, P0201, P0202, P0203, P0204, P0205, P0206, P0207, P0208, P0300, P0301, P0302, P0303, P0304, P0305, P0306, P0307, P0308, P0401, P042E</p>					
Variable Bleed Solenoid (VBS)	P2724	Pressure Control (PC) Solenoid E Stuck On (Steady State)	Fail Case 1	Case: 5th Gear				One Trip

21OBDG03C TCM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Malfunction	Enable Conditions	Time Required	Mil Illum.
			<p>Max Delta Output Speed Hysteresis</p> <p>Min Delta Output Speed Hysteresis</p> <p>If the Above is True for Time</p> <p>Intrusive test: (C35R clutch exhausted) Gear Ratio Gear Ratio If the above parameters are true</p>	<p>Table Based value Please Refer to Table 22 in rpm/sec supporting documents Table Based value Please Refer to Table 23 in rpm/sec supporting documents Table Based Time Please Refer to Table 17 in Sec supporting documents</p> <p>>= 1.209594727 >= 1.094360352</p>			<p>>= 1.1 Fail Timer (Sec)</p> <p>>= 3 Fail Count in 5th Gear OR Total Fail Counts</p>	
			<p>Fail Case 2 Case: 6th Gear</p> <p>Max Delta Output Speed Hysteresis</p> <p>Min Delta Output Speed Hysteresis</p> <p>If the Above is True for Time</p> <p>Intrusive test: (CB26 clutch exhausted) Gear Ratio Gear Ratio</p>	<p>Table Based value Please Refer to Table 22 in rpm/sec supporting documents Table Based value Please Refer to Table 23 in rpm/sec supporting documents Table Based Time Please Refer to Table 17 in Sec supporting documents</p> <p><= 1.209594727 >= 1.094360352</p>				

210BDG03C TCM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Malfunction	Enable Conditions	Time Required	Mil Illum.
			If the above parameters are true				<div><div>>= 1.1 Fail Timer (Sec)</div><div>>= 3 Fail Count in 6th Gear OR Total Fail Counts</div><div>>= 3</div></div>	
					<div><div>PRNDL State defaulted = FALSE Boolean</div><div>inhibit RVT = FALSE Boolean</div><div>IMS fault pending indication = FALSE Boolean</div><div>output speed >= 0 RPM</div><div>TPS validity flag = TRUE Boolean</div><div>HSD Enabled = TRUE Boolean</div><div>Hydraulic_System_Pressurized = TRUE Boolean</div><div>A OR B</div><div>(A) Output speed enable >= 67 Nm</div><div>(B) Accelerator Pedal enable >= 0.5004883 Nm</div><div>Ignition Voltage Lo >= 8.5996094 Volts</div><div>Ignition Voltage Hi <= 31.999023 Volts</div><div>Engine Speed Lo >= 400 RPM</div><div>Engine Speed Hi <= 7500 RPM</div><div>Engine Speed is within the allowable limits for >= 5 Sec</div><div>if Attained Gear=1st FW >= 5.0003052 Pct</div><div>Accelerator Pedal enable</div><div>if Attained Gear=1st FW Engine Torque Enable >= 5 Nm</div><div>if Attained Gear=1st FW Engine Torque Enable <= 8191.875 Nm</div><div>Transmission Fluid Temperature >= -6.65625 °C</div><div>Input Speed Sensor fault = FALSE Boolean</div><div>Output Speed Sensor fault = FALSE Boolean</div><div>Default Gear Option is not present = TRUE</div></div> <div><div>Disable Conditions:</div><div>MIL not Illuminated for DTC's:</div><div>TCM: P0716, P0717, P0722, P0723, P182E</div><div>ECM: P0101, P0102, P0103, P0106, P0107, P0108, P0171, P0172, P0174, P0175, P0201, P0202, P0203, P0204, P0205, P0206, P0207, P0208, P0300, P0301, P0302, P0303, P0304, P0305, P0306, P0307, P0308, P0401, P042E</div></div>			

21OBDG03C TCM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Malfunction	Enable Conditions	Time Required	Mil Illum.
Variable Bleed Solenoid (VBS)	P2729	Pressure Control (PC) Solenoid E Control Circuit Low (C1234 VBS)	The HWIO reports a low voltage (ground short) error flag	= TRUE Boolean			>= 0.3 Fail Time (Sec) out of 0.375 Sample Time (Sec)	One Trip
					P2729 Status is not Ignition Voltage Ignition Voltage Engine Speed Engine Speed Engine Speed is within the allowable limits for Disable Conditions:	= Test Failed This Key On or Fault Active >= 8.5996094 Volt <= 31.999023 Volt >= 400 RPM <= 7500 RPM >= 5 Sec MIL not Illuminated for DTC's: TCM: None ECM: None		
Variable Bleed Solenoid (VBS)	P2730	Pressure Control (PC) Solenoid E Control Circuit High (C1234 VBS)	The HWIO reports a high voltage (open or power short) error flag	= TRUE Boolean			>= 0.3 Fail Time (Sec) out of 0.375 Sample Time (Sec)	One Trip
					P2730 Status is not Ignition Voltage Ignition Voltage Engine Speed Engine Speed Engine Speed is within the allowable limits for Disable Conditions:	= Test Failed This Key On or Fault Active >= 8.5996094 Volt <= 31.999023 Volt >= 400 RPM <= 7500 RPM >= 5 Sec MIL not Illuminated for DTC's: TCM: None ECM: None		
Variable Bleed Solenoid (VBS)	P2763	Torque Converter Clutch Pressure High	The HWIO reports a low pressure/high voltage (open or power short) error flag	= TRUE Boolean			>= 4.4 Fail Time (Sec) out of 5 Sample Time (Sec)	Two Trips

210BDG03C TCM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Malfunction	Enable Conditions	Time Required	Mil Illum.
					P2763 Status is not Ignition Voltage Ignition Voltage Engine Speed Engine Speed Engine Speed is within the allowable limits for High Side Driver Enabled	= Test Failed This Key On or Fault Active >= 8.5996094 Volt <= 31.999023 Volt >= 400 RPM <= 7500 RPM >= 5 Sec = TRUE Boolean		
				Disable Conditions:	MIL not Illuminated for DTC's:	TCM: P0658, P0659 ECM: None		
Variable Bleed Solenoid (VBS)	P2764	Torque Converter Clutch Pressure Control Solenoid Control Circuit Low	The HWIO reports a high pressure/low voltage (ground short) error flag	= TRUE Boolean			>= 4.4 Fail Time (Sec) out of 5 Sample Time (Sec)	One Trip
					P2764 Status is not Ignition Voltage Ignition Voltage Engine Speed Engine Speed Engine Speed is within the allowable limits for High Side Driver Enabled	= Test Failed This Key On or Fault Active >= 8.5996094 Volt <= 31.999023 Volt >= 400 RPM <= 7500 RPM >= 5 Sec = TRUE Boolean		
				Disable Conditions:	MIL not Illuminated for DTC's:	TCM: P0658, P0659 ECM: None		
Communication	U0073	Controller Area Network Bus Communication Error	CAN Hardware Circuitry Detects a Low Voltage Error	= TRUE Boolean			>= 62 Fail counts (≈ 10 seconds)	One Trip
			Delay timer	>= 0.1125 sec			Out of 70 Sample Counts (≈ 11 seconds)	
					Stabilization delay Ignition Voltage Ignition Voltage Power Mode	>= 3 sec >= 8.5996094 Volt <= 31.999023 Volt = Run		

21OBDG03C TCM Summary Tables

Component/ System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Malfunction	Enable Conditions	Time Required	Mil Illum.
				Disable Conditions:	MIL not Illuminated for DTC's:	TCM: None ECM: None		
Communication	U0100	Lost Communications with ECM (Engine Control Module)	CAN messages from ECM are not received by the TCM	= TRUE Boolean			>= 12 sec	One Trip
					Stabilization delay >= 3 sec Ignition Voltage >= 8.5996094 Volt Ignition Voltage <= 31.999023 Volt Power Mode = Run			
				Disable Conditions:	MIL not Illuminated for DTC's:	TCM: U0073 ECM: None		

TCM - Supporting Documents

Table 1

Axis	0.00	64.00	128.00	192.00	256.00	320.00	384.00	448.00	512.00	N*m
Curve	50.00	50.00	50.00	50.00	50.00	50.00	50.00	50.00	50.00	RPM

Table 2

Axis	-6.67	-6.66	40.00	°C
Curve	409.59	2.00	2.00	Sec

Table 3

Axis	-6.67	-6.66	40.00	°C
Curve	409.59	4.00	4.00	Sec

Table 4

Axis	-6.67	-6.66	40.00	°C
Curve	409.59	2.00	2.00	Sec

Table 5

Axis	-6.67	-6.66	40.00	°C
Curve	409.59	3.00	3.00	Sec

Table 6

Axis	-6.67	-6.66	40.00	80.00	120.00	°C
Curve	409.00	3.60	1.60	1.40	1.40	Sec

Table 7

Axis	-6.67	-6.66	40.00	80.00	120.00	°C
Curve	409.00	3.40	1.40	1.30	1.20	Sec

Table 8

Axis	-6.67	-6.66	40.00	80.00	120.00	°C
Curve	409.00	3.60	1.60	1.50	1.40	Sec

Table 9

Axis	-6.67	-6.66	40.00	80.00	120.00	°C
Curve	409.00	3.30	1.30	1.20	1.10	Sec

Table 10

Axis	-6.67	-6.66	40.00	80.00	120.00	°C
Curve	3.03	1.86	1.00	0.75	0.58	Sec

Table 11

Axis	-6.67	-6.66	40.00	80.00	120.00	°C
Curve	1.72	1.11	0.60	0.36	0.22	Sec

Table 12

Axis	-6.67	-6.66	40.00	80.00	120.00	°C
Curve	2.12	1.39	0.84	0.64	0.33	Sec

Table 13

Axis	-6.67	-6.66	40.00	80.00	120.00	°C
Curve	2.51	0.95	0.50	0.29	0.13	Sec

21OBDG03C TCM Supporting Tables

Table 14

Axis	-6.67	-6.66	40.00	80.00	120.00	°C
Curve	2.97	0.82	0.47	0.20	0.13	Sec

Table 15

Axis	-40.00	-30.00	-20.00	-10.00	0.00	10.00	20.00	30.00	40.00	°C
Curve	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	Sec

Table 16

Axis	-6.67	-6.66	40.00	°C
Curve	409.59	2.50	2.50	Sec

Table 17

Axis	-6.67	-6.66	40.00	°C
Curve	0.40	0.35	0.30	Sec

Table 18

Axis	-40.10	-40.00	-20.00	0.00	30.00	60.00	100.00	149.00	149.10	°C
Curve	256.00	50.00	45.00	40.00	34.00	25.00	20.00	20.00	256.00	°C

Table 19

Axis	-40.10	-40.00	-20.00	0.00	30.00	60.00	100.00	149.00	149.10	°C
Curve	256.00	50.00	45.00	40.00	34.00	25.00	20.00	20.00	256.00	°C

Table 20

Axis	-40.10	-40.00	-20.00	0.00	30.00	60.00	100.00	149.00	149.10	°C
Curve	256.00	10.00	8.00	8.00	8.00	8.00	8.00	8.00	256.00	°C

Table 21

Axis	-40.00	-20.00	40.00	°C
Curve	5.00	3.00	1.00	Sec

Table 22

Axis	-6.67	-6.66	40.00	°C
Curve	8191.75	8191.75	8191.75	RPM/Sec

Table 23

Axis	-6.67	-6.66	40.00	°C
Curve	8191.75	8191.75	8191.75	RPM/Sec

21OBDG03C CGM Summary Tables

<div> <div>OBD GROUP: 3C</div> <div>DIAGNOSTIC SUMMARY TABLES -- CGM</div> <div>TEST GROUP: MGMXT02.5200</div> <div>EMISSIONS STDS: CAL--ULEV50, FED--BIN50</div> </div>								
Component/System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Ignition Switch Run/Start Position Circuit Stuck Low Detected	B2B0D	This monitoring checks if the hardwired Run/Crank analog signal matches the value of the Run/Crank Terminal Status message received from the ECM. This fault is set if the two signals do not match where the hardwired signal is set to INACTIVE while the serial data signal is set to ACTIVE.	Run/Crank Analog Signal State AND Run/Crank Terminal Status AND X OUT OF Y	<= 1.5V = ACTIVE = 80 = 100	ECM Timed Out	= FALSE	0.8 [Sec]	Type B 2 Trips
Ignition Switch Run/Start Position Circuit Stuck High Detected	B2B0E	This monitoring checks if the hardwired Run/Crank analog signal matches the value of the Run/Crank Terminal Status message received from the ECM. This fault is set if the two signals do not match where the hardwired signal is set to ACTIVE while the serial data signal is set to INACTIVE.	Run/Crank Analog Signal State AND Run/Crank Terminal Status AND X OUT OF Y	>=5.5V = INACTIVE = 80 = 100	ECM Timed Out	= FALSE	0.8 [Sec]	Type B 2 Trips
Bus-Off detected on the HS Primary bus (Bus A)	U2413	This fault is set if the HS Primary bus enters the Bus-Off state	Bus Off Event Occurred on HS Primary	= TRUE	Run/Crank Analog Signal State OR Comm Enable Hardwire Line AND System Voltage	>= 5.5V >= 4.5V > 5.5V	25[usec] for pass 10[usec] for fail	Type B 2 Trips
Internal memory failure on the CGM Detected	B2B12	This monitoring checks whether a double bit ECC error has occurred in code flash or RAM. This fault is set if an ECC error has occurred.	ECC Error Detected	= TRUE	Guarded Read Flag	= FALSE	50ms	Type B 2 Trips

21OBDG03C CGM Summary Tables

DIAGNOSTIC SUMMARY TABLES -- CGM								
OBD GROUP: 3C		TEST GROUP: MGMXT02.5200			EMISSIONS STDS: CAL--ULEV50, FED--BIN50			
Component/System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
		This monitoring checks and sets a fault if a defect in the data flash (NVM) is detected.	NVM Fault Detected	= TRUE	N/A	N/A	1.5 us	
Microcontroller Performance Failure Detected	B2B13	This monitoring shall check whether the ALU in the microcontroller is functioning correctly by running an algorithm and checking the results against an expected value. If the result is incorrect the fault shall be set.	Test Result 1 AND Test Result 2	!= Expected Result 1 != Expected Result 2	N/A	N/A	1.5 us	Type B 2 Trips
		This monitoring shall check whether any clock monitoring interrupts have occurred. If any clock monitoring interrupts have occurred this fault shall be set.	Clock Monitoring Interrupt Occurred	= TRUE	N/A	N/A		
Loss of Communication with the ECM Detected	U18D5	This monitoring shall check a supervised message from the ECM to check the communication status. If the CGM has not received the supervised message from the ECM for 2.5x of its periodic rate, a secondary counter shall be enabled and decremented. When the secondary timer reaches zero, this fault shall be set if the message still has not been received.	Supervised Message has not been received in 62.5[ms] THEN Secondary Timer (4 sec)	= TRUE = 0 sec	Run/Crank Analog Signal State AND System Voltage	>= 5.5V >= 7V	4.0625 [sec]	Type B 2 Trips

21OBDG03C CGM Summary Tables

<div> <div>OBD GROUP: 3C</div> <div>DIAGNOSTIC SUMMARY TABLES -- CGM</div> <div>TEST GROUP: MGMXT02.5200</div> <div>EMISSIONS STDS: CAL--ULEV50, FED--BIN50</div> </div>								
Component/System	Fault Code	Monitor Strategy Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Loss of Communication with the TCM Detected	U18D7	This monitoring shall check a supervised message from the TCM to check the communication status. If the CGM has not received the supervised message from the TCM for 2.5x of its periodic rate, a secondary counter shall be enabled and decremented. When the secondary timer reaches zero, this fault shall be set if the message still has not been received.	Supervised Message has not been received in 2.5[sec] THEN Secondary Timer (4 sec)	= TRUE = 0 sec	Run/Crank Analog Signal State AND System Voltage	= ACTIVE >= 7V	6.5 [sec]	Type B 2 Trips